


IEV Postmaster Light

Basic Operation Manual

Safety Instructions

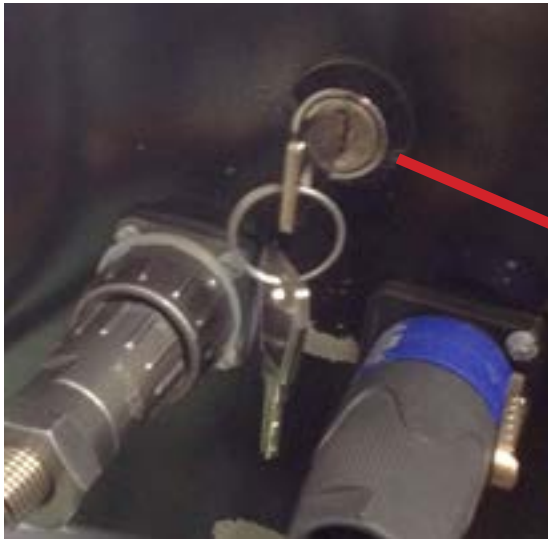

Ignition

Ignition key on the back side of battery box.

Turn the key in the clockwise direction to turn on the vehicle and anti-clock wise direction to turn off.



Charging

Remove blue marked plug on the right side of ignition key and plug charger in the same outlet.

1. To remove plug press silver buttons on both sides of plug backward and slightly turn the plug in reverse clock-wise direction and release the plug.

2. To plug the charger press chargers plug into outlet and let it slightly turn into clock-wise direction by itself while you are pushing plug into outlet.

Repeat step 1. and 2. when disconnecting the charger and connecting bicycle system to the battery.



Adjustment of steering bar

To adjust position of steering bar pres grey button up and pull out the black handle.

Steering is now free to be adjusted.





Not correct position of adjustment lock.
Lock must be pressed all the way toward steering bar until it clicks.

!!!!!!! Important !!!!!!!

Please make sure that handle bar
clicks properly in to lock position
after adjustment of steering bar has
been completed.



Correct position of adjustment lock.
Lock is pressed all the way toward steering
bar until it clicks.



Parking Break

To apply parking break press break handle in the same manner as when you use break when driving and then press silver cylinder downward.

To release parking break, press again break handle in the same manner as when you use break when driving and silver cylinder will pop up automatically and release hand break.



6 Shimano gear indicator

When you start driving start always from lower gear, 1st or 2nd gear and then change gear accordingly.

Remember to change into lower gear before stopping the vehicle because external gears can only be changed while pedaling !!!!!

Walking speed gas handle

Use walking speed gas handle in the first 5 seconds of driving to accomplish easier start. Press walking gas handle and start pedaling, then release gas handle after 5 seconds.

Don't use walking gas function longer than 5 sec as it would discharge battery too much and diminish driving range of the vehicle.