



REV.:3

- 1 MULTIPLE CONNECTORS
- 2 -
- 3 OIL LEVEL SWITCH
- 4 FUEL LEVEL SENSOR
- 5 INSTRUMENT PANEL (MATRIX)
- 6 IMMOBILIZER ANTENNA
- 7 IGNITION SWITCH
- 8 HORN
- 9 LH DIP SWITCH
- 10 REAR STOP SWITCH (ON LH DIMMER SWITCH)
- 11 RH DIP SWITCH
- 12 FRONT STOP SWITCH (ON RH DIMMER SWITCH)
- 13 LH REAR DIRECTION INDICATOR
- 14 TAIL LIGHT
- 15 DUAL PARKING/STOP BULB
- 16 RH REAR DIRECTION INDICATOR

- 17 NO. PLATE LIGHT (ONLY FOR USA/CH VERSIONS)
- 18 GENERATOR
- 19 VOLTAGE REGULATOR
- 20 INJECTION RELAY
- 21 STARTER RELAY
- 22 STARTER MOTOR
- 23 BATTERY
- 24 FUSE
- 25 SPARK PLUG
- 26 HT COIL
- 27 FUEL PUMP
- 28 AIR INJECTOR
- 29 FUEL INJECTOR
- 30 OIL PUMP
- 31 TEMPERATURE SENSOR
- 32 PICK-UP
- 33 THROTTLE SENSOR
- 34 PICK-UP
- 35 FUSES 5

- 33 THROTTLE SENSOR
- 34 SERIAL CONNECTOR (DIAG)
- 35 PRESSURE SENSOR (or built-in in ECU)
- 36 ECU
- 37 SPEED SENSOR
- 38 RH FRONT DIRECTION INDICATOR
- 39 FRONT PARKING LIGHTS (ONLY FOR USA/CH VERSIONS)
- 40 LOW BEAM
- 41 HIGH BEAM
- 42 LH FRONT DIRECTION INDICATOR
- 43 HEADLIGHT
- 44 DIODE

- CABLE COLOURS
- Ar Orange
 - Az Light blue
 - B Blue
 - Bi White
 - G Yellow
 - Gr Grey
 - M Brown
 - N Black
 - R Red
 - V Green
 - Vi Violet
 - Ro Pink

- 45 -
- 46 -
- 47 -
- 48 -
- 49 -