



## FUNCTION INTRODUCTION


1. Both remote and main unit can alarm you can use the remote to monitor the motorcycle at any time.
2. Engine start by remote: you cannot start the engine without the remote. When you stop the motorcycle and turn off ACC, the system will lock automatically, in case that the user forget to lock the system and lose the motorcycle.
3. Actions like destroying ACC, connecting wires in illegal way, short circuit will cause the system to alarm and the engine doesn't work.
4. when wires connecting to batteries and siren are cut---the remote will alarm even when wires connected again, and the engine doesn't work.
5. Set two alarm modes: short press  is phonic alarm mode, long press  is mute alarm mode.
6. Change into buzzer indication function: the user can choose to inactivate this function.
7. Lock automatically in 3 minutes after you stop the engine: the user can also choose to inactivate this function.

## OPERATION INSTRUCTION



(the left remote is two-way, there're 3 LEDs on the screen: RED, BLUE and YELLOW; the right remote is one-way. )

### **SHORT PRESS TO ENTER PHONIC ALARM MODE:**

The siren sounds once and the lights flash once . No matter what the motorcycle stop or is in driving, the engine will lock , enter into arming state, the motorcycle not start. In the meantime the red LED of remote control will light, detect shock in the late 2s ,if the motorcycle is triggered the siren and the remote will both alarm. If you don't turn off ACC and press , the siren and the remote will both sound 5 times to remind you to take away the key from ACC.

### **LONG PRESS TO ENTER MUTE ALARM MODE:**

Siren won't sound, only the turning lights flash once to enter into mute alarm mode. Other operation is same as the phonic alarm mode. This mode will not disturb others when you stop the motorcycle in your garage at night. If the motorcycle is triggered, turning lights will flash but the system won't alarm, your two-way remote will alarm. If the remote is beyond coverage, the alarm system will transfer to phonic arlarm mode. (you can set this mode into mute alarm but phonic alert)

### **SHORT PRESS TO DISARM PHONIC ALARM MODE:**





Siren will sound twice and turning lights flash twice,which indicate to disarm. The blue LED will light at the same time but engine not start.

### **LONG PRESS TO DISARM MUTE ALARM MODE:**




Siren won't sound, turning lights flash twice, which indicate to disarm. The blue LED will light at the same time but engine not start. This mode will not disturb others when you use the motorcycle at night.




## UNLOCK:

- (1) In the disarming state, use the key to turn on ACC, press  and turn up engine, Only you hear the lock warning tone you can start the engine when you a reminder. If you use the key to start the engine you must press .
- (2) Turn off ACC, press  or , the engine will be locked again.
- (3) When ACC is turned off, the button can be used for turning light: short press the light is on, short press again the light is off. Turning lights will be off automatically after 5 seconds. This function can be used for lighting at night or search motorcycle.

## START ENGINE REMOTELY

- (1) In the disarming state, press  twice, strat engine remotely. If fail please repeat the above operation .
- (2) In the start engine remotely state, if make the engine flameout, you must press .
- (3) In the start engine remotely state, if being robbed in driving , press  in available distance, the engine will lock and immobilize, the system also alarm

## DISPLAY REMOTE CONTROL'S BATTERY POWER:

Long press  2s at least and release, the yellow LED will flash, 5 flashes indicates the power is full, 1 flash indicates the power nearly run out , please replace new battery at once.

Note:



Short press--- time of pressing is shorter than 1 second( button of the remote sounds "du")

Long press--- time of pressing is longer than 2 seconds( button of the remote sounds "du,du")



## USER PERSONALIZED SETTINGS

(The following function will be effective only when ACC is turned on.)



### ACTIVATE "CHANGE INTO BUZZER" FUNCTION:

Keep pressing  and press  3 times then release both buttons, turning lights will flash 3 times, which indicates the function is activated.



### INACTIVATE "CHANGE INTO BUZZER" FUNCTION:

Keep pressing  and press  4 times then release both buttons, turning lights will flash 4 times, which indicates the function is inactivated.



### ACTIVATE "LOCK AUTOMATICALLY IN 3 MINUTES AFTER YOU STOP THE ENGINE" FUNCTION

Keep pressing  and press  5 times then release both buttons, turning lights will flash 5 times, which indicates the function is activated.



### INACTIVATE "LOCK AUTOMATICALLY IN 3 MINUTES AFTER YOU STOP THE ENGINE" FUNCTION

Keep pressing  and press  6 times then release both buttons, turning lights will flash 6 times, which indicates the function is inactivated.



**ACTIVATE "MUTE ALARM MODE" FUNCTION: (If the motorcycle is triggered, turning lights will flash but the system won't alarm, your two-way remote will alarm)**

Keep pressing  and press  7 times then release both buttons, turning lights will flash 7 times, which indicates the function is activated.



**INACTIVATE "MUTE ALARM MODE" FUNCTION:**

Keep pressing  and press  8 times then release both buttons, turning lights will flash 8 times, which indicates the function is deactivated.



**ACTIVATE "ALARM AUTOMATICALLY IN 60 SECONDS" FUNCTION: ( This function is used in the disarming state, use the key to turn on ACC or turn on ACC in illegal, the motorcycle and the remote control both will alarm after 60s)**

Keep pressing  and short press  then release both buttons, turning lights will flash once, which indicates the function is activated.






**INACTIVATE "ALARM AUTOMATICALLY IN 60 SECONDS" FUNCTION:**

Keep pressing  and press  twice then release both buttons, turning lights will flash twice, which indicates the function is inactivated. .


**RESUME TO FACTORY DEFAULTED SET: ( FACTORY DEFAULTED SET : "CHANGE INTO BUZZER" FUNCTION IS ACTIVATED, "ALARM AUTOMATICALLY IN 60 SECONDS" FUNCTION IS ACTIVATED, "LOCK AUTOMATICALLY IN 3 MINUTES AFTER YOU STOP THE ENGINE" FUNCTION IS ACTIVATED, "MUTE ALARM MODE" FUNCTION IS ACTIVATED, SHOCK SENSITIVITY IS RESUMED TO FACTORY DEFAULTED SET )**

Keep pressing  and press  15 times then release both buttons, turning lights will flash 4 times, which indicates the function is activated. .

**SENSITIVITY ADJUSTABLE OF PHONIC ALARM MODE:**

1. Turn on ACC
2. Keep pressing 
3. Press  10 times then release both buttons, turning lights will flash twice and enter adjustable mode.
4. Press  ( rising) or short press  (reducing) to adjust the shock sensitivity, press once will adjust one stair the turning light flash once at the same time. If reach upper limit or lower limit , the turning lights will flash twice.
5. Trigger your motorcycle to see if the sensitivity is suitable for you, if not, return to step 4 to adjust again.
6. Long press  to save the setting.

**SENSITIVITY ADJUSTABLE OF MUTE ALARM MODE:**

Same action as step 12456 of adjusting sensitivity of phonic alarm mode, but step 3 will be changed as: Press  11 times then release both buttons, turning lights will flash 3 times and enter into adjusting mode.

# Installing Instruction

