

HERO

Download the
User Manual at
gopro.com/support

When using your GoPro camera as part of your active lifestyle, always be aware of your surroundings to avoid injury to yourself and others, and to prevent damage to your camera.



Before using your GoPro camera, please read carefully all the safety precautions in the Important Product + Safety Information Guide included with your camera.

/ Hello

Congratulations on your new HERO camera. This Quick Start Guide will show you the basics of capturing life's most incredible moments with your GoPro.

To learn more, download the User Manual at gopro.com/support.

JOIN THE GOPRO MOVEMENT



facebook.com/GoPro



youtube.com/GoPro



twitter.com/GoPro




instagram.com/GoPro

/ Getting Started

STEP 1

Unlatch and open the backdoor.
(Camera cannot be removed from housing.)

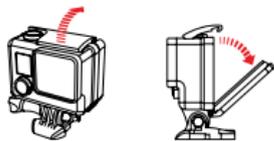


STEP 2

Insert a microSD card.
(Class 10 or UHS-1 required, sold separately.)



STEP 3

Charge the battery using the included USB cable.
(Battery cannot be removed from camera.)

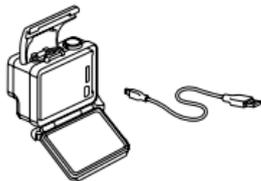

STEP 4

Close and latch the backdoor.




/ The Basics

Shutter/Select Button

Camera Status Screen

Power/Mode Button

Camera Status Light

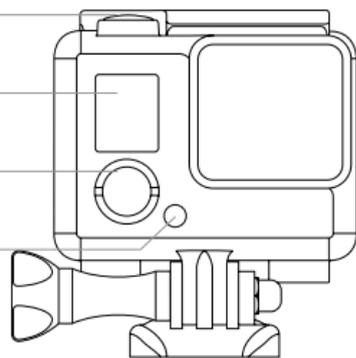

POWERING CAMERA ON AND OFF

To Power On:

Press the **Power/Mode** button.

To Power Off:

Press and hold the **Power/Mode** button for two seconds.

/ Selecting Camera Modes

Turn the camera on and repeatedly press the **Power/Mode** button to cycle through camera modes.



VIDEO

Record video.



PHOTO

Capture a single photo.



BURST

Capture a burst of 10 photos in 2 seconds (5 fps).



TIME LAPSE

Capture a series of photos at half-second intervals.




SETTINGS

Adjust camera settings.

/ Capturing Video and Photos

Press the **Power/Mode** button repeatedly to cycle to the mode you want, then press the **Shutter/Select** button to start/stop recording or take a photo.

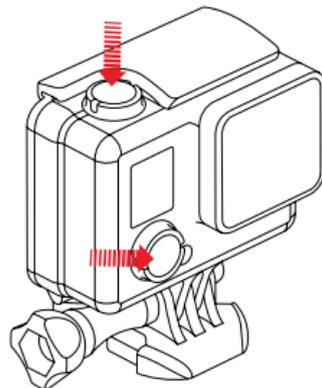

QUIKCAPTURE

When the camera is off and QuikCapture is enabled, you can turn the camera on and immediately begin capturing video or Time Lapse photos just by pressing the **Shutter/Select** button. Press once for video, press and hold for two seconds for Time Lapse photos. Press


again to stop recording and power off the camera.

You can change the QuikCapture setting in Setup mode. For details, see the User Manual at gopro.com/support.

/ Adjusting Camera Settings

1. Press the **Power/Mode** button to cycle to the Settings mode.
2. Press the **Shutter/Select** button to enter the Settings menu.
3. Press the **Power/Mode** button to cycle through the options.
4. Press the **Shutter/Select** button to select your desired option.

To learn more about settings, download the User Manual at gopro.com/support.

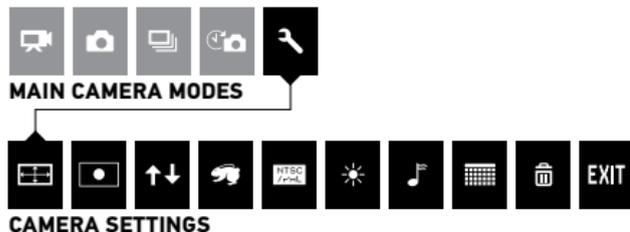


/ Mounting Your Camera

Mount your GoPro to helmets, gear and more with the included Curved + Flat Adhesive Mounts and hardware.


APPLYING + REMOVING ADHESIVE MOUNTS

Apply adhesive mounts to clean, smooth surfaces at room temperature only, at least 24 hours in advance of use. To remove, heat with a hair dryer then peel off mount.

FLAT SURFACE MOUNTING

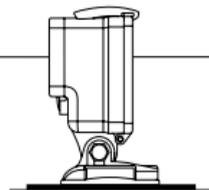

CURVED SURFACE MOUNTING

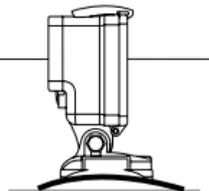

To learn more about mounting your camera, visit gopro.com/support.

/ Housing Backdoors

Your HERO camera comes with two backdoors, each designed for different uses and environments.



STANDARD BACKDOOR

Provides waterproof protection to 131' (40m).
Use when shooting under water or in wet, damp or dirty conditions.



SKELETON BACKDOOR


Not waterproof—use in dry, dirt-free environments only. Enables enhanced audio capture during low-speed activities.

/ Swapping Backdoors




STEP 1

Open the housing so the backdoor hangs downward.

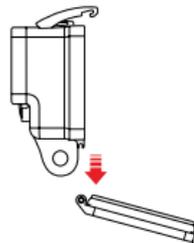


STEP 2

Pull down on the backdoor until it snaps free from the hinge.

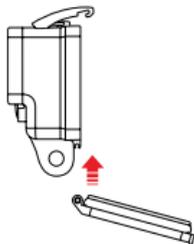

STEP 3

Align the new backdoor with the hinge.

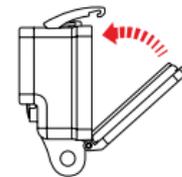


STEP 4

Push up on the backdoor until it clicks into place.

/ Playing Back and Sharing Content

Use your computer to play back and share videos and photos.

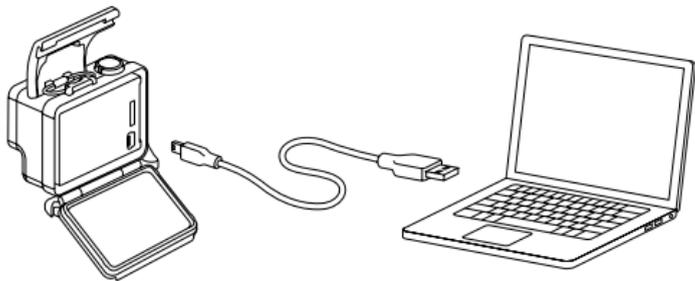

Connect your camera to your computer with the included USB cable to import content for playback and sharing.

For help accessing your GoPro content, download the latest GoPro software at gopro.com/getstarted.

/ Help and Resources

DOWNLOAD THE USER MANUAL

To learn more about your HERO camera, download the User Manual at gopro.com/support.

CAMERA SOFTWARE UPDATES

To get the latest features and best performance from your GoPro, make sure you're using the most current camera software. You can update your camera via GoPro software. For more info, visit gopro.com/getstarted.

TUTORIAL VIDEOS

Watch how-to tutorials and get pro tips + tricks on making the most of your GoPro products at gopro.com/getstarted.

CUSTOMER SUPPORT

Need help? Want more info? Find answers to commonly asked questions and contact Customer Support at gopro.com/support.

REGULATORY INFORMATION

To see the complete list of country certifications, refer to the Important Product + Safety Information Guide included with your camera.

