



---

# WORKSHOP MANUAL

---

633416

---



**Vespa LX 50**

---



# WORKSHOP MANUAL

## Vespa LX 50

The descriptions and illustrations given in this publication are not binding. While the basic specifications as described and illustrated in this booklet remain unchanged, PIAGGIO-GILERA reserves the right, at any time and without being required to update this publication beforehand, to make any changes to components, parts or accessories, which it considers necessary to improve the product or which are required for manufacturing or construction reasons.

Not all versions/models shown in this publication are available in all countries. The availability of single models should be checked at the official Piaggio sales network.

"© Copyright 2008 - PIAGGIO & C. S.p.A. Pontedera. All rights reserved. Reproduction of this publication in whole or in part is prohibited."

PIAGGIO & C. S.p.A. - After-Sales

V.le Rinaldo Piaggio, 23 - 56025 PONTEDERA (Pi)

---

---

# WORKSHOP MANUAL

## Vespa LX 50

This workshop manual has been drawn up by Piaggio & C. Spa to be used by the workshops of Piaggio-Gilera dealers. This manual is addressed to Piaggio service mechanics who are supposed to have a basic knowledge of mechanics principles and of vehicle fixing techniques and procedures. Any important changes made to the vehicles or to specific fixing operations will be promptly reported by updates to this manual. Nevertheless, no fixing work can be satisfactory if the necessary equipment and tools are unavailable. It is therefore advisable to read the sections of this manual relating to specific tools, along with the specific tool catalogue.

**N.B.** Provides key information to make the procedure easier to understand and carry out.

**CAUTION** Refers to specific procedures to carry out for preventing damages to the vehicle.

**WARNING** Refers to specific procedures to carry out to prevent injuries to the repairer.



**Personal safety** Failure to completely observe these instructions will result in serious risk of personal injury.



**Safeguarding the environment** Sections marked with this symbol indicate the correct use of the vehicle to prevent damaging the environment.



**Vehicle intactness** The incomplete or non-observance of these regulations leads to the risk of serious damage to the vehicle and sometimes even the invalidity of the guarantee.

---



## INDEX OF TOPICS

CHARACTERISTICS

CHAR

TOOLING

TOOL

MAINTENANCE

MAIN

TROUBLESHOOTING

TROUBL

ELECTRICAL SYSTEM

ELE SYS

ENGINE FROM VEHICLE

ENG VE

ENGINE

ENG

SUSPENSIONS

SUSP

BRAKING SYSTEM

BRAK SYS

CHASSIS

CHAS

PRE-DELIVERY

PRE DE

TIME

TIME

## INDEX OF TOPICS

CHARACTERISTICS

CHAR

---

## **Rules**

This section describes general safety rules for any maintenance operations performed on the vehicle.

---

### **Safety rules**

- If work can only be done on the vehicle with the engine running, make sure that the premises are well-ventilated, using special extractors if necessary; never let the engine run in an enclosed area. Exhaust fumes are toxic.
  - The battery electrolyte contains sulphuric acid. Protect your eyes, clothes and skin. Sulphuric acid is highly corrosive; in the event of contact with your eyes or skin, rinse thoroughly with abundant water and seek immediate medical attention.
  - The battery produces hydrogen, a gas that can be highly explosive. Do not smoke and avoid sparks or flames near the battery, especially when charging it.
  - Fuel is highly flammable and it can be explosive given some conditions. Do not smoke in the working area, and avoid naked flames or sparks.
  - Clean the brake pads in a well-ventilated area, directing the jet of compressed air in such a way that you do not breathe in the dust produced by the wear of the friction material. Even though the latter contains no asbestos, inhaling dust is harmful.
- 


### **Maintenance rules**

- Use original PIAGGIO spare parts and lubricants recommended by the Manufacturer. Non-original or non-conforming spare parts may damage the vehicle.
  - Use only the appropriate tools designed for this vehicle.
  - Always use new gaskets, sealing rings and split pins upon refitting.
  - After removal, clean the components using non-flammable or low flash-point solvents. Lubricate all the work surfaces, except tapered couplings, before refitting these parts.
  - After refitting, make sure that all the components have been installed correctly and work properly.
  - For removal, overhaul and refit operations use only tools with metric measures. Metric bolts, nuts and screws are not interchangeable with coupling members with English measurement. Using unsuitable coupling members and tools may damage the scooter.
  - When carrying out maintenance operations on the vehicle that involve the electrical system, make sure the electric connections have been made properly, particularly the ground and battery connections.
-

## Vehicle identification

### VEHICLE IDENTIFICATION

| Specification  | Desc./Quantity   |
|----------------|------------------|
| Chassis prefix | ZAPC38101 ÷ 1001 |
| Engine prefix  | C381M ÷ 1001     |

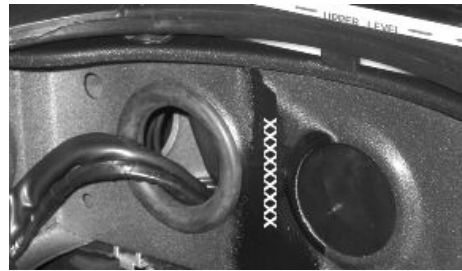


## Dimensions and mass

### WEIGHT AND DIMENSIONS

| Specification  | Desc./Quantity |
|----------------|----------------|
| Dry weight     | 96±4 Kg        |
| Maximum height | 1140 mm        |
| Wheelbase      | 1290 mm        |
| Length         | 1755 mm        |
| Width          | 740 mm         |



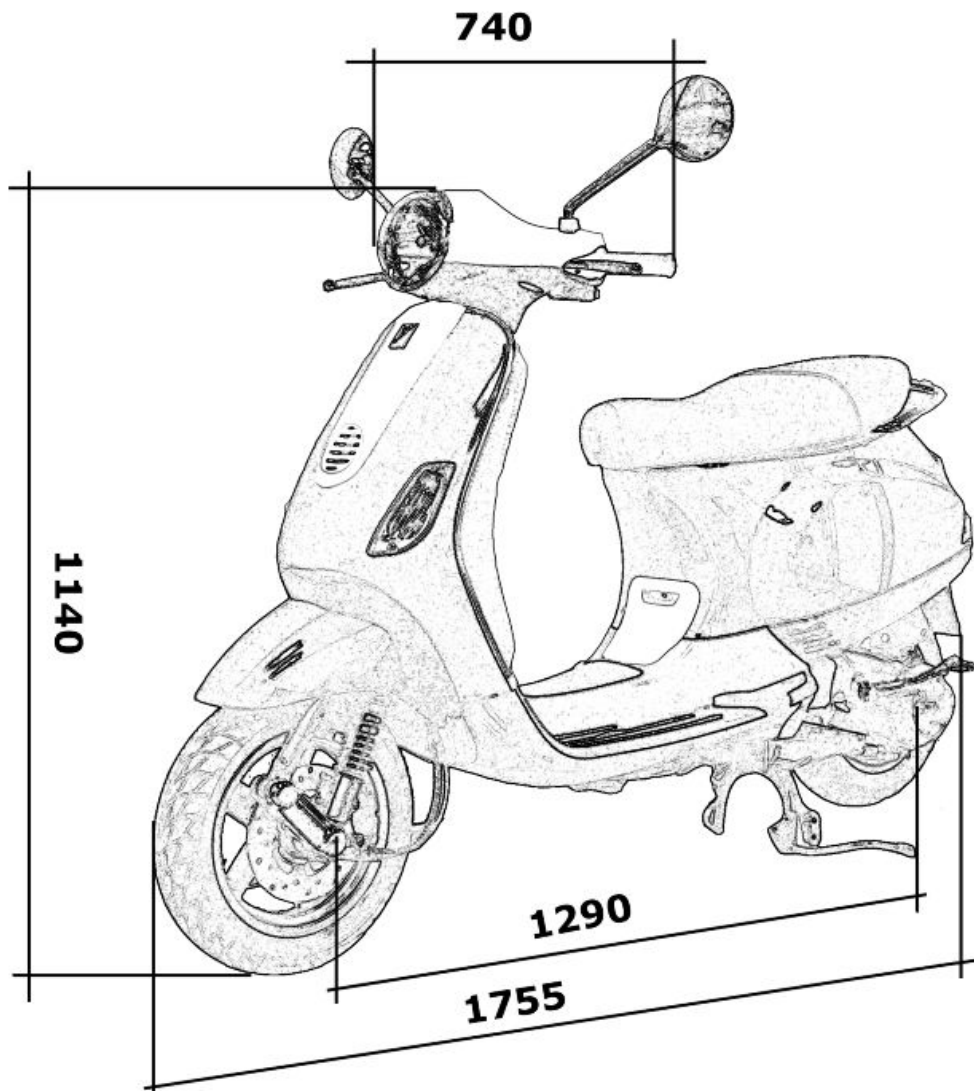

**Engine**

**ENGINE**

| Specification     | Desc./Quantity  |
|-------------------|---|
| Engine type       | Two-stroke, single cylinder Piaggio Hi-PER2   |
| Bore x stroke     | 40 X 39.3 mm  |
| Cubic capacity    | 49.40 cc  |
| Compression ratio | 10,3 :1   |
| Carburettor       | DELL'ORTO PHVA 17.5   |
| CO adjustment     | 3.5% ± 0.5  |
| Engine idle speed | 1800 to 2000 r.p.m.   |
| Air filter        | Sponge, soaked in a mixture (50% SELENIA Air Filter Oil and 50% unleaded petrol).   |
| Starting system   | electric starter/kick starter   |
| Lubrication       | With blend and variable oil variable according to the engine revolutions and the throttle valve opening by means of a pump controlled by the driving shaft with toothed belt. |

| Specification  | Desc./Quantity  |
|----------------|---|
| Fuel supply    | Gravity feed, with unleaded petrol (with a minimum octane rating of 95) with carburettor. |
| Cooling system | forced coolant circulation system   |

## Transmission

### TRANSMISSION

| Specification | Desc./Quantity   |
|---------------|--|
| Transmission  | With automatic expandable pulley variator, torque server, V-belt, automatic clutch, gear reduction unit. |

## Capacities

### CAPACITY

| Specification      | Desc./Quantity                    |
|--------------------|-----------------------------------|
| Rear hub oil       | Quantity: approx. 85 cc           |
| oil mixer tank     | Plastic, capacity ~ 1.2 l         |
| Fuel tank capacity | ~ 8.5 l (2 l of which is reserve) |

## Electrical system

### ELECTRICAL SYSTEM

| Specification                 | Desc./Quantity   |
|-------------------------------|--|
| Type of ignition              | Capacitive discharge type electronic ignition, with incorporated high voltage coil |
| Ignition advance (before TDC) | Fixed $17^{\circ} \pm 1$   |
| Recommended spark plug        | CHAMPION RN2C  |
| Battery                       | 12V-4Ah  |
| Main fuse                     | 7.5 A  |
| Generator                     | In alternate current with three output sections                                    |

## Frame and suspensions

### CHASSIS AND SUSPENSIONS

| Specification                           | Desc./Quantity  |
|---|---|
| Type                                    | Unitised body made of stamped plate   |
| Front suspension                        | Single arm suspension with swinging arm articulated to the steering tube. Hydraulic double-acting shock absorber and coaxial spring |
| Front suspension stroke                 | 70 mm   |
| Trail (suspension rebounded/compressed) | 71/68 mm  |
| Rear suspension                         | Single hydraulic double-acting shock absorber, helical coaxial spring. Chassis to engine support with swinging arm.                 |
| Rear suspension travel:                 | 83.5 mm   |

## Brakes

### BRAKES

| Specification | Desc./Quantity  |
|---------------|---|
| Front brake   | Disc brake ( $\varnothing$ 200 mm) with hydraulic control (lever on the far right of the handlebar) and fixed calliper. |
| Rear brake    | $\varnothing$ 110 mm drum brake   |

## Wheels and tyres

### WHEELS AND TYRES

| Specification                | Desc./Quantity |
|------------------------------|----------------|
| Front tyre size              | 110/70"-11"    |
| Rear tyre size               | 120/70-10"     |
| Front tyre pressure          | 1.6 bar        |
| Rear tyre pressure:          | 2 bar          |
| Light alloy rims (Front rim) | 2.50" x 11"    |
| Light alloy rims (rear rim)  | 3.00 x 10"     |


**N.B.**

**CHECK AND ADJUST TYRE PRESSURE WITH TYRES AT AMBIENT TEMPERATURE. ADJUST PRESSURE ACCORDING TO THE WEIGHT OF RIDER AND ACCESSORIES.**

## Secondary air

Follow these steps to clean the sponge filters of the secondary air system:

- 1) Remove the snap-on plastic cover (1) on the transmission cover using a small screwdriver as a lever on the retaining tongues in order to insert one of the three slots found on that cap.
- 2) Wash the polyurethane sponge with water and soap, dry all components with compressed air and refit to place. Refit the intake cap respecting the angle reference.
- 3) Undo the two fixing screws (2) on the aluminium cover of the secondary air housing in order to reach the polyurethane sponge inside that housing; clean as indicated in point 2) and refit all elements after checking the steel tab is not deformed and/or does not guarantee correct tightness at its fitting; replace if necessary.

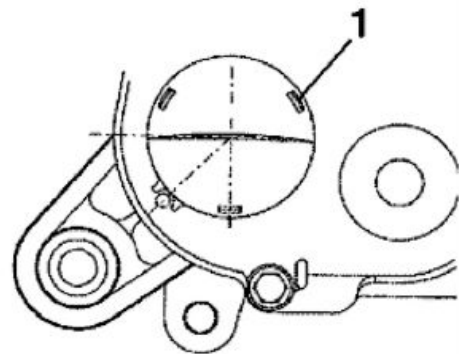

**N.B.**

**UPON REFITTING, MAKE SURE TO CORRECTLY FIT THE TAB IN ITS FITTING ON THE TWO PLASTIC AND ALUMINIUM COVERS.**

#### CAUTION

**WHILE CARRYING OUT OPERATION 3), ALWAYS CHECK THE TWO RUBBER COUPLINGS (3) ON ONE END OF THE SECONDARY AIR PIPE FOR CORRECT TIGHTNESS AND CONTINUITY; IF NECESSARY, REPLACE THEM AND USE NEW CLAMPS TO FIX THEM.**

## Carburettor

### 50cc Version

#### Dell'Orto

##### DELLORTO CARBURETTOR

| Specification                      | Desc./Quantity |
|------------------------------------|----------------|
| Type                               | PHVA 17.5 RD   |
| Diffuser diameter                  | Ø 17.5         |
| Regulation reference number        | 8423           |
| Maximum nozzle:                    | 53             |
| Maximum air nozzle (on the body):  | Ø 1.5          |
| Tapered pin stamped code:          | A22            |
| Pin position (notches from above): | 1              |
| Diffuser:                          | 209 HA         |
| Minimum nozzle:                    | 32             |
| Minimum air nozzle (on the body):  | Free           |
| Initial minimum mix screw opening: | 1 1/2          |
| Starter jet                        | 50             |
| Starter air nozzle (on the body):  | Ø 1.5          |
| Stroke of starter pin:             | 11 mm          |
| Gasoline inlet hole                | Ø 1.5          |

## Tightening Torques

### FRONT BRAKE

| Name                                 | Torque in Nm |
|--------------------------------------|--------------|
| Brake fluid pump-hose fitting        | 8 ÷ 12       |
| Brake fluid pipe-calliper fitting    | 20 ÷ 25      |
| Screw tightening calliper to support | 20 ÷ 25      |
| Brake disc screw                     | 5 ÷ 6.5      |
| Oil bleed valve (on the calliper)    | 10 ÷ 12      |
| Handlebar pump                       | 7 ÷ 10       |

### FRONT SUSPENSION

| Name                               | Torque in Nm |
|------------------------------------|--------------|
| Shock absorber upper nut           | 20 ÷ 30      |
| Front wheel axle nut               | 75 ÷ 90      |
| Shock absorber upper bracket bolts | 20 ÷ 25      |
| Wheel rim screws                   | 20 ÷ 25      |
| Shock absorber lower bolts (°)     | 20 ÷ 27      |

### STEERING ASSEMBLY

| Name                    | Torque in Nm |
|-------------------------|--------------|
| Upper steering ring nut | 35 ÷ 40      |
| Steering lower ring nut | 8 ÷ 10       |
| Handlebar fixing screw  | 50 ÷ 55      |

### ENGINE ASSEMBLY

| Name  | Torque in Nm |
|---|--------------|
| Clutch bell nut (**)                          | 40 ÷ 44      |
| Clutch lock ring nut                          | 55 ÷ 60      |
| Nut locking driving pulley on crankshaft (**) | 40 ÷ 44 Nm   |
| Start-up lever screw                          | 12 ÷ 13      |
| Flywheel nut (**)                             | 40 ÷ 44      |

| Name  | Torque in Nm |
|---|--------------|
| Flywheel fan screws                                   | 3 ÷ 4        |
| Half-crank case joint bolts                           | 12 ÷ 13      |
| Bolts holding exhaust pipe to the crankcase           | 22 ÷ 24      |
| Screws holding the filter box to the crank case       | 4 ÷ 5        |
| Head nuts   | 10 ÷ 11      |
| Starter screws  | 12 ÷ 13      |
| Ignition spark plug                                   | 25 ÷ 30      |
| Hub oil drainage cap                                  | 3 ÷ 5        |
| Oil hub level dipstick                                | Manual       |
| Rear hub cap screws                                   | 12 ÷ 13      |
| Transmission cover screws                             | 12 ÷ 13      |
| Inlet manifold screws                                 | 8 ÷ 9        |
| Flywheel hood fixing screws                           | 1 ÷ 2        |
| Cylinder hood fixing screws                           | 3.5 ÷ 5      |
| Stator clamping screws                                | 3 ÷ 4        |
| Pick-Up clamping screw                                | 4 ÷ 5        |
| Mixer clamping screws                                 | 3 ÷ 4        |
| Screw fixing brake lever to the journal on the engine | 12 ÷ 13      |

### FRAME ASSEMBLY

| Name                             | Torque in Nm |
|----------------------------------|--------------|
| Swinging arm - engine pin*       | 33 ÷ 41      |
| Swinging arm pin - frame         | 44 ÷ 52      |
| Shock absorber - chassis nut (*) | 20 to 25 Nm  |
| Swinging arm - frame plate       | 33 ÷ 41      |
| shock absorber - engine pin (*)  | 33 to 41 N·m |
| Rear wheel nut                   | 137 ÷ 152    |
| Side stand fixing screw          | 12 ÷ 20      |
| Side stand bracket fixing screw  | 15 ÷ 20      |


## Overhaul data

## Assembly clearances

### Cylinder - piston assy.

#### COUPLING BETWEEN PISTON AND CYLINDER


| Name                  | Initials | Cylinder        | Piston          | Play on fitting |
|-----------------------|----------|-----------------|-----------------|-----------------|
| Standard coupling     | M        | 40.005 - 40.012 | 39.943 - 39.95  | 0.055 - 0.069   |
| Standard coupling     | N        | 40.012 - 40.019 | 39.95 - 39.957  | 0.055 - 0.069   |
| Standard coupling     | O        | 40.019 - 40.026 | 39.957 - 39.964 | 0.055 - 0.069   |
| Standard coupling     | P        | 40.026 - 40.033 | 39.964 - 39.971 | 0.055 - 0.069   |
| coupling 1st oversize | M1       | 40.205 - 40.212 | 40.143 - 40.15  | 0.055 - 0.069   |
| coupling 1st oversize | N1       | 40.212 - 40.219 | 40.15 - 40.157  | 0.055 - 0.069   |
| coupling 1st oversize | O1       | 40.219 - 40.226 | 40.157 - 40.164 | 0.055 - 0.069   |
| coupling 1st oversize | P1       | 40.226 - 40.233 | 40.164 - 40.171 | 0.055 - 0.069   |
| Coupling 2nd oversize | M2       | 40.405 - 40.412 | 40.343 - 40.35  | 0.055 - 0.069   |
| Coupling 2nd oversize | N2       | 40.412 - 40.419 | 40.35 - 40.357  | 0.055 - 0.069   |
| Coupling 2nd oversize | O2       | 40.419 - 40.426 | 40.357 - 40.364 | 0.055 - 0.069   |
| Coupling 2nd oversize | P2       | 40.426 - 40.433 | 40.364 - 40.371 | 0.055 - 0.069   |

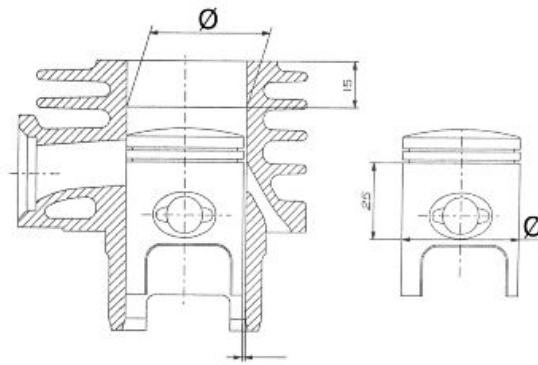

**Piston rings**

**SEALING RING**


| Name                             | Description | Dimensions | Initials | Quantity     |
|----------------------------------|-------------|------------|----------|--------------|
| Compression ring                 |             | 40         | A        | 0.10 to 0.25 |
| Compression ring 1st<br>oversize |             | 40.2       | A        | 0.10 to 0.25 |
| Compression ring 2nd<br>Oversize |             | 40.4       | A        | 0.10 to 0.25 |

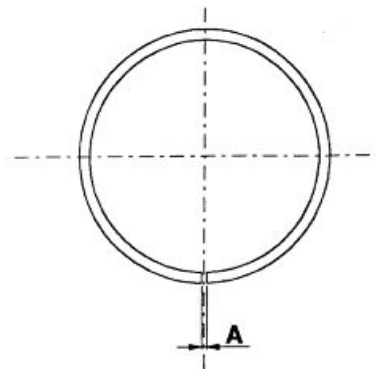

**Crankcase - crankshaft - connecting rod**

**AXIAL CLEARANCE BETWEEN CRANKCASE, CRANKSHAFT AND CONNECTING ROD**

| Name                             | Description | Dimensions  | Initials | Quantity  |
|----------------------------------|-------------|-------------|----------|---|
| Connecting rod                   |             | 11.750-0.05 | A        | clearance E = 0.25 to 0.50                              |
| shoulder washer                  |             | 0.5 ± 0.03  | G        | clearance E = 0.25 to 0.50 - clearance F = 0.20 to 0.75 |
| Half-shaft, transmission<br>side |             | 13.75+0.040 | C        | clearance E = 0.25 to 0.50 - clearance F = 0.20 to 0.75 |
| Flywheel-side half-shaft         |             | 13.75+0.040 | D        | clearance E = 0.25 to 0.50 - clearance F = 0.20 to 0.75 |
| Lining between the<br>shoulders  |             | 40.64       | H        | clearance E = 0.25 to 0.50 - clearance F = 0.20 to 0.75 |
| Cage                             |             | 11.800-0.35 | B        | clearance F = 0.20 to 0.75                              |

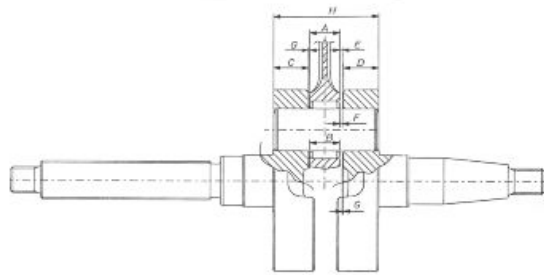

## Slot packing system

This type of engines foresees the use of one size of basic gaskets.

## Products

### RECOMMENDED PRODUCTS TABLE

| Product                     | Description   | Specifications   |
|-----------------------------|---|--|
| AGIP ROTRA 80W-90           | Rear hub oil  | SAE 80W/90 Oil that exceeds the requirements of API GL3 specifications   |
| AGIP CITY HI TEC 4T         | Oil to lubricate flexible transmissions (brake, throttle control and mixer, odometer) | Oil for 2-stroke engines: SAE 5W-40, API SL, ACEA A3, JASO MA  |
| AGIP FILTER OIL             | Oil for air filter sponge   | Mineral oil with specific additives for increased adhesiveness   |
| AGIP CITY TEC 2T            | Mixer oil   | synthetic oil for 2-stroke engines: JASO FC, ISO-L-EGD   |
| AGIP BRAKE 4                | Brake fluid   | FMVSS DOT 4 Synthetic fluid  |
| MONTBLANC MOLYBDENUM GREASE | Grease for driven pulley shaft adjusting ring and movable driven pulley housing       | Grease with Molybdenum disulphide  |
| AGIP GREASE PV2             | Grease for the steering bearings, pin seats and swinging arm                          | White anhydrous-calcium based grease to protect roller bearings; temperature range between -20 C and +120 C; NLGI 2; ISO-L-XBCIB2. |
| AGIP GREASE SM 2            | Grease for odometer transmission gear case  | Lithium grease with NLGI 2 molybdenum disulphide; ISO-L-XBCHB2, DIN KF2K-20  |
| AGIP GP 330                 | Grease for brake control levers, throttle, stand                                      | White calcium complex soap-based spray grease with NLGI 2; ISO-L-XBCIB2  |

## INDEX OF TOPICS

TOOLING

TOOL



**ATTREZZATURA**

| Stores code | Description                        |   |
|-------------|------------------------------------|---|
| 001330Y     | Tool for fitting steering seats    |    |
| 001467Y006  | Pliers to extract 20 mm bearings   |    |
| 001467Y009  | Driver for OD 42-mm bearings       |    |
| 001467Y013  | Pliers to extract ø 15-mm bearings |  |
| 001467Y014  | Pliers to extract ø 15-mm bearings |  |
| 001467Y017  | Bell for bearings, OD 39 mm        |  |
| 002465Y     | Pliers for circlips                |  |

| Stores code | Description   |   |
|-------------|---|---|
| 006029Y     | Punch for fitting fifth wheel seat on steering tube |     |
| 020004Y     | Punch for removing fifth wheels from headstock      |     |
| 020055Y     | Wrench for steering tube ring nut                   |    |
| 020150Y     | Air heater support                                  |    |
| 020151Y     | Air heater  |  |
| 020162Y     | Flywheel extractor                                  |  |
| 020163Y     | Crankcase splitting plate                           |  |

| Stores code | Description                        |  |
|-------------|------------------------------------|--|
| 020166Y     | Pin lock fitting tool              |  A set of three tools for pin lock fitting: a small black cylindrical cap, a taller black cylindrical pin, and a long black handle with a silver-colored metal tip. |
| 020261Y     | Starter spring fitting             |  A black T-shaped tool with a long horizontal handle and a vertical base that has a curved, hook-like shape at the bottom.  |
| 020265Y     | Bearing fitting base               |  A black, rectangular metal base with a U-shaped cutout on the front side, used for bearing fitting.   |
| 020325Y     | Pliers for brake-shoe springs      |  A pair of long-handled pliers with curved jaws, designed for working with brake shoe springs.  |
| 020329Y     | Mity-Vac vacuum-operated pump      |  A white plastic vacuum-operated pump with various ports and a black hose attached, used for vacuum operations.   |
| 020330Y     | Stroboscopic light to check timing |  A handheld stroboscopic light with a black handle and a white body, connected to a black power cord.   |


| Stores code | Description        |
|-------------|--------------------|
| 020331Y     | Digital multimeter |



|         |                       |
|---------|-----------------------|
| 020332Y | Digital rpm indicator |
|---------|-----------------------|





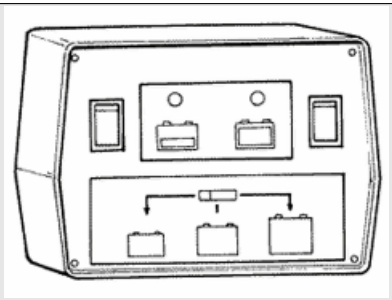


|         |                        |
|---------|------------------------|
| 020333Y | Single battery charger |
|---------|------------------------|



|         |                          |
|---------|--------------------------|
| 020334Y | Multiple battery charger |
|---------|--------------------------|



| Stores code | Description                        |   |
|-------------|------------------------------------|---|
| 020335Y     | Magnetic support for dial gauge    |    |
| 020350Y     | Electrical system check instrument |   |
| 020359Y     | 42x47-mm Adaptor                   |  |
| 020376Y     | Adaptor handle                     |  |
| 020412Y     | 15-mm guide                        |  |

| Stores code | Description |
|-------------|-------------|
|-------------|-------------|

020456Y

Ø 24 mm adaptor




020565Y

Flywheel lock calliper spanner



494929Y

Exhaust fumes analyser

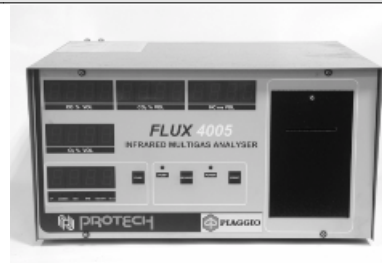

001467Y029

Bell for bearings, O.D. 38 mm




020037Y

Punch



020036Y

Punch

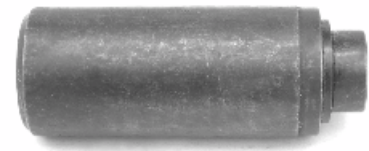


---

| Stores code | Description |
|-------------|-------------|
|-------------|-------------|

---


020021Y

Front suspension service tool

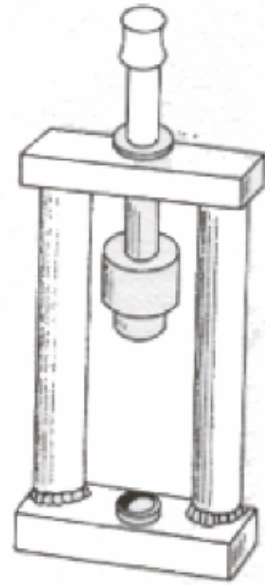

020038Y

Punch

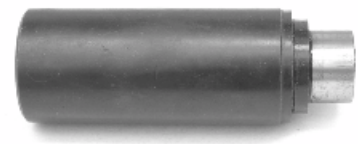

020074Y

Support base for checking crankshaft alignment



004499Y001


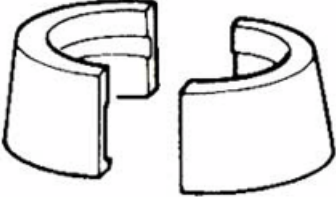




Bearing extractor bell








004499Y006

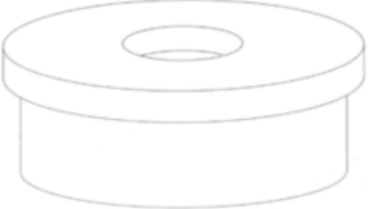

Bearing extractor ring



| Stores code | Description                                       |   |
|-------------|---|---|
| 004499Y002  | Bearing extractor screw                           |    |
| 004499Y007  | Half rings  |     |
| 020171Y     | Punch for driven pulley roller bearing            |   |
| 020340Y     | Flywheel and transmission oil seals fitting punch |   |
| 020360Y     | 52x55-mm Adaptor                                  |   |
| 020358Y     | 37x40-mm Adaptor                                  |   |
| 020362Y     | 12 mm guide                                       |  |



| Stores code | Description   |   |
|-------------|---|---|
| 020363Y     | 20-mm guide   |    |
| 020365Y     | 22 mm guide   |    |
| 020439Y     | 17-mm guide   |   |
| 020441Y     | 26 x 28 mm adaptor                                      |  |
| 020452Y     | Tube for removing and refitting the driven pulley shaft |  |

| Stores code | Description   |   |
|-------------|---|---|
| 020451Y     | Starting ring gear lock                             |  |
| 020444Y     | Tool for fitting/ removing the driven pulley clutch |   |

## INDEX OF TOPICS

**MAINTENANCE**

**MAIN**

## Maintenance chart

### EVERY 2 YEARS

#### Action

Brake fluid - change

### AFTER 1000 KM

50'

#### Action

Hub oil - change

Oil mixer/throttle linkage - adjustment

Odometer gear - greasing

Steering - adjustment

Brake control levers - greasing

Brake fluid level - check

Safety locks - check

Electrical system and battery - check

Tyre pressure and wear - check

Vehicle and brake test - road test

### AFTER 5000 KM, 25000 KM, 35000 KM AND 55000 KM

40'

#### Action

Hub oil level - check

Spark plug/electrode gap - replacement

Air filter - clean

Oil mixer/throttle linkage - adjustment

Brake control levers - greasing

Brake pads - check condition and wear

Brake fluid level - check

Electrical system and battery - check

Tyre pressure and wear - check

Vehicle and brake test - road test

### AFTER 10000 KM, 50000 KM

95'

#### Action

Hub oil - change

Spark plug/electrode gap - replacement

Air filter - clean

Idling speed (\*) - adjustment

Oil mixer/throttle linkage - adjustment

Variable speed rollers - replacement

Odometer gear - greasing

Driving belt - checking

Steering - adjustment

Brake control levers - greasing

Brake pads - check condition and wear

Brake fluid level - check

Transmission elements - lubrication

Safety locks - check

Suspensions - check

Electrical system and battery - check

Headlight - adjustment

Tyre pressure and wear - check

Vehicle and brake test - road test

(\*) See regulations in the «Adjusting the idle speed» section

### AFTER 15000 KM AND 45000 KM

65'

**Action**

|   |
|---|
| Hub oil level - check                   |
| Spark plug/electrode gap - replacement  |
| Air filter - cleaning                   |
| Oil mixer/throttle linkage - adjustment |
| Driving belt - replacement              |
| Brake control levers - greasing         |
| Brake pads - check condition and wear   |
| Brake fluid level - check               |
| Electrical system and battery - check   |
| Tyre pressure and wear - check          |
| SAS box (sponge) (**) - cleaning        |
| Vehicle and brake test - road test      |

(\*\*) See regulations in the «Secondary air system» section

**AFTER 20000 KM AND 40000 KM**

110'

**Action**

|  |
|--|
| Hub oil - change                         |
| Spark plug/electrode gap - replacement   |
| Air filter - clean                       |
| Idling speed (*) - adjustment            |
| Cylinder cooling system - check/cleaning |
| Oil mixer/throttle linkage - adjustment  |
| Driving belt - checking                  |
| Variable speed rollers - replacement     |
| Mixer belt - replacement                 |
| Odometer gear - greasing                 |
| Steering - adjustment                    |
| Brake control levers - greasing          |
| Brake pads - check condition and wear    |
| Brake fluid level - check                |
| Transmission elements - lubrication      |
| Safety locks - check                     |
| Suspensions - check                      |
| Electrical system and battery - check    |
| Headlight - adjustment                   |
| Tyre pressure and wear - check           |
| Vehicle and brake test - road test       |

(\*) See section «Adjusting the idle speed»

**AFTER 30000 KM**

130'

**Action**

|   |
|---|
| Hub oil - change                        |
| Spark plug/electrode gap - replacement  |
| Air filter - clean                      |
| Idling speed (*) - adjustment           |
| Oil mixer/throttle linkage - adjustment |
| Driving belt - replacement              |
| Variable speed rollers - replacement    |
| Odometer gear - greasing                |
| Steering - adjustment                   |
| Brake control levers - greasing         |
| Brake pads - check condition and wear   |
| Flexible brake tubes - replacement      |
| Brake fluid level - check               |
| Transmission elements - lubrication     |
| Safety locks - check                    |
| Suspensions - check                     |
| Electrical system and battery - check   |
| Headlight - adjustment                  |
| Tyre pressure and wear - check          |
| SAS box (sponge) (**) - cleaning        |
| Vehicle and brake test - road test      |

(\*) See regulations in the «Adjusting the idle speed» section

(\*\*) See regulations in the «Secondary air system» section

### AFTER 60000 KM

150'

#### Action


|  |
|--|
| Hub oil - change                         |
| Spark plug/electrode gap - replacement   |
| Air filter - clean                       |
| Idling speed (*) - adjustment            |
| Cylinder cooling system - check/cleaning |
| Oil mixer/throttle linkage - adjustment  |
| Driving belt - replacement               |
| Variable speed rollers - replacement     |
| Mixer belt - replacement                 |
| Odometer gear - greasing                 |
| Steering - adjustment                    |
| Brake control levers - greasing          |
| Brake pads - check condition and wear    |
| Flexible brake tubes - replacement       |
| Brake fluid level - check                |
| Transmission elements - lubrication      |
| Safety locks - check                     |
| Suspensions - check                      |
| Electrical system and battery - check    |
| Headlight - adjustment                   |
| Tyre pressure and wear - check           |
| SAS box (sponge) (**) - cleaning         |
| Vehicle and brake test - road test       |

(\*) See regulations in the «Adjusting the idle speed» section

(\*\*) See regulations in the «Secondary air system» section

## Carburettor

- Disassemble the carburettor in its parts, wash all of them with solvent, dry all body grooves with compressed air to ensure adequate cleaning.
- Check carefully that the parts are in good condition.
- The **throttle valve** should move freely in the chamber. Replace valve in case of wear due to excessive clearance.
- If there are wear marks in the chamber causing inadequate tightness or a free valve slide (even if it is new), replace the carburettor.
- It is advisable to replace the gaskets at every refit.

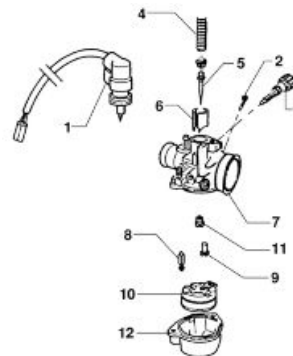

#### WARNING

**PETROL IS HIGHLY EXPLOSIVE ALWAYS REPLACE THE GASKETS TO AVOID PETROL LEAKS**

1. Automatic starter - 2. Idle air set screw - 3. Idle speed set screw - 4. Throttle valve spring - 5. Throttle valve tapered pin - 6. Throttle valve - 7. Carburettor body - 8. Pin - 9. Min. jet - 10. Float - 11. Max. jet - 12. Float chamber

## Checking the spark advance

-Check to be made at over 4000 rpm with stroboscopic gun. The advanced ignition measured must be  $17^\circ$  before the TDC.

- This value is correct when the reference mark on the flywheel hood is aligned with the reference mark on the cooling fan and the phase shifter on the stroboscopic gun is set on  $17^\circ$ .

**N.B.**

**IN CASE OF MALFUNCTION, CARRY OUT THE CHECKS PROVIDED FOR IN THE ELECTRICAL SYSTEM CHAPTER.**

**CAUTION**

**BEFORE CARRYING OUT THE ABOVE CHECKS, CHECK THE CORRECT KEYING OF THE FLYWHEEL ON THE CRANKSHAFT.**

### Specific tooling

**020330Y Stroboscopic light to check timing**




## Spark plug

Place the vehicle on its central stand

- Remove the central cover, indicated in the figure, by undoing the 2 fixing screws;
- Disconnect spark plug HV wire hood;
- Undo the spark plug using the socket wrench;
- Examine the condition of the spark plug, check that the insulating material is whole and measure the distance between the electrodes using a thickness gauge.

-Adjust the distance if necessary by bending the side electrode very carefully.

In the case of defects, replace the spark plug with one of the specified type;

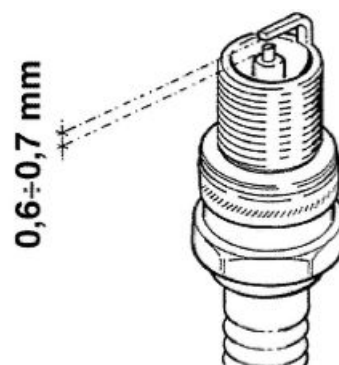

- Engage the spark plug with the due inclination and screw it right down by hand, then do it up with the wrench at the prescribed torque;
- Put the hood on the sparking plug as far as it will go;
- Refit the central flap.

**CAUTION**

THE SPARK PLUG MUST BE REMOVED WHEN THE MOTOR IS COLD. THE SPARK PLUG MUST BE REPLACED EVERY 5000 KM. USE OF STARTERS NOT CONFORMING OR SPARK PLUGS NOT THOSE DESCRIBED CAN SERIOUSLY DAMAGE THE ENGINE.

**Characteristic****Recommended spark plug**

CHAMPION RN2C

**Electric characteristic****Electrode gap**

0.6 to 0.7 mm.

**Locking torques (N\*m)**

Spark plug 25 - 30 Nm

---


**Hub oil**


---

**Check**

Do the following to check the correct level:

- 1) Stand the vehicle on the centre-stand on flat ground;
- 2) Remove the dipstick «A», and dry it with a clean cloth. Reinsert it, screwing it in all the way;
- 3) Remove the stick and check that the oil level is slightly over the second notch starting from the lower end;
- 4) Screw the dipstick back in, checking that it is locked in place.

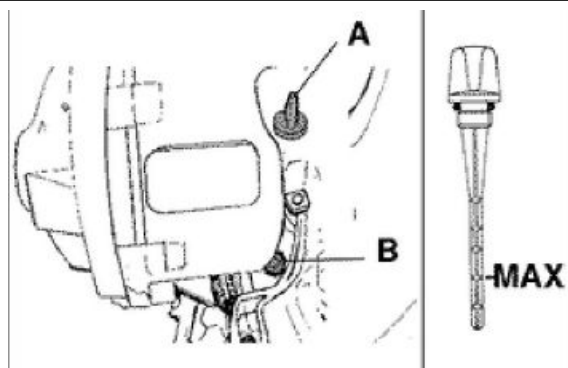**Recommended products****AGIP ROTRA 80W-90 Rear hub oil**


SAE 80W/90 Oil that exceeds the requirements of API GL3 specifications

---



## Replacement

- Remove the oil cap «A».
- Unscrew the oil drainage cap "B" and drain out all the oil.
- Screw on the drainage plug and fill up the hub with oil (about 85 cc)

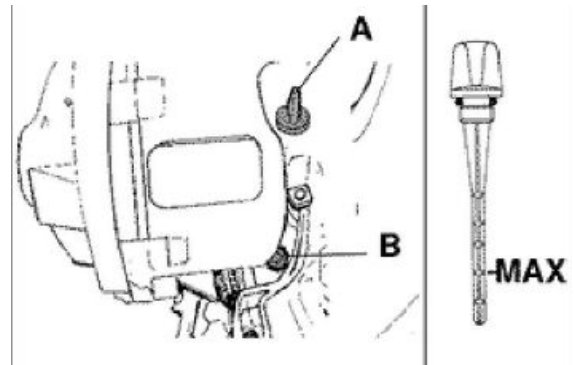


## Air filter

- Remove the cap of the purifier, unscrewing the six clamping screws and removing the filter.

### Cleaning:

- Wash with water and neutral soap.
- Dry with a clean cloth and short blasts of compressed air.
- Saturate with a 50% mixture of gasoline and oil.
- Drip dry the filter and then squeeze it between the hands without wringing.
- Let it dry and refit it again.

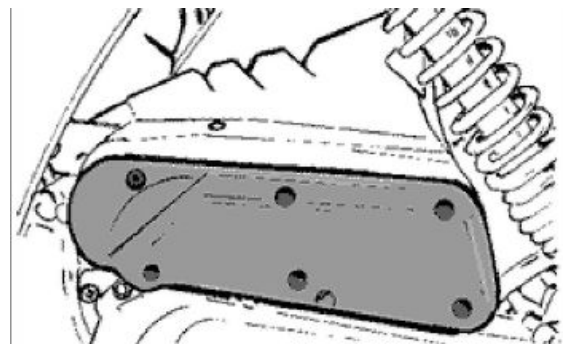

### CAUTION

**NEVER RUN THE ENGINE WITHOUT THE AIR FILTER, THIS WOULD RESULT IN AN EXCESSIVE WEAR OF THE PISTON AND CYLINDER.**

### Recommended products

#### AGIP FILTER OIL Oil for air filter sponge

Mineral oil with specific additives for increased adhesiveness

## Checking the ignition timing

- Adjust the control cables:

Mix cable: see procedure indicated in "Mixer timing".

Throttle cable: adjust the set screw on the carburettor in such a way that the sheath has no backlash.

Splitter control cable: adjust set screw on the throttle control to the handlebar in such a way that there is no backlash on the throttle control.

Adjust all transmissions in such a way that their sheathings show no sign of backlash.

### Mixer Timing

- Using the transmission set screw on the crankcase, with throttle control untwisted, adjust the reference mark on the rotating plate so that it is lined up with the reference mark on the mixer body, as shown in the figure.

While doing this, the engine must be fuelled with a 2 % oil mixture (0.5 litre minimum if the reservoir is empty).


#### CAUTION

IN CASE OF DISMANTLING OR RUNNING OUT OF OIL IN THE RESERVOIR BLEED THE MIXER AS FOLLOWS: REFILL THE OIL RESERVOIR WHEN THE MIXER IS FITTED TO THE VEHICLE AND THE ENGINE IS OFF, UNDO THE MIXER PIPE FROM THE CARBURETTOR AND LOOSEN THE BLEED SCREWS (SEE THE ARROW IN THE FIGURE) UNTIL THE OIL BEGINS TO FLOW OUT. TIGHTEN THE SCREWS, START UP THE ENGINE AND WAIT FOR OIL TO FLOW OUT OF THE TUBE. RECONNECT THE DELIVERY PIPE TO THE CARBURETTOR AND FIX IT IN PLACE WITH THE RELEVANT METAL CLIP.

### Recommended products

#### AGIP CITY TEC 2T Mixer oil

synthetic oil for 2-stroke engines: JASO FC, ISO-L-EGD

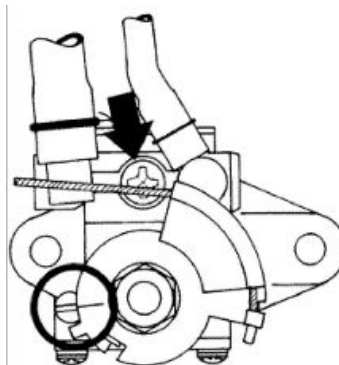


## Braking system

## Level check

Proceed as follows:

- Rest the vehicle on its centre stand with the handlebars perfectly horizontal;
- Check the level of liquid with the related warning light «A».

A certain lowering of the level is caused by wear on the pads.

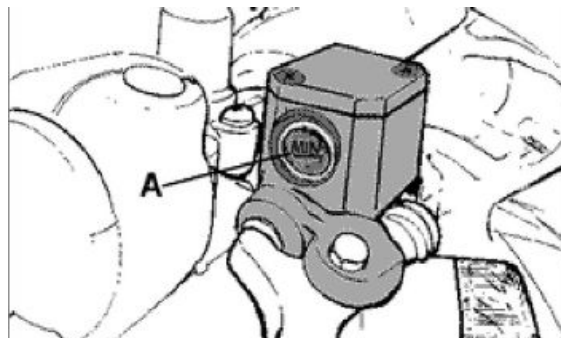

## Top-up

Proceed as follows:

- Remove the tank cap by loosening the two screws, remove the gasket and top up using only the liquid specified without exceeding the maximum level.

### CAUTION

ONLY USE DOT 4-CLASSIFIED BRAKE FLUID.

### CAUTION



AVOID CONTACT OF THE BRAKE FLUID WITH YOUR EYES, SKIN, AND CLOTHING. IN CASE OF ACCIDENTAL CONTACT, WASH WITH WATER.

### CAUTION

BRAKING CIRCUIT FLUID IS HIGHLY CORROSIVE; MAKE SURE THAT IT DOES NOT COME INTO CONTACT WITH THE PAINTWORK.

### CAUTION

THE BRAKE FLUID IS HYGROSCOPIC, IN OTHER WORDS, IT ABSORBS MOISTURE FROM THE SURROUNDING AIR. IF THE CONTENT OF MOISTURE IN THE BRAKING FLUID EXCEEDS A CERTAIN VALUE, BRAKING WILL BE INEFFICIENT.

NEVER USE BRAKE LIQUID IN OPEN OR PARTIALLY USED CONTAINERS.

UNDER NORMAL CLIMATIC CONDITIONS, THE FLUID MUST BE CHANGED EVERY 20,000 KM OR ANYWAY EVERY TWO YEARS.


### N.B.

SEE THE BRAKING SYSTEM CHAPTER WITH REGARD TO THE CHANGING OF BRAKE FLUID AND THE BLEEDING OF AIR FROM THE CIRCUITS.

## Recommended products

**AGIP BRAKE 4** Brake fluid



FMVSS DOT 4 Synthetic fluid

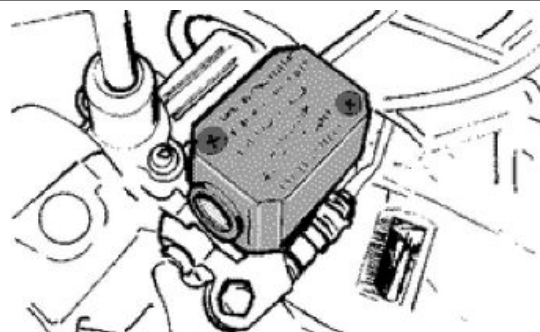

## Headlight adjustment

Proceed as follows:

1. Place the vehicle, in running order and with the tyres inflated to the prescribed pressure, on a flat surface 10-m away from a white screen situated in a shaded area, making sure that the longitudinal axis of the scooter is perpendicular to the screen;
2. Turn on the headlight and check that the borderline of the projected light beam on the screen is not higher than  $9/10$  or lower than  $7/10$  of the distance from the ground to the centre of vehicle headlamp;
3. If otherwise, adjust the right headlight with screw «A».

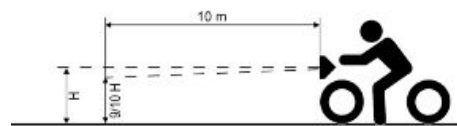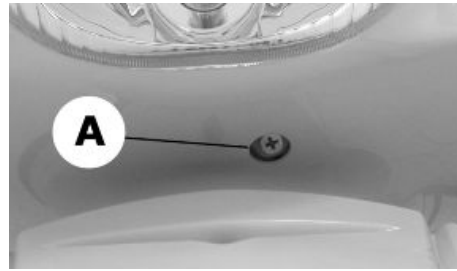

**N.B.**

THE ABOVE PROCEDURE COMPLIES WITH THE EUROPEAN STANDARDS REGARDING MAXIMUM AND MINIMUM HEIGHT OF LIGHT BEAMS. REFER TO THE STATUTORY REGULATIONS IN FORCE IN EVERY COUNTRY WHERE THE VEHICLE IS USED.

## CO check

- Remove the RHS fairing
- Remove the air-box cover and its aluminium manifold, by removing the clamp shown in the figure



Attach the exhaust gas collection tube to the secondary air rubber manifold. Such joint must be sealed in order to guarantee accurate CO readings.



- Start the engine, adjust the idle speed to  $1,700 \pm 100$  rpm and check the CO value is equal  $3.5 \pm 1\%$

- If the parameters found do not agree with the above figures, act upon the idle adjusting screw. Otherwise, check the automatic choke device

### Specific tooling


020320Y Exhaust gases analyser

020332Y Digital rpm indicator

## SAS filters inspection and cleaning

Remove the right side fairing by undoing the 2 screws marked «**B**» indicated in the figure.

Remove the two screws «**A**» from the aluminium SAS cover. Release the metal tube from the rubber housing on the cover without extracting the tube from the cover/sleeve. Remove the tab and plastic cover, extract the sponge and wash it in water and soap. Dry it with compressed air before refitting it, making sure to correctly fit the tab in the housing on the two plastic and aluminium covers. Every time you disassemble the filter, replace the O-ring seal located in the cover.

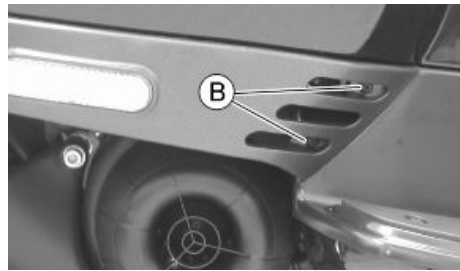

## INDEX OF TOPICS

TROUBLESHOOTING

TROUBL

This section makes it possible to find the solutions to use in troubleshooting.

For each breakdown, a list of the possible causes and respective interventions is given.

## Engine

### Poor performance

#### POOR PERFORMANCE

| Possible Cause   | Operation  |
|--|--|
| Fuel nozzles or cock clogged or dirty                    | Dismantle, wash with solvent and dry with compressed air   |
| Excess of encrustations in the combustion chamber        | Remove the encrustations   |
| Lack of compression wear of the piston rings or cylinder | Check the worn parts and replace them  |
| Exhaust pipe clogged due to excessive encrustations      | Replace the exhaust pipe and check the carburation and mixer timer   |
| Air filter blocked or dirty                              | Clean according to the procedure   |
| Starter inefficient (stays on)                           | Check the mechanical sliding, continuity of the circuit, the presence of power and electrical wiring                                 |
| Clutch slipping  | Check the centrifugal brake shoe assembly and /or clutch bell and replace if necessary   |
| Defective mobile pulley sliding                          | Check the parts, change the faulty parts and lubricate the driven pulley using only Montblanc-Molibdenum Grease (dis. 498345) grease |
| Driving belt worn  | Replace  |
| Carburettor nozzles clogged                              | Dismantle, wash with solvent and dry with compressed air   |
| Fuel filter on vacuum operated cock blocked              | Clean the cock filter  |
| Roller wear; Presence of oil; Dirt                       | Check the cap with filter is fitted to the transmission cover; clean the speed variator, replace the rollers if worn out             |

### Rear wheel spins at idle

#### REAR WHEEL

| Possible Cause                | Operation  |
|-------------------------------|--|
| Idling rpm too high           | Check the idling speed and, if necessary, adjust the C.O.          |
| Clutch fault                  | Check the spring/friction mass and the clutch bell                 |
| Air filter housing not sealed | Correctly refit the filter housing and replace it if it is damaged |

### Starting difficulties

#### DIFFICULTY STARTING

| Possible Cause                                       | Operation   |
|--|---|
| Carburettor nozzles clogged or dirty                 | Dismantle, wash with solvent and dry with compressed air  |
| Faulty fuel cock                                     | Check that, at ignition and with throttle untwisted, no petrol flows out the delivery pipe; otherwise, replace the vacuum-operated cock   |
| Starter inefficient                                  | Check: electric wiring, circuit continuity, mechanical sliding and power supply   |
| Defective spark plug or with incorrect electrode gap | Check and if necessary replace the spark plug and the electrode gap   |
| Battery flat   | Check the state of the battery. If it shows signs of sulphation replace it and bring the new battery into service charging it for eight hours at a current of 1/10 of the capacity of the battery itself  |
| - Engine flooded.                                    | Start the vehicle keeping the throttle fully open alternately making the engine run for approx. five seconds and stopping for other five seconds. If however it does not start, remove the spark plug, the engine over with the throttle open being careful |

| Possible Cause                          | Operation  |
|---|--|
|   | to keep the cap in contact with the spark plug and the spark plug grounded but away from its hole. Refit a dry spark plug and start the vehicle.   |
| Altered fuel characteristics            | Drain off the fuel no longer up to standard; then, refill  |
| Faulty spark plug                       | Remove the encrustation, restore the plug gap or replace being sure to use the types of spark plug recommended at all times. Bear in mind that many problems engines have, derive from the use of the wrong spark plug |
| Intake joint cracked or with a bad seal | Replace intake joint and check for correct sealing on the head   |
| Purifier-carburettor fitting damaged    | Replace  |

## Excessive oil consumption/Exhaust smoke

### EXCESSIVE OIL CONSUMPTION/SMOKEY EXHAUST

| Possible Cause                                    | Operation                |
|---|--------------------------|
| Excess of encrustations in the combustion chamber | Remove the encrustations |

## Engine tends to cut-off at full throttle

### ENGINE STOP FULL THROTTLE

| Possible Cause                      | Operation  |
|-------------------------------------|--|
| Maximum nozzle dirty - lean mixture | Wash the nozzle with solvent and dry with compressed air               |
| Dirty carburettor                   | Wash the carburettor with solvent and dry with compressed air          |
| Water in the carburettor            | Empty the tank through the appropriate bleed nipple.                   |
| Air filter dirty                    | Clean or replace   |
| Defective floating valve            | Check the proper sliding of the float and the functioning of the valve |
| Tank breather hole obstructed       | Restore the proper reservoir aeration                                  |

## Engine tends to cut-off at idle

### ENGINE STOP IDLING

| Possible Cause                 | Operation  |
|--------------------------------|--|
| Minimum nozzle dirty           | Wash the nozzle with solvent and dry with compressed air                         |
| Starter that stays open        | Check: electric wiring, circuit continuity, mechanical sliding and power supply  |
| Reed valve does not close      | Check / replace the reed pack  |
| Wrong idling adjustment        | Correctly adjust the engine idling and check the level of the C.O.               |
| Spark plug defective or faulty | Replace the spark plug with one with the specified degree and check the plug gap |

## Excessive exhaust noise

### INCREASED NOISINESS

| Possible Cause   | Operation  |
|--|--|
| Secondary metal air pipe deteriorated                          | Check there are no leaks on the hoses on the crankcase and the housing, check that there is a cap with filter and it is correctly fitted to the transmission cover |
| Good condition of the missing secondary air circuit components | Check the individual components and the piping, check the precision of the fitting. Replace the damaged components   |



## High fuel consumption

### HIGH FUEL CONSUMPTION

| Possible Cause               | Operation   |
|------------------------------|---|
| Air filter blocked or dirty. | Clean according to the procedure  |
| Starter inefficient          | Check: electric wiring, circuit continuity, mechanical sliding and power supply |

## SAS malfunctions

### SLACKENING OF THE RUBBER JOINT OF THE SECONDARY AIR PIPE ON THE MUFFLER

| Possible Cause                                       | Operation   |
|--|---|
| Secondary air reed blocking                          | Replace   |
| Secondary air filter clogging                        | Clean the filter and the housing  |
| Blockage of the secondary air fitting on the muffler | Remove the encrustations from the joint being careful not to let the debris fall into the muffler |

## Transmission and brakes

## Clutch grabbing or performing inadequately

### CLUTCH BRAKES

| Possible Cause                    | Operation  |
|-----------------------------------|--|
| Slippage or irregular functioning | <p>Check that the masses open and return normally</p> <p>Check that there is no grease on the masses</p> <p>Check that the clutch masses' contact surface with the clutch bell is mainly in the middle with characteristics equivalent on the three masses</p> <p>Check that the clutch bell is not scored or worn abnormally</p> <p>Never operate the engine without the clutch bell</p> <p>Check the cap with filter is fitted to the transmission cover</p> |

## Insufficient braking

### BRAKING SYSTEM MALFUNCTION

| Possible Cause   | Operation  |
|--|--|
| Poor braking   | <p>The rear (drum type) brake is adjusted by regulating the special adjustment (on the wheel) bearing in mind that, with the control levers in the rest position, the wheels must turn freely.</p> <p>The braking action should begin when the brake levers are pressed by about a third.</p> <p>Check the brake pad wear.</p> <p>If it is not possible to remove any problems by simply adjusting the transmissions, check the brake pads and front brake disc, the brake shoes and the rear drum. If you encounter excessive wear or scoring, make the necessary replacements.</p> |
| Air bubbles inside the hydraulic braking system                                      | Carefully bleed the hydraulic braking system, (there must be no flexible movement of the brake lever).   |
| Fluid leakage in hydraulic braking system<br>The brake fluid has lost its properties | Elastic fittings, piston seals or brake pump breakdown, replace<br>Replace the front brake fluid and top up to the correct level in the pump   |
| Defective sliding of the cables in their sheathes                                    | Lubricate or substitute  |
| Brake noise  | Check the wear of the brake pads and/or shoes  |

## Brakes overheating

### BRAKES OVERHEATING

| Possible Cause              | Operation  |
|-----------------------------|--|
| Defective piston sliding    | Check calliper and replace any damaged part.   |
| Brake disc or drum deformed | Using a dial gauge, check the planarity of the disk with the wheel correctly fitted or the concentricity of the rear drum. |

## Electrical system

### Battery

#### BATTERY

| Possible Cause | Operation   |
|----------------|---|
| Battery        | The battery is the electrical device in the system that requires the most frequent inspections and thorough maintenance. If the vehicle is not used for some time (1 month or more) the battery needs to be recharged periodically. The battery runs down completely in the course of 5 ÷ 6 months. If the battery is fitted on a motorcycle, be careful not to invert the connections, keeping in mind that the black ground wire is connected to the negative terminal while the red wire is connected to the terminal marked+. Follow the instructions in the ELECTRICAL SYSTEM chapter for the recharging of the batteries. |

## Steering and suspensions

### Heavy steering

#### STEERING HARDENING

| Possible Cause        | Operation   |
|-----------------------|---|
| Torque not conforming | Check the tightening of the top and bottom ring nuts.<br>If irregularities continue in turning the steering even after making the above adjustments, check the seats in which the ball bearings rotate: replace if they are recessed. |

### Excessive steering play

#### EXCESSIVE STEERING CLEARANCE

| Possible Cause               | Operation   |
|------------------------------|---|
| EXCESSIVE STEERING CLEARANCE | Check the tightening of the top and bottom ring nuts.<br>If irregularities continue in turning the steering even after making the above adjustments, check the seats in which the ball bearings rotate: replace if they are recessed. |

### Noisy suspension

#### NOISY SUSPENSION

| Possible Cause   | Operation   |
|------------------|---|
| NOISY SUSPENSION | If the front suspension is noisy, check: the efficiency of the front shock absorbers; the condition of the ball bearings and relevant |

**Possible Cause****Operation**

lock-nuts, the limit switch rubber buffers and the movement bushings.

---

**Suspension oil leakage****OIL LEAKAGE FROM SUSPENSION****Possible Cause****Operation**

Oil leakage from suspension


Service the pumping members and check the sleeves and sealing rings are in good conditions. Replace the damaged parts

---

## INDEX OF TOPICS

ELECTRICAL SYSTEM

ELE SYS

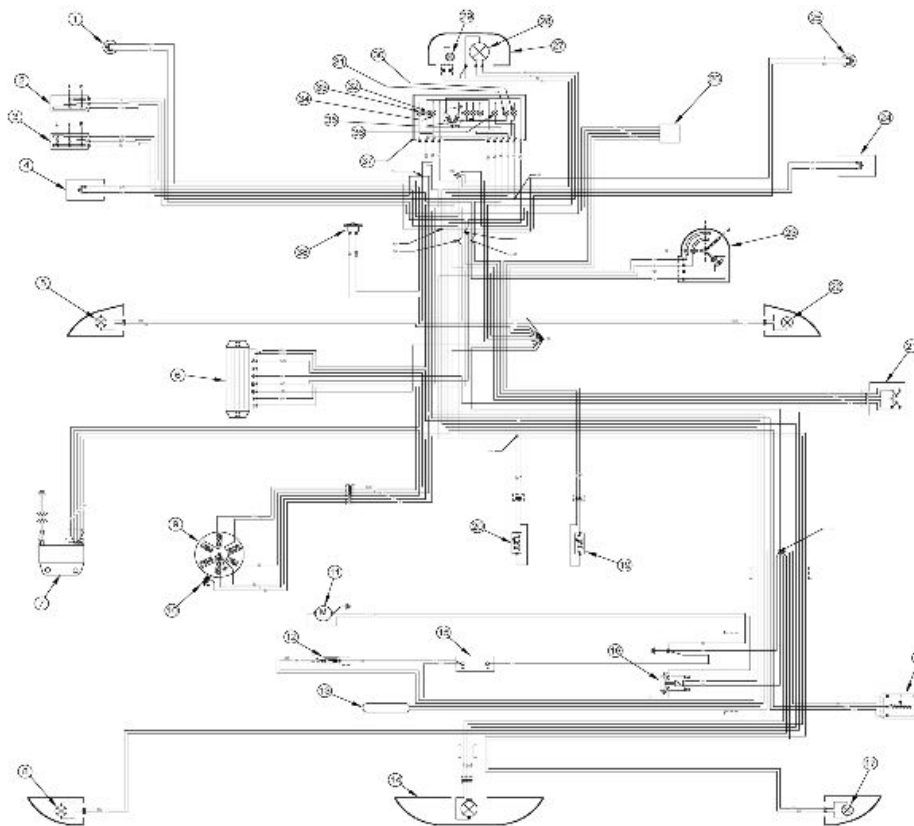

**ELECTRICAL COMPONENTS**


|    | Specification                      | Desc./Quantity |
|----|------------------------------------|----------------|
| 1  | Rear brake stop button             |                |
| 2  | Light switch                       |                |
| 3  | Turn indicator switch              |                |
| 4  | Horn button                        |                |
| 5  | Front left turn indicator          |                |
| 6  | Voltage regulator                  |                |
| 7  | Electronic ignition device         |                |
| 8  | rear left turn indicator           |                |
| 9  | Flywheel magneto                   |                |
| 10 | Pick - up                          |                |
| 11 | Starter motor                      |                |
| 12 | 7.5A                               |                |
| 13 | Automatic choke diagnostic light   |                |
| 14 | Rear light assembly                |                |
| 15 | Battery                            | 12V - 4Ah      |
| 16 | Start-up remote control switch     |                |
| 17 | rear right turn indicator          |                |
| 18 | Fuel level sender                  |                |
| 19 | Heater                             |                |
| 20 | Automatic starter                  |                |
| 21 | Oil level sender                   |                |
| 22 | front right turn indicator         |                |
| 23 | Key switch                         |                |
| 24 | Starter button                     |                |
| 25 | Front brake stop button            |                |
| 26 | Heater control device              |                |
| 27 | Headlight assembly                 |                |
| 28 | Headlight bulb                     | 12V-35/35W     |
| 29 | Front side light bulb              | 12V - 5W       |
| 30 | Right turn indicator warning light |                |
| 31 | Headlamp warning light             |                |
| 32 | Low fuel warning light             |                |

|    | Specification                     | Desc./Quantity   |
|----|-----------------------------------|--|
| 33 | Left turn indicator warning light |  |
| 34 | Oil warning light                 |  |
| 35 | Dashboard light bulbs             | <b>Type:</b> Bayonet<br><b>Power:</b> 12V 1.2W<br><b>Quantity:</b> 3 |
| 36 | High-beam lamp warning light      | 12V - 1.2W   |
| 37 | INSTRUMENT PANEL                  |  |
| 38 | Horn                              |  |

R = Red - B = White - Bl = Blue - N = Black - V = Green - Rs = Pink - Mr = Brown - Gr = Grey - Az = Sky  
 Blue G = Yellow Vi = Purple A = Orange

### Conceptual diagrams


### Ignition

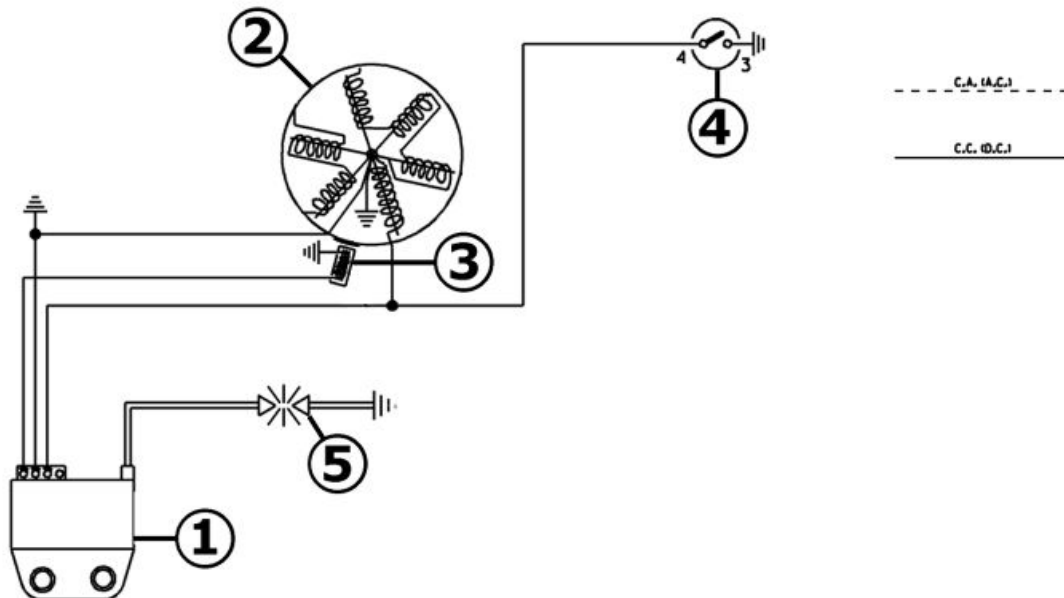

### IGNITION

|   | Specification           | Desc./Quantity |
|---|-------------------------|----------------|
| 1 | Electronic control unit |                |
| 2 | Magneto flywheel        |                |
| 3 | Pick - up               |                |
| 4 | Key switch              |                |
| 5 | Spark plug              |                |


Headlights and automatic starter section

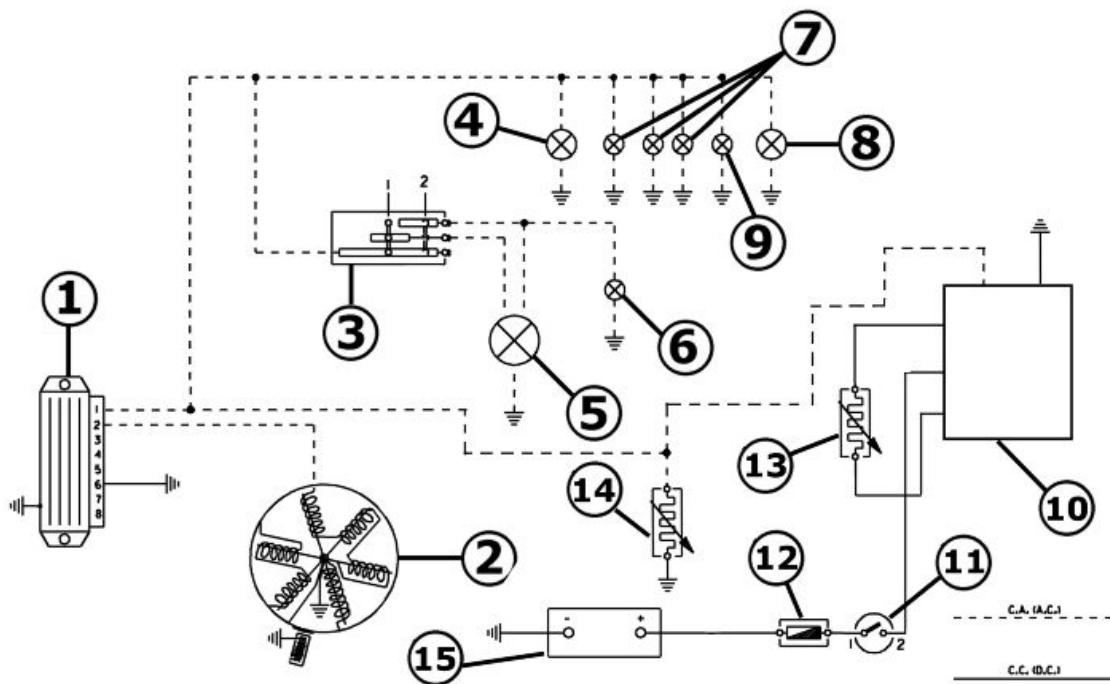

**LIGHTS**

|    | Specification                 | Desc./Quantity |
|----|-------------------------------|----------------|
| 1  | Voltage regulator             |                |
| 2  | Magneto flywheel              |                |
| 3  | Light switch                  |                |
| 4  | Rear light bulb               | 12V - 5W       |
| 5  | Headlight bulb                | 12V-35/35W     |
| 6  | High-beam warning light       | 12V - 1.2W     |
| 7  | N°3 instrument lighting bulbs | 12V - 1.2W     |
| 8  | Taillight bulb                | 12V - 5W       |
| 9  | Headlight warning light       | 12V - 1.2W     |
| 10 | Heater control device         |                |
| 11 | Key switch contacts           |                |
| 12 | Fuse 7,5A                     |                |
| 13 | Carburettor heater            |                |
| 14 | Automatic starter             |                |
| 15 | Battery                       | 12V - 4Ah      |

**Battery recharge and starting**

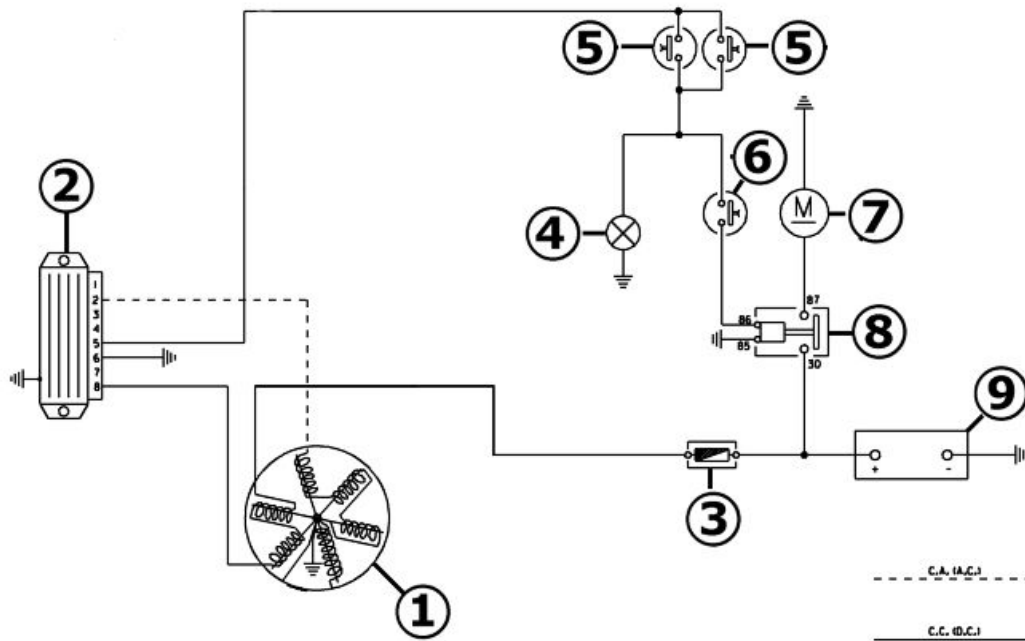


**BATTERY RECHARGE AND STARTING**

|   | Specification                     | Desc./Quantity |
|---|-----------------------------------|----------------|
| 1 | Magneto flywheel                  |                |
| 2 | Voltage regulator                 |                |
| 3 | Main fuse                         | 7,5A           |
| 4 | Brake light filament              | 12V - 21W      |
| 5 | Front and rear brake light button |                |
| 6 | Start up button                   |                |
| 7 | Starter motor                     |                |
| 8 | Remote starter switch             |                |
| 9 | Battery                           | 12V - 4Ah      |




Level indicators and enable signals section

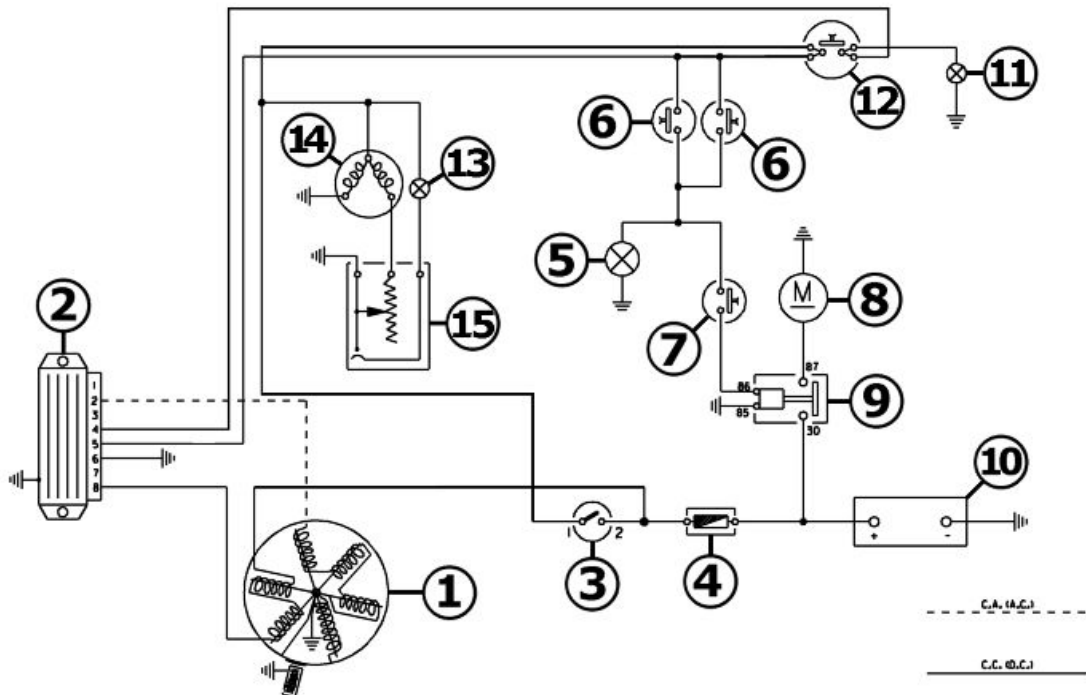

**START PERMISSIVE BUTTONS AND LEVEL INDICATORS**

|    | Specification                     | Desc./Quantity |
|----|-----------------------------------|----------------|
| 1  | Magneto flywheel                  |                |
| 2  | Voltage regulator                 |                |
| 3  | Key switch                        |                |
| 4  | Main fuse                         | 7,5A           |
| 5  | Brake light filament              | 12V - 21W      |
| 6  | Front and rear brake light button |                |
| 7  | Start up button                   |                |
| 8  | Starter motor                     |                |
| 9  | Remote starter switch             |                |
| 10 | Battery                           | 12V - 4Ah      |
| 11 | Low oil warning light             | 12V - 1.2W     |
| 12 | Oil level sender                  |                |
| 13 | Low fuel warning light            | 12V - 1.2W     |
| 14 | Fuel gauge                        |                |
| 15 | Fuel level sender                 |                |

Turn signal lights

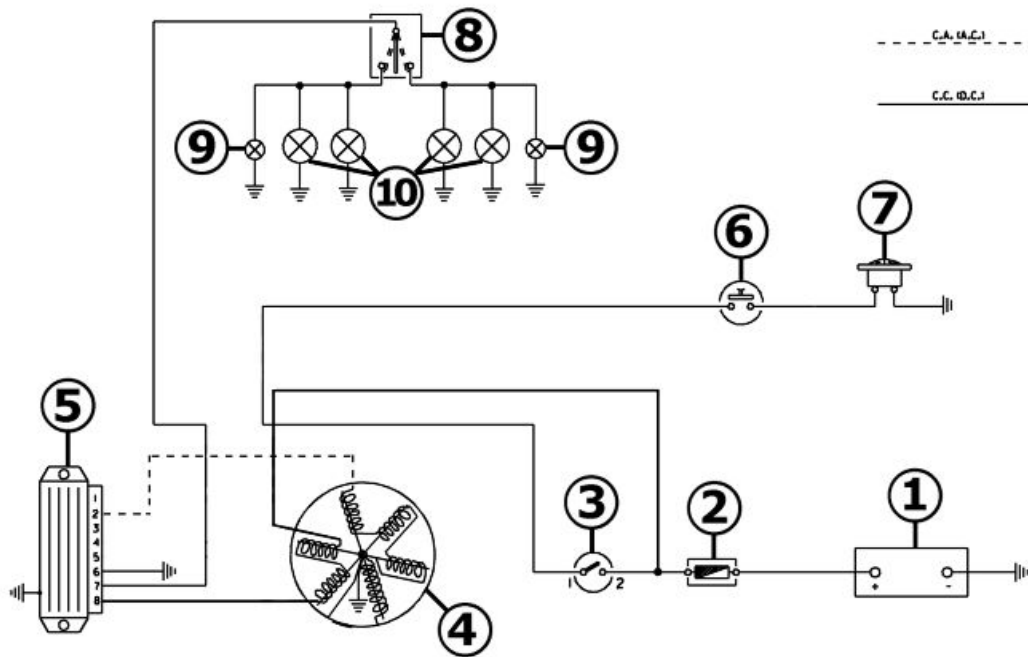


**TURN INDICATORS AND HORN**

|    | Specification                           | Desc./Quantity |
|----|---|----------------|
| 1  | Battery                                 | 12V - 4Ah      |
| 2  | Main fuse                               | 7,5A           |
| 3  | Key switch                              |                |
| 4  | Magneto flywheel                        |                |
| 5  | Voltage regulator                       |                |
| 6  | Horn button                             |                |
| 7  | Horn                                    |                |
| 8  | Indicators switch                       |                |
| 9  | Two (2) turn signal warning light bulbs | 12V - 2W       |
| 10 | 4 Turn indicator bulbs                  | 12V-10W        |

**Checks and inspections**

All the control operations of the system that entail disconnecting cables (to check connections and the devices making up the ignition circuit) must be done with the engine off: if this is not done, the controls might be irreparably damaged.

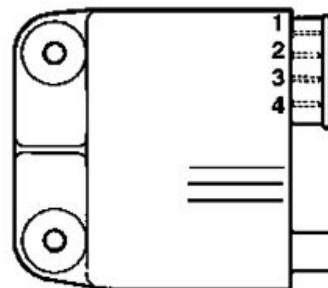

## Ignition circuit

1) Check the state of the spark plug (clean it with a metallic brush, remove all incrustations, blow it with compressed air, and replace it if necessary).

2) Without removing the stator, perform the checks described below:

After a visual inspection of the electrical connections, carry out the measurements on the charging coil and pick-up (see table), and check for continuity using the special tester, 020331Y.


If the continuity checks or the inspections on the coil and pick-up are incorrect, proceed by replacing the stator, otherwise replace the ECU.

Remember to detach the ECU wirings when the engine is not running.


### Specific tooling

020331Y Digital multimeter

**A**

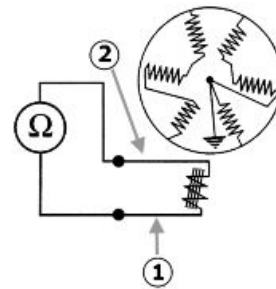

**B**

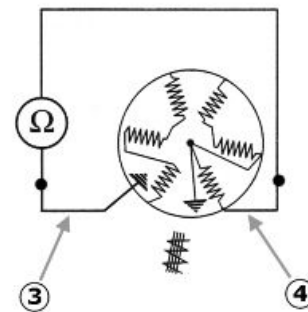

### PICK - UP CHECK (FIGURE A)

|   | Specification                     | Desc./Quantity |
|---|-----------------------------------|----------------|
| 1 | Red cable (1) and White cable (2) | 90 ÷ 140 Ohm   |

### RECHARGING COIL CHECK (FIGURE B)

|   | Specification                     | Desc./Quantity |
|---|-----------------------------------|----------------|
| 1 | Red cable (3) and Green cable (4) | 800 ÷ 1100 Ohm |

### CONTINUITY CHECK

|   | Specification        | Desc./Quantity |
|---|----------------------|----------------|
| 1 | White cable - Engine | Continuity     |
| 2 | White cable - Frame  | Continuity     |


## Voltage regulator check

### Voltage regulator

A fault in the voltage regulator can cause the following problems depending on the type of fault:

- 1) Blow out of the lighting system bulbs.
- 2) Failure of the lighting system.
- 3) Excessive battery charging (blowing of main fuse).
- 4) Battery recharging failure.
- 5) Failure of the turn indicators.

**A**

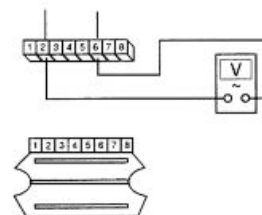

6) Failure of the oil and petrol check lamp.

### Operations

#### FAULT 1:

Make sure that at 5000 rpm with the lights on that the regulation voltage is between 13V and 14.5V.

Make sure that at 5000 rpm with the lights off the regulation voltage is  $\approx$  16V.

If the regulation voltage is greater than  $>16V$  replace the regulator.

#### FAULT 2:


- a) Make sure the stator is supplying voltage correctly: disconnect the regulator connector and place tester 020331 y between the grey-blue wire (2) and the black wire (6) to measure the alternating voltage and make sure that the voltage supplied at 3000 rpm, is between 25 and 30V (FIG> A). If there are any anomalies, replace the stator.
- b) If the tests do not reveal any anomalies, replace the regulator.
- c) If replacement of the regulator does not restore correct operation, check the connections of the electrical system.

#### FAULT 3

After checking that there are no short circuits in the system towards earthing with the engine off and the regulator connector detached, replace the regulator because it is certainly inefficient, and replace the protection fuse.

Following the replacement, measure the current and the recharging voltage on the battery ends (FIG. B). The values detected must be  $1.5 \div 2 A$  and 13 V at 3000 rpm.

**B**

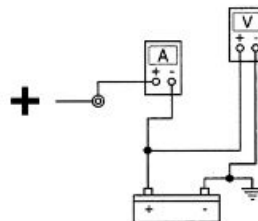


**FAULT 4**


a) By positioning tester 020331Y between the yellow wire terminal (8) on the regulator and the black wire (6) (FIG. D), check the generator output voltage is within 26 and 30 V at 3,000 rpm (this measurement must be carried out with the battery detached). In the event of anomalies, replace the stator; otherwise proceed to point b).

b) Yellow wire (1) attached to the regulator. Insert an ammeter between the stator's blue wire (2) and the battery, and check, using tester 020331Y, that the current output, at 3,000 rpm and with the battery kept between 12 and 13V, is approx. 1.5 - 2 A (FIG. C).

If the values thus obtained are lower than prescribed, proceed by replacing the regulator. Before carrying out inspections on the regulator and its electrical system, it is always advisable to check for continuity between the black wire and earth.

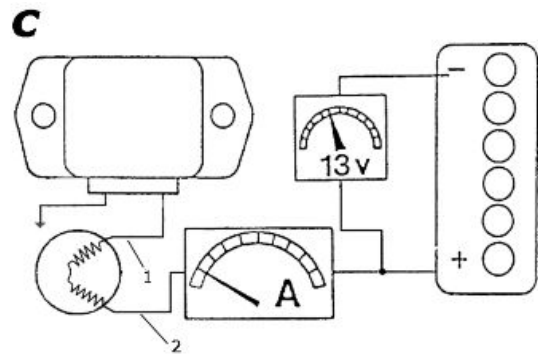

**D**

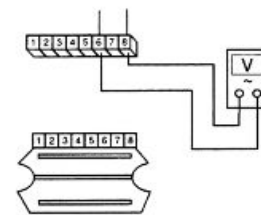


**FAULT 5**

(FIG. E) If the turn indicators do not work, proceed as follows:


- Remove the regulator connector, and insert the tester probes between the contact 5 (yellow-red) and the ground lead.
- Turn the key switch to ON and check that the battery is getting voltage. If no voltage is detected, check the wiring and the contacts on the key switch and on the battery.

**E**

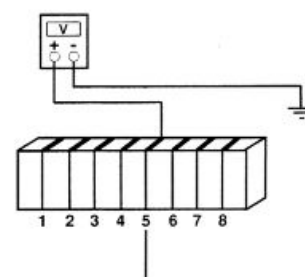


(FIG. F) Repeat the procedure now placing the tester probes between contacts 5 (yellow/ red) and 6 (black), and check the presence of the battery voltage with the key switch set to ON. If there is no voltage, check the regulator ground wiring.

**F**

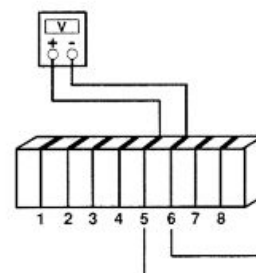

(FIG. G) If the above tests have positive results, jump the contacts 5 (yellow/red) and 7 (blue/black) on the connector, set the key switch to ON and shift the turn indicator switch to the right and left to see when the lights are steadily on (as they are powered directly from the battery). If even after this operation the turn indicators fail to turn on, check that the wiring is not damaged and the switch works properly. If these last two tests have a positive result, replace the regulator because it is certainly not functioning properly.

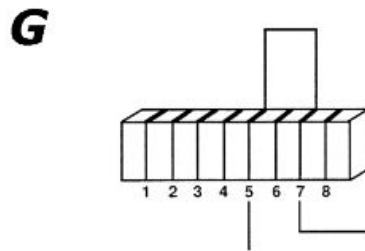


### FAULT 6

#### Oil reserve check warning light not working

(FIG H) - Disconnect the voltage regulator connector.

- Supply 12V to the terminal marked with number 5; with a digital tester check that the terminal number 4 has a similar output (12V) for about 5 seconds.
- If no voltage is detected for terminal number 4, replace the regulator.
- If there is voltage for terminal number 4, check both the installation and the bulb of the oil warning light.

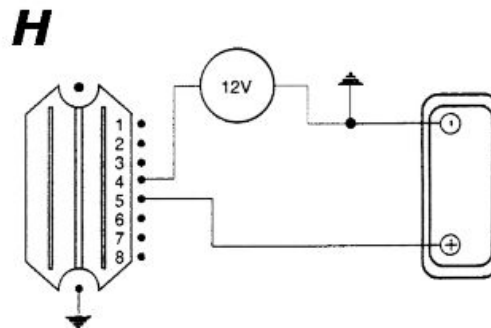

#### Specific tooling

**020331Y Digital multimeter**

## Sealed battery

INSTRUCTIONS FOR REFRESHING THE STOCK CHARGE OF AN OPEN CIRCUIT

### 1) Voltage check

Before installing the battery on the vehicle, check the open circuit voltage with a normal tester.

- If the voltage exceeds 12.60 V, the battery may be installed without any renewal recharge.
- If voltage is below 12.60 V, a renewal recharge is required as explained in 2).

### 2) Constant voltage battery charge mode

- Constant voltage equal to 14.40÷14.70V
  - Initial charge voltage equal to 0.3÷0.5 for nominal capacity
  - Duration of the charge: 10 to 12 h recommended
- Minimum 6 h

Maximum 24 h

### 3) Constant current battery charge mode

-Charge current equal to 1/10 of the nominal capacity of the battery

-Duration of the charge: 5 h

#### WARNING

**-WHEN THE BATTERY IS REALLY FLAT (WELL BELOW 12.6V) IT MIGHT BE THAT 5 HOURS OF RECHARGING ARE NOT ENOUGH TO ACHIEVE OPTIMAL PERFORMANCE. IN THESE CONDITIONS IT IS HOWEVER ESSENTIAL NOT TO EXCEED EIGHT HOURS OF CONTINUOUS RECHARGING SO AS NOT TO DAMAGE THE BATTERY ITSELF.**

## Dry-charge battery

#### WARNING

- Battery electrolyte is toxic and it may cause serious burns. It contains sulphuric acid. Avoid contact with eyes, skin and clothing. In case of contact with eyes or skin, flush abundantly with water for about 15 minutes and seek immediate medical attention.

In the event of accidental ingestion of the fluid, immediately drink large quantities of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil. Seek immediate medical attention

Batteries produce explosive gases; keep clear of free flames, sparks or cigarettes; ventilate the area when recharging the battery indoors.

Always protect your eyes when working close to batteries.

**Keep out of the reach of children.**

The battery is an electrical device which requires careful monitoring and diligent maintenance. The maintenance rules are:

#### 1) Check the level of the electrolyte


The electrolyte level must be checked frequently and must reach the upper level. Only use distilled water, to restore this level.

If it is necessary to add water too frequently, check the vehicle's electrical system: the battery works overcharged and is subject to quick wear.

#### 2) Load status check

After restoring the electrolyte level, check its density using an appropriate densitometer (see the figure).

When the battery is charged, you should detect a density of 30 to 32 Bé corresponding to a specific weight of 1.26 to 1.28 at a temperature of no lower than 15° C.

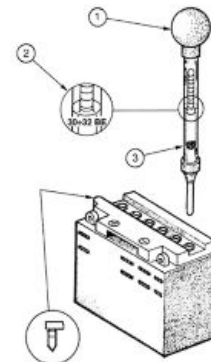

A density reading of less than 20° Bé indicates that the battery is completely flat and it must therefore be recharged.

After charging the battery, check each element electrolyte level and density. If the scooter is not used for a given time (1 month or more) it will be necessary to periodically recharge the battery.

The battery runs down completely in the course of three months.

If it is necessary to refit the battery in the vehicle, be careful not to reverse the connections, remembering that the earth wire (**black**) marked (-) must be connected to the - **negative** terminal while the other two **red** wires marked (+) must be connected to the terminal marked with the + **positive** sign.

Regular bench charging must be carried out with the specific battery charger, (single) or (multiple), setting the battery charger selector to the type of battery to be recharged. Connections to the power supply source must be implemented by connecting the corresponding poles (+ to+ and - to -).

#### 4) Cleaning the battery

The battery should always be kept clean, especially on its top side, and the terminals should be coated with Vaseline.

#### **WARNING**

- Before recharging the battery, remove the plugs of each cell. Keep the battery away from naked flames or sparks when charging.  
Remove the battery from the vehicle removing the negative clamp first.

#### **CAUTION**

**NEVER USE FUSES WITH A CAPACITY HIGHER THAN THAT RECOMMENDED.  
USING A FUSE OF UNSUITABLE RATING MAY SERIOUSLY DAMAGE THE VEHICLE OR EVEN CAUSE A FIRE.**

#### **CAUTION**

**DRINKING WATER CONTAINS MINERALS THAT CAN BE EXTREMELY HARMFUL TO THE BATTERY: USE DISTILLED WATER ONLY.**

#### **CAUTION**

**TO ENSURE MAXIMUM PERFORMANCE THE BATTERY MUST BE CHARGED BEFORE USE.  
INADEQUATE CHARGING OF THE BATTERY WITH A LOW ELECTROLYTE LEVEL BEFORE IT IS FIRST USED SHORTENS THE LIFE OF THE BATTERY.**



**Specific tooling****020333Y Single battery charger****020334Y Multiple battery charger**

---

- 1)- Remove the short closed tube and the caps, then pour sulphuric acid into the cells using the type specified for batteries, with a specific gravity of 1.26, corresponding to 30° Bé, at a minimum temperature of 15°C until the upper level is reached.
- 2) - Leave to rest for at least 2 hours; then, restore the level with sulphuric acid.
- 3)- Within the following 24 hours, recharge with the specific battery charger (single) or (multiple) at a density of about 1/10 of the battery nominal capacity and until the acid density is about 1.27, corresponding to 31° Bé, and these values are stabilised.
- 4) - Once the charge is over, level the acid (by adding **distilled water**). Close and clean carefully.
- 5)- Once the above operations have been performed, install the battery in the vehicle ensuring the connections between the wiring and the battery terminals are correct.

**WARNING**

**- ONCE THE BATTERY HAS BEEN INSTALLED IN THE VEHICLE IT IS NECESSARY TO REPLACE THE SHORT TUBE (WITH CLOSED END) NEAR THE + POSITIVE TERMINAL WITH THE CORRESPONDING LONG TUBE (WITH OPEN END), THAT YOU FIND FITTED TO THE VEHICLE, TO ENSURE THAT THE GASES THAT FORM CAN ESCAPE PROPERLY.**

**Specific tooling****020333Y Single battery charger****020334Y Multiple battery charger**

---

## INDEX OF TOPICS

ENGINE FROM VEHICLE

ENG VE

---

**Removal of the engine from the vehicle****Removing the engine from the frame**

---

- Disconnect the battery.
- Remove the muffler assembly.
- Remove the rear wheel.
- Remove the mechanical transmission of the rear brake.
- Disconnect the electric terminals.
- Remove the throttle grip and mixer transmissions.
- Disconnect the hoses (petrol-oil-vacuum-operated cock control).

**WARNING**

Be very careful when handling fuel.

**CAUTION**

When installing the battery, first attach the positive cable and then the negative cable.

**WARNING**

Wear safety goggles when using hitting tools.

---

# INDEX OF TOPICS

ENGINE

ENG

---

## Automatic transmission


---

### Transmission cover

- Loosen the 15 screws and remove the transmission cover with the aid of a mallet.

**N.B.**

**THE CRANKCASE IS SLIGHTLY BLOCKED BY THE TIGHT FIT BETWEEN THE SHAFT OF THE DRIVEN HALF-PULLEY AND THE BEARING HOUSED ON THE CRANKCASE.**

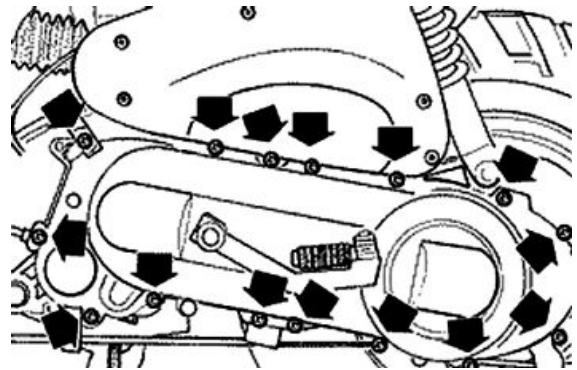



---

### Kickstart


- Remove the screws shown in the figure and remove the engine starting lever.
- For the assembly, work in reverse and tighten the screws to the prescribed torque..

#### Locking torques (N\*m)

**Starter lever replacement 12 to 13 Nm**

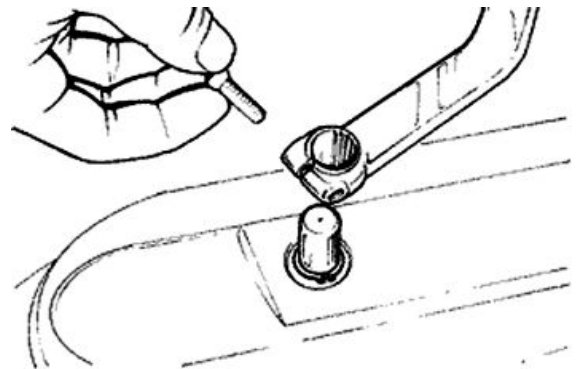

- Upon refitting, apply the recommended grease to the bushing, to the spring and along the toothed sector.
- Use the special tool for the charging of the spring, as shown in the figure.
- Refit the seeger ring after checking that it is in good condition.

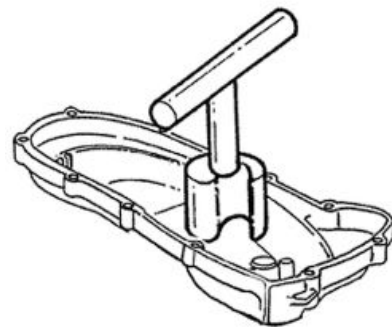

#### Specific tooling


**020261Y Starter spring fitting**

#### Recommended products

**AGIP GREASE MU3 Grease for odometer transmission gear case**

Soap-based lithium grease with NLGI 3; ISO-L-XBCHA3, DIN K3K-20

- Remove the seeger ring located on the exterior of the crankshaft.
- Dismantle the dog gear from its seat, slackening the tension that the toothed sector applies to it by means of the spring; to do this, it is necessary to rotate the toothed sector slightly (see the figure).

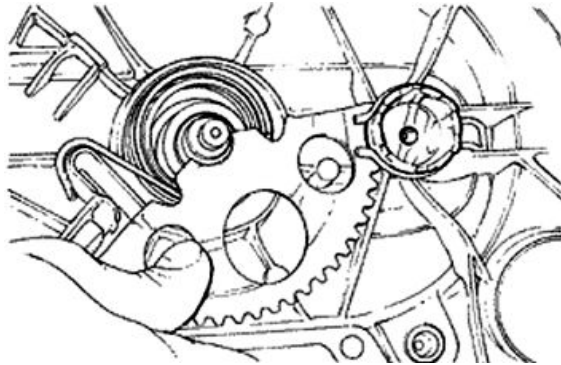**CAUTION**


WHILE REMOVING THE TOOTHED SECTOR, BE VERY CAREFUL OF THE SPRING TENSION: IT COULD CONSTITUTE A HAZARD FOR THE OPERATOR.

## Removing the driven pulley shaft bearing

- Slightly heat the crankshaft from the inside side to avoid damaging the coated surface and use the driven pulley shaft or a pin of the same diameter to remove the bearing.

**N.B.**

IN CASE OF DIFFICULTY A STANDARD 8MM-INSIDE DIAMETER EXTRACTOR CAN BE USED.

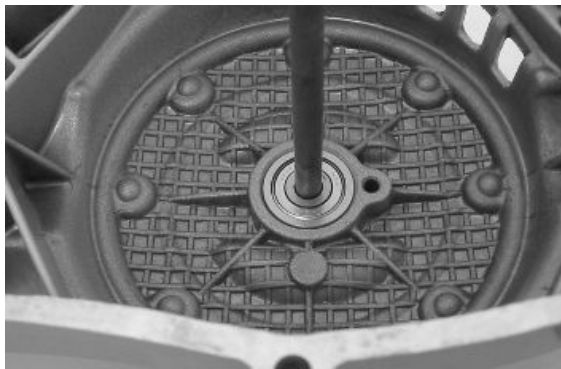

## Refitting the driven pulley shaft bearing

- Refit the bearing with the aid of a bushing with the same diameter as the external plate of the bearing after slightly heating the crankcase from the inside.

**N.B.**

WHEN REFITTING, ALWAYS REPLACE THE BEARING WITH A NEW ONE.

**CAUTION**

WHEN REMOVING/REFITTING THE BEARING, TAKE CARE NOT TO DAMAGE THE PAINTED SURFACE.

## Removing the driven pulley

- Lock the clutch bell housing with the specific tool.
- Remove the nut, the clutch bell housing and the whole of the driven pulley assembly.

**N.B.**

THE UNIT CAN ALSO BE REMOVED WITH THE DRIVING PULLEY MOUNTED.

### Specific tooling

020565Y Flywheel lock calliper spanner



## Inspecting the clutch drum

- Check that the clutch bell is not worn or damaged.
- Measure the inner diameter of the clutch bell.

### Characteristic

#### Clutch bell diameter/standard value

Ø 107+0.2 +0 mm

#### Clutch bell diameter/max. value allowed after use

Ø 107.5 mm

#### Eccentricity measured /max.

0.20 mm




## Removing the clutch


- Equip the tool with long pins screwed into position «A» from the outside, insert the entire driven pulley in the tool and put the central screw under stress.

**CAUTION**

THE TOOL WILL BE DEFORMED IF THE CENTRAL SCREW IS TIGHTENED UP TOO FAR.

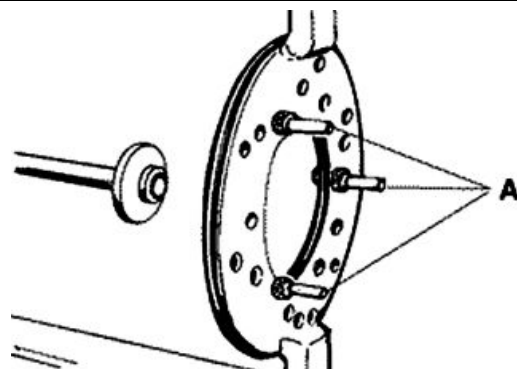

- Using a 34 mm socket wrench remove the clutch locking nut.
- Loosen the central screw thereby undoing the driven pulley unit
- Separate the components.

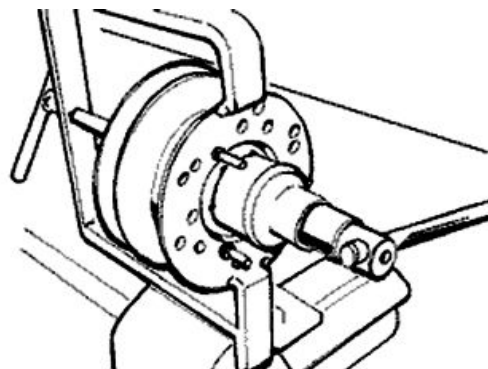

### Specific tooling

**020444Y Tool for fitting/ removing the driven pulley clutch**

## Inspecting the clutch

- Check the thickness of the clutch mass friction material.
- The masses must not show traces of lubricants; otherwise, check the driven pulley unit seals.

### N.B.

**UPON RUNNING-IN, THE MASSES MUST EXHIBIT A CENTRAL FAYING SURFACE AND MUST NOT BE DIFFERENT FROM ONE ANOTHER. VARIOUS CONDITIONS CAN CAUSE THE CLUTCH TO TEAR.**

### CAUTION

**DO NOT OPEN THE MASSES USING TOOLS TO PREVENT A VARIATION IN THE RETURN SPRING LOAD.**

### Characteristic

**Check minimum thickness**

1 mm



## Pin retaining collar

- Remove the collar with the aid of 2 screwdrivers.





- Remove the three guide pins and the mobile half pulley.



### Removing the driven half-pulley bearing

- Remove the roller bearing with the special extractor inserted from the bottom of the fixed half-pulley.

#### CAUTION

POSITION THE HOLDING EDGE OF THE EXTRACTION PLIERS BETWEEN THE END OF THE BEARING AND THE BUILT IN SEALING RING.

#### Specific tooling

001467Y029 Bell for bearings, O.D. 38 mm



- Remove the ball bearing retention snap ring.
- Expel the ball bearing from the side of the clutch housing by means of the special tool.

#### N.B.

PROPERLY SUPPORT THE HALF-PULLEY SO AS NOT TO DEFORM THE SLIDING SURFACE OF THE DRIVING BELT

#### Specific tooling


020376Y Adaptor handle

020363Y 20-mm guide



### Inspecting the driven fixed half-pulley

- Check that there are no signs of wear on the work surface of the belt. If there are, replace the half-pulley..
- Make sure the bearings do not show signs of unusual wear.
- Measure the external diameter of the pulley bushing.

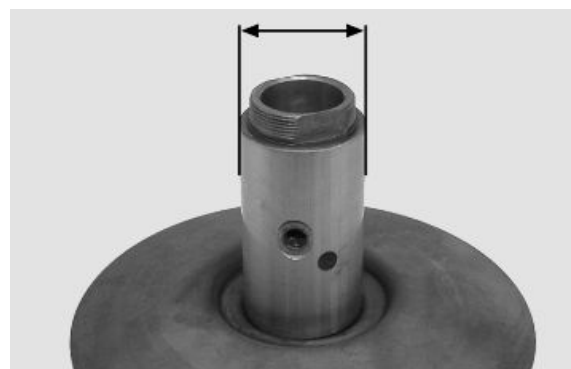

#### Characteristic

**Stationary driven half-pulley/Standard diameter**

Ø 33.965 to 33.985 mm

**Stationary driven half-pulley / Minimum diameter admitted after use**


Ø 33.96 mm

**Inspecting the driven sliding half-pulley**

- Remove the 2 inner sealing rings and the two O-rings.
- Measure the inside diameter of the mobile half-pulley bushing.

**Characteristic****Mobile driven half-pulley/ Maximum diameter allowed**

Ø 34.08 mm

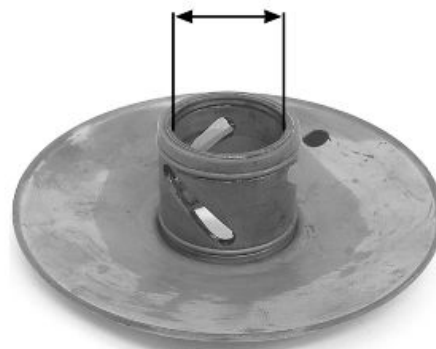

- Check the belt contact surfaces.
- Insert the new oil seal and O-rings on the mobile half-pulley.
- Fitting the half-pulley on the bushing.

**Recommended products****AGIP GREASE SM 2 Grease for the C-ring of the tone wheel**

Soap-based lithium grease containing NLGI 2 Molybdenum disulphide; ISO-L-XBCHB2, DIN KF2K-20



- Make sure the pins and collar are not worn, reassemble the pins and collar.
- Use a greaser with a curved spout to lubricate the driven pulley unit with around 6 g of grease. This operation must be done through one of the holes inside the bushing until grease comes out of the opposite hole. This procedure is necessary to prevent the presence of grease beyond the O-ring.

**Recommended products****AGIP GREASE SM 2 Grease for the C-ring of the tone wheel**

Soap-based lithium grease containing NLGI 2 Molybdenum disulphide; ISO-L-XBCHB2, DIN KF2K-20

## Refitting the driven half-pulley bearing

- Fit a new ball bearing with the specific tool.
- Fit the ball bearing retention snap ring.
- Fit the new roller bearing with the wording visible from the outside.

### CAUTION

PROPERLY SUPPORT THE HALF-PULLEY TO PREVENT DAMAGE TO THE THREADED END WHILE THE BEARINGS ARE BEING FITTED.

### Specific tooling

020376Y Adaptor handle

020456Y Ø 24 mm adaptor

020362Y 12 mm guide

020171Y Punch for Ø 17 mm roller case



## Inspecting the clutch spring

- Check that the contrast spring of the driven pulley does not show signs of deformation
- Measure the free length of the spring


### Characteristic

#### Standard length

118 mm

#### Minimum length allowed after use

XXXX

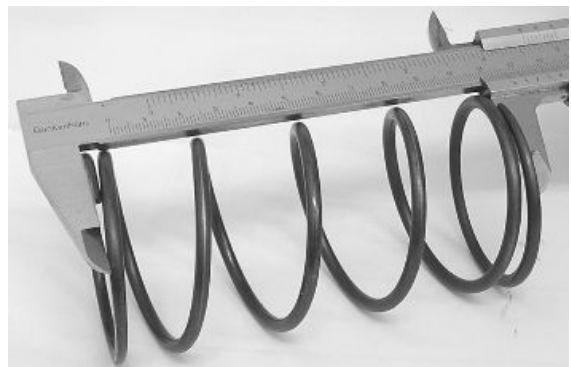

## Refitting the clutch

- Preassemble the driven pulley group with spring, sheath and clutch.
- Position the spring with the sheath
- Insert the components in the tool and preload the spring being careful not to damage the plastic sheath and the end of the threaded bar.



- Reassemble the nut securing the clutch and tighten to the prescribed torque.

**CAUTION**

SO AS NOT TO DAMAGE THE CLUTCH NUT USE A SOCKET WRENCH WITH SMALL CHAMFER.

**CAUTION**

POSITION THE NON-CHAMFERED SURFACES OF THE NUT IN CONTACT WITH THE CLUTCH

**Locking torques (N\*m)**

Nut locking clutch unit on pulley  $55 \div 60$  Nm

**Refitting the driven pulley**


- Refit the driven pulley assembly, the clutch bell and the nut, using the specific tool.

**Specific tooling**

020565Y Flywheel lock calliper spanner

**Locking torques (N\*m)**

Driven pulley shaft nut 40 to 44 Nm

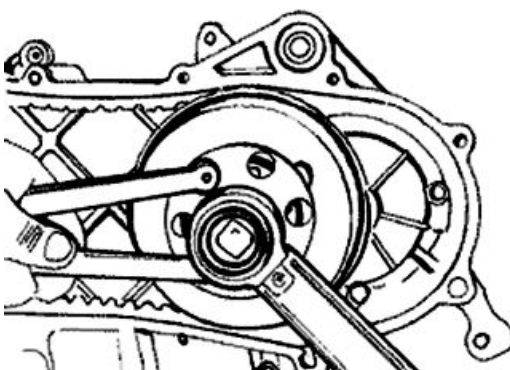
**Drive-belt**

- Make sure the driving belt is not damaged and does not have cracks in the toothed grooves.
- Check the width of the belt.

**Characteristic**

Transmission belt/Minimum width

17.5 mm

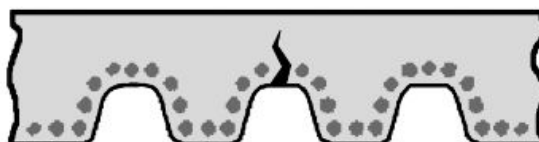

## Removing the driving pulley

- Lock the driving pulley using the appropriate tool.
- Remove the central nut with the related washer, then remove the drive and the plastic fan.
- Remove the stationary half-pulley.



- Remove the belt, washer and remove the mobile half-pulley with its bushing, being careful that the rollers and contrast plate fitted loosely on it do not come off.

### Specific tooling

**020451Y Starting ring gear lock**

## Mixer gears and belt

- Remove gear and belt.

#### CAUTION


PAY PARTICULAR ATTENTION TO NOT TOUCHING OR BENDING THE BELT BECAUSE THIS COULD BREAK SUDDENLY DURING OPERATION.

#### CAUTION

ON REFITTING, MAKE SURE THAT DIRT DOES NOT GET INTO THE INNER BUSHING OF THE MIXER CONTROL GEAR AND THAT IT DOES NOT EXERT ANY STRESS ON THE CRANKCASE PIN.


#### N.B.

REPLACE THE BELT EVERY 20000 KM.

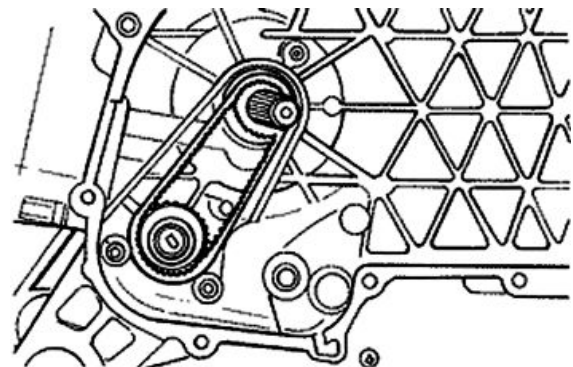

## Inspecting the rollers case

- 1) Check that the bushing and the sliding rings of the mobile pulley do not show signs of scoring or deformation.
- 2) Check the roller running tracks on the contact pulley; there must not be signs of wear and check the condition of the contact surface of the belt on the half-pulleys (mobile and stationary).
- 3) Check that the rollers do not show signs of marked facetting on the sliding surface and that the metallic insert does not come out of the plastic shell borders.

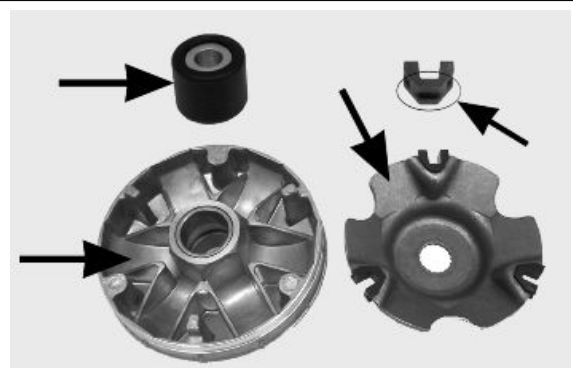

4) Check the integrity of the sliding blocks of the contact plate.

- Check that the internal bushing shown in the figure is not abnormally worn and measure inside diameter «A».

- Measure outside diameter «B» of the pulley sliding bushing shown in the figure.

**CAUTION**

DO NOT LUBRICATE OR CLEAN THE BUSHING.

**Characteristic**

**Driving pulley / Maximum diameter:**

20.12 mm

**Driving pulley/ Standard diameter:**


20.021 mm

**Driving pulley bushing/ Diameter maximum:**

XXX mm

**Driving pulley bushing/ Standard diameter:**

20 -0.020/-0.041mm

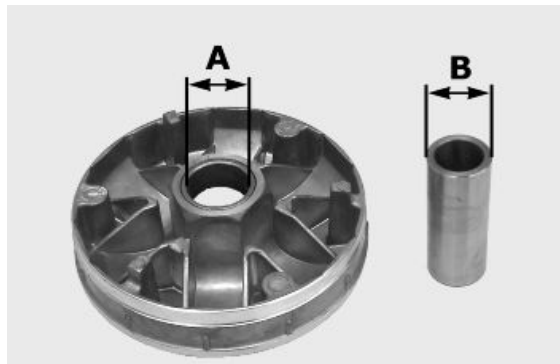

## Refitting the driving pulley

- Manually move the movable driven half-pulley away by pulling it towards the clutch unit and insert the belt observing the direction of rotation of the first fitting.

**N.B.**

IT IS GOOD PRACTICE ALWAYS TO FIT THE BELT SO THAT THE WORDS CAN BE READ IN CASE IT DOES NOT SHOW A FITTING SIDE.



- Refit the components of the assembly (roller container assembly with bushing, limiting washer, stationary half-pulley, cooling fan belt with drive, washer and nut).

- With the specific tool, tighten the lock nut to 20 Nm and then perform a final 90° locking in order to prevent the rotation of the driving pulley.

**N.B.**

REPLACE THE NUT WITH A NEW ONE AT EVERY REFIT  
**CAUTION**

UPON FITTING THE DRIVING PULLEY UNIT IT IS OF UTMOST IMPORTANCE THAT THE BELT IS FREE INSIDE IN



ORDER TO AVOID WRONG TIGHTENING AND CONSEQUENTLY DAMAGING THE CRANKSHAFT KNURLING.

### Specific tooling

020451Y Starting ring gear lock

### Locking torques (N\*m)

Crankshaft pulley nut 18 to 20 + 90° Nm

For 25 km/h engine type versions, the limit washer is 5.5 mm thick

---


## End gear

---

### Removing the hub cover

---

- Remove the transmission cover
- Remove the clutch assembly
- Discharge the rear hub oil.
- Remove the 5 screws indicated in the figure.
- Remove the hub cover with driven pulley shaft.

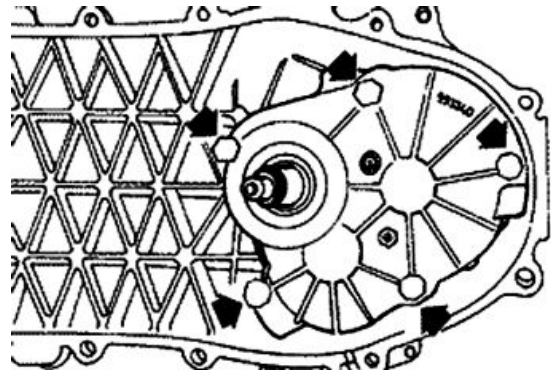

### See also


[Refitting the clutch](#)

---

### Removing the wheel axle


---

- Remove the intermediate gear and the complete gear wheel axle.
- When removing the intermediate gear pay attention to the various shim adjustments.

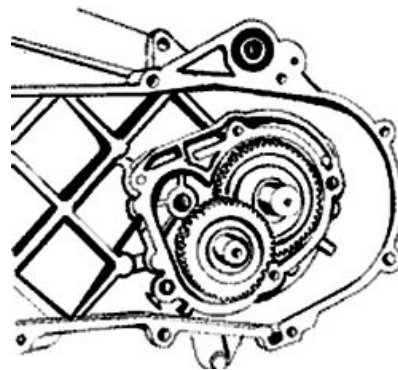

## Removing the wheel axle bearings

- Remove the oil seal and the Seeger ring.
- Remove the bearing by pushing from the outside towards the inside of the gear compartment, using the appropriate punch.

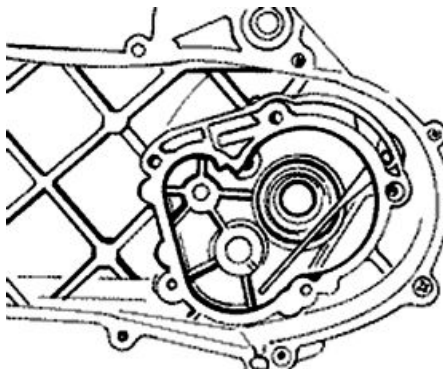

### Specific tooling


020363Y 20-mm guide

020376Y Adaptor handle

020358Y 37x40-mm Adaptor

## Removing the driven pulley shaft bearing


- Remove the Seeger ring inside the cover.
- Remove the oil seal from the outside.
- Remove the centring dowels and position the cover on a plane.
- Position the special tool on the internal track of the bearing and remove said bearing with the aid of a press.

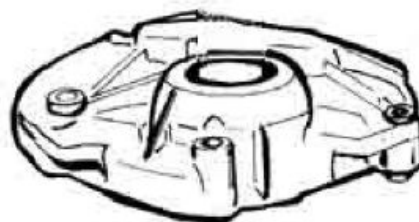

### Specific tooling

020452Y Tube for removing and refitting the driven pulley shaft

- Position the special tube on the internal raceway of the bearing and from the shaft toothed side as indicated in the figure. Expel the driven pulley shaft with the aid of a press.

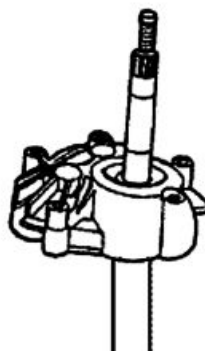


### Specific tooling

020452Y Tube for removing and refitting the driven pulley shaft



## Inspecting the hub shaft

- Check the three shafts for wear or distortion of the toothed surfaces, the bearing housings, and the oil seal housings.
- In case of anomalies, replace the damaged components.
- Check capacity ( A ) of the transmission gear (wear, deformations, etc.)
- Check the pulley shaft seating: Superficial wear ( B ) may indicate irregularities in the crankcase seatings or in the pulley shaft capacities

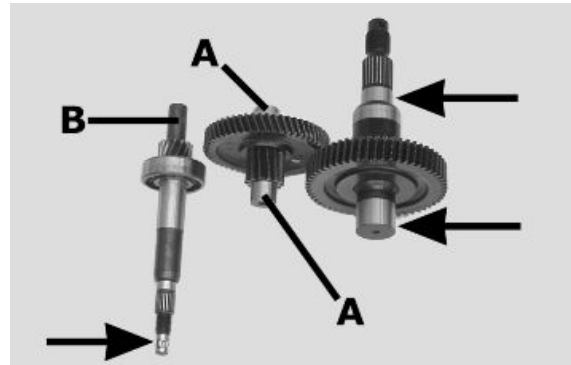


## Inspecting the hub cover

- Check that the fitting surface is not dented or distorted.
- If faults are found, replace the hub cover.

## Refitting the driven pulley shaft bearing

- Support the inner track of the bearing from the outside of the hub cover with the specific tool positioned under the press and insert the driven pulley axle.
- Refit the oil seal flush with the cover.

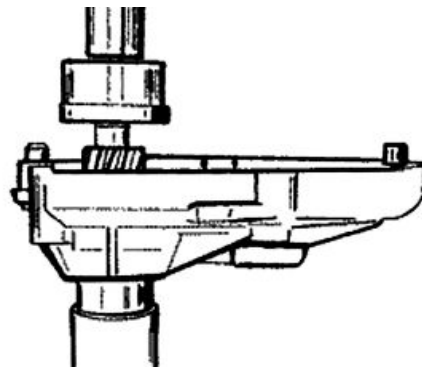

### Specific tooling

#### 020452Y Tube for removing and refitting the driven pulley shaft

- Heat the hub cover and insert the bearing with the specific punch.
- Fit the snap ring with the concave or radial part on the bearing side.

**N.B.**

**FIT THE BALL BEARING WITH THE SHIELD FACING THE OIL SEAL.**


### Specific tooling

**020151Y Air heater**

**020376Y Adaptor handle**

**020439Y 17-mm guide**


**020358Y 37x40-mm Adaptor**

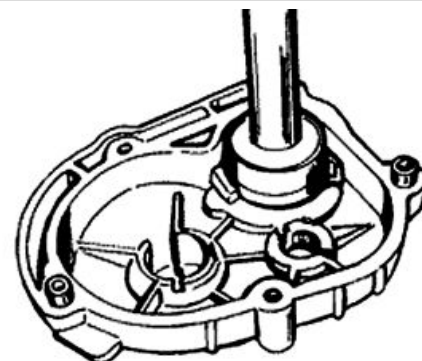

---

## Refitting the wheel axle bearing

- Heat the half crankcase on the transmission side using a thermal gun.
- After lubricating its outer strip, insert the bearing with the special adapter with the aid of a hammer.
- Refit the Seeger ring and the oil seal using the 42 x 47 mm adapter and the handle.

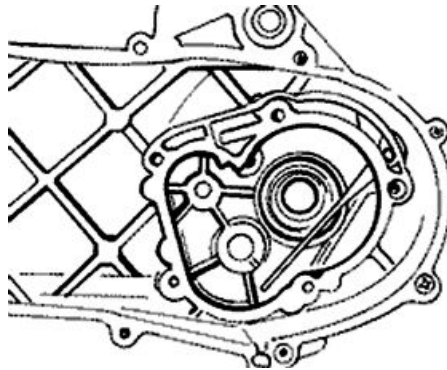

### Specific tooling

**020151Y Air heater**

**020376Y Adaptor handle**


**020363Y 20-mm guide**

**020359Y 42x47-mm Adaptor**

---

## Refitting the hub cover

- Refit the whole wheel axle.
- Refit the intermediate gear paying attention to the two shim washers.
- Apply LOCTITE 510 for surfaces to the hub covers and refit the same with driven pulley shaft.
- Refit the 5 screws and tighten them to the specified torque.

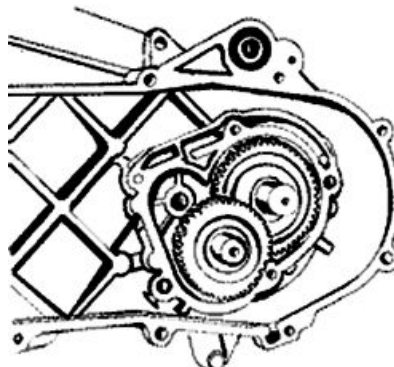


### N.B.

**CLEAN THE CONTACT SURFACES OF THE HUB COVER AND THE HALF CRANKCASE OF RESIDUE FROM PREVIOUS GASKETS BEFORE APPLYING A NEW ONE.**

### Locking torques (N\*m)

**Locking torque: 11 to 13 Nm**

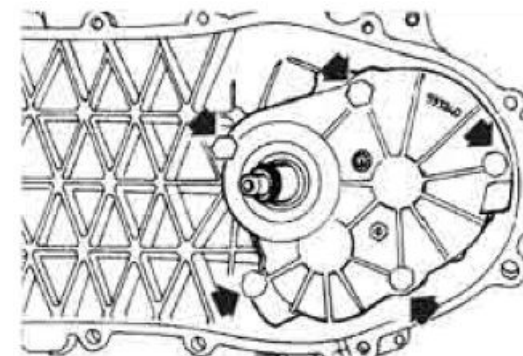


---


## Flywheel cover

---


---

**Cooling hood**

- Remove the four fixings shown in the figure.
- Remove the fan cover

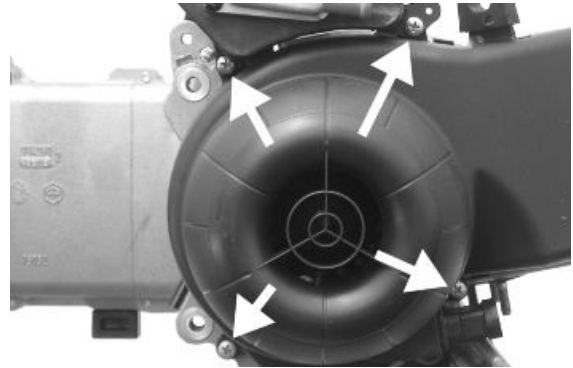


- 
- Remove the oil piping retention band from the hood
  - Remove the 2 screws shown in the figure

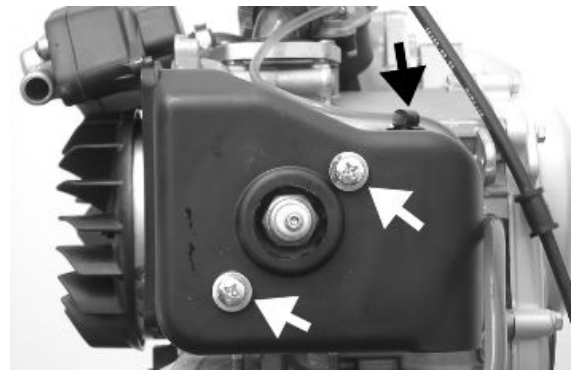

---

**Cooling fan**


- 
- Remove the cooling fan by acting on the three fixings indicated in the figure.

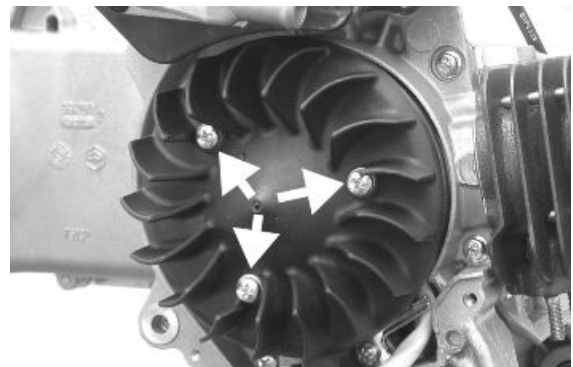

---

## Removing the stator

- Remove the three stator fixings shown in the photo
- Remove the two pick-up fixings shown in the photo
- Remove the stator with the wiring

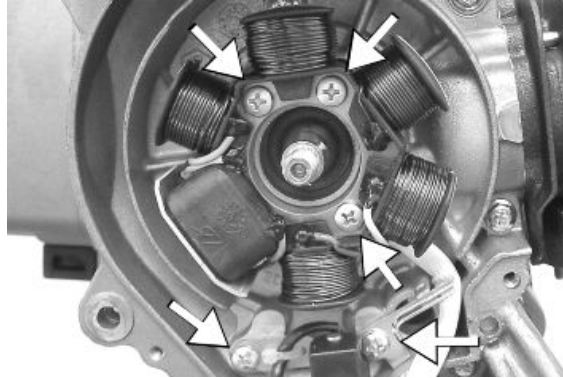

---

## Refitting the stator

- Refit the stator and flywheel carrying out the removal procedure in reverse, tightening the retainers to the specified torque.

**N.B.**

**THE PICK-UP CABLE MUST BE POSITIONED ADHERING TO THE FUSION TONGUE ON THE CRANKSHAFT IN SUCH A WAY AS TO AVOID BEING CRUSHED BY THE FAN COVER ASSEMBLY.**

**Locking torques (N\*m)**

**Pick-up screws 3 ÷ 4 Stator screws 3 ÷ 4**


---

## Flywheel and starting

---

### Removing the starter motor

Remove the two clamps shown in the figure

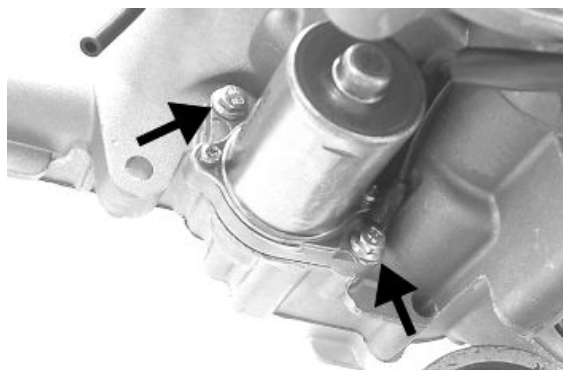

## Removing the flywheel magneto

- Lock the rotation of the flywheel using the calliper spanner.
- Remove the nut.

### CAUTION

THE USE OF A CALLIPER SPANNER OTHER THAN THE ONE SUPPLIED COULD DAMAGE THE STATOR COILS



- Extract the flywheel with the extractor.

### Specific tooling


020565Y Flywheel lock calliper spanner

020162Y Flywheel extractor



## Inspecting the flywheel components

- Check the condition of the flywheel and any distortions that might cause rubbing on the stator and on the Pick-Up.

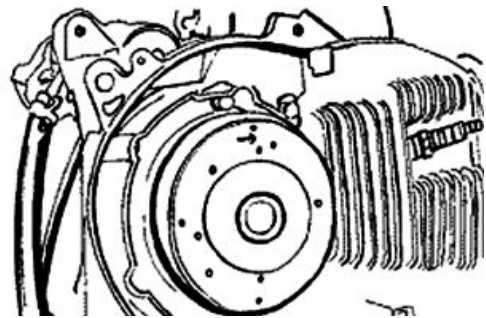

## Refitting the flywheel magneto

- Fit the flywheel being careful to insert the key properly.
- Lock the flywheel nut at the prescribed torque
- Check the Pick-Up air gap.
- The air gap may not be modified in the fitting of the Pick-Up.
- Other values derive from deformations visible on the Pick-Up support.



**N.B.**

A VARIATION OF THE AIR GAP DISTANCE CAN LEAD TO A VARIATION IN THE IGNITION ADVANCE SUCH AS TO CAUSE PINGING, KNOCKING ETC.

**Locking torques (N\*m)**

Flywheel nut 40 to 44 N.m

**Refitting the starter motor**


- Fit a new O-ring on the starter and lubricate it.
- Fit the starter on the crankcase, locking the two screws to the prescribed torque.

**N.B.**


REFIT THE REMAINING PARTS AS DESCRIBED IN THE CYLINDER HEAD, TIMING, LUBRICATION, FLYWHEEL AND TRANSMISSION CHAPTERS.

**Locking torques (N\*m)**


Starter screws 11 ÷ 13

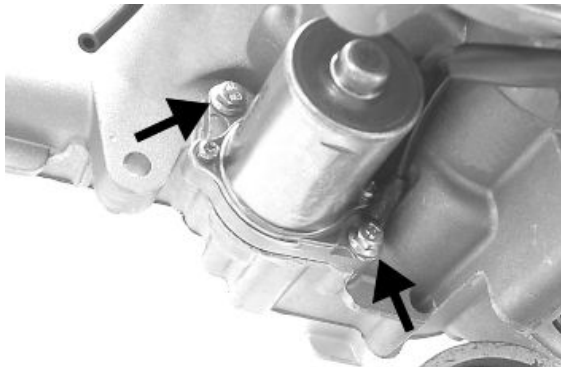**Cylinder assy. and timing system****Removing the intake manifold**

Use an anti-tampering TORX spanner to remove the two clamping screws of the intake manifold

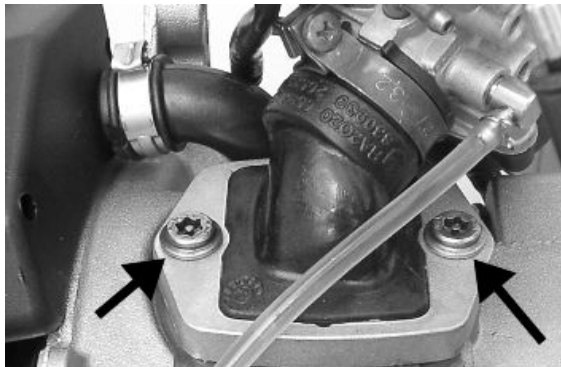**Removing the cylinder head**

Remove the 4 screws shown in the figure

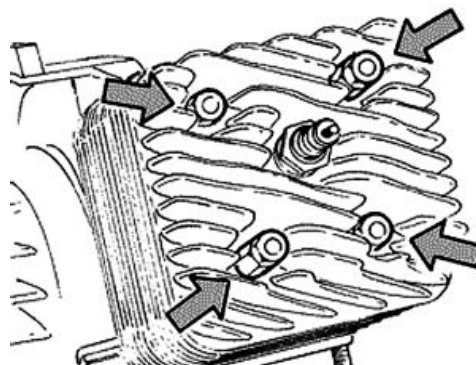


---

## Removing the cylinder - piston assy.

---


Remove the cylinder very carefully

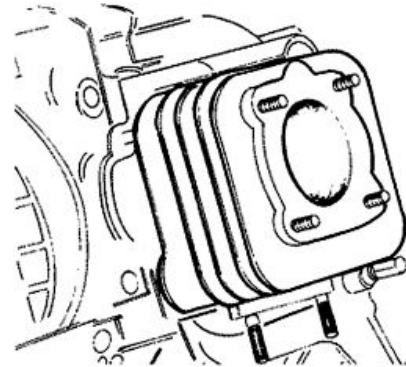

Remove the snap rings and remove the pin

### CAUTION

AFTER EACH REMOVAL OPERATION REPLACE THE PIN RETENTION SNAP RINGS

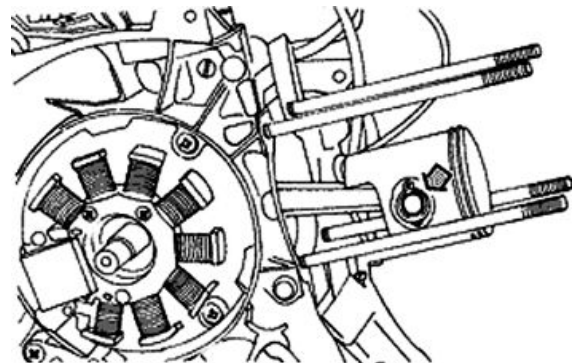


---

## Inspecting the small end

---

- Measure the internal diameter of the small end using an internal micrometer.

### N.B.

IF THE DIAMETER OF THE ROD SMALL END EXCEEDS THE MAXIMUM DIAMETER ALLOWED, SHOWS SIGNS OF WEAR OR OVERHEATING REPLACE THE CRANKSHAFT AS DESCRIBED IN THE "CRANKCASE AND CRANKSHAFT" CHAPTER".

### Characteristic

**Rod small end: standard diameter**

17 +0.011-0.001

**Rod small end: maximum allowable diameter**

17,060 mm



## Inspecting the wrist pin

- Check the wrist pin external diameter using a micrometer

### Characteristic

**Wrist pin: standard diameter**

12 +0.005 +0.001 mm



## Inspecting the piston

- Measure the bearings on the piston using a bore meter
- Calculate the piston-pin coupling clearance.

### Characteristic

**Wrist pin housing: standard diameter**


12 +0.007 +0.012

**Wrist pin housing: standard clearance**

0.002 ÷ 0.011 mm



- Measure the outer diameter of the piston, perpendicular to the pin axis.
  - Take the measurement in the position shown in the figure
- To classify the cylinder-piston fitting, check the appropriate table

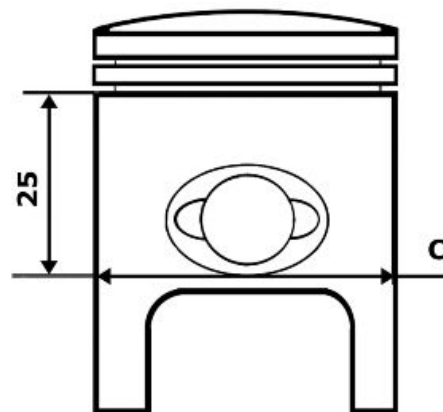

### See also

[Cylinder - piston assy.](#)




## Inspecting the cylinder

- Check that the cylinder does not show seizures. Otherwise, replace it or adjust it respecting the allowable increases

- Measure the internal diameter of the cylinder with a bore meter, according to the directions given in the figure

- Check that the fitting surface with the head is not dented or distorted.

To classify the cylinder-piston fitting, check the appropriate table

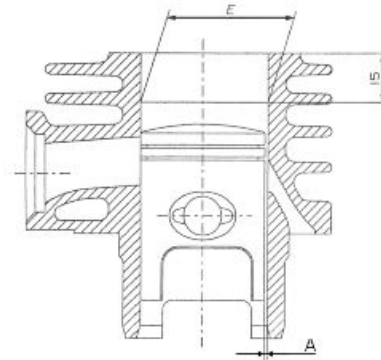

### See also

[Cylinder - piston assy.](#)


## Inspecting the piston rings

- Alternatively insert the two sealing rings in the cylinder

Using the piston, insert the seals perpendicularly to the cylinder axis.

- Measure the opening of the sealing rings using a thickness gauge as shown in the photograph

- If the values are higher than the values prescribed in the chart, substitute the rings

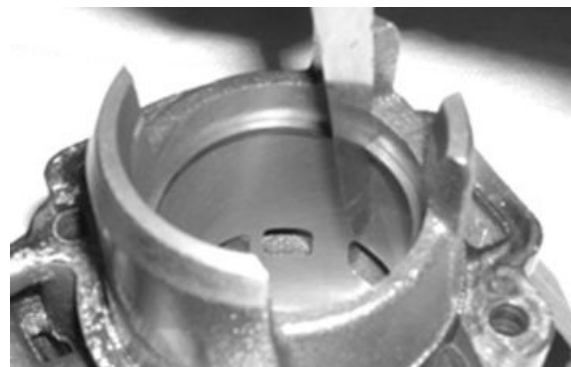

## Removing the piston

- Position the snap ring in detail 1 with the opening straddling the arrow printed on the tool.

-Push detail 2 into detail 1 until the stop and extract detail 2.

- Insert detail 3 into detail 1, position the assembly in the snap ring assembly area, and push detail 3 all the way in.

**N.B.**

**REFIT THE REMAINING PARTS FOLLOWING THE OPERATIONS IN REVERSE ORDER FROM THE REMOVAL OPERATIONS**

### Specific tooling

**020166Y Pin lock fitting tool**

**Locking torques (N\*m)**

**Locking head nuts: 10 to 11 N·m**

- Use new wrist pin snap rings.
- Use new cylinder base gasket.
- Before refitting carefully clean all the surfaces.
- Use oil to be mixed during the fitting of the piston and the cylinder.



**CAUTION**

POSITION THE ARROW PRINTED ON THE PISTON CROWN TOWARDS THE EXHAUST OPENING. THE WRIST PIN SNAP RINGS MUST BE POSITIONED ON THE PISTON WITH THE SPECIFIC TOOL

**Recommended products**

**AGIP CITY TEC 2T Oil**

Recommended oil

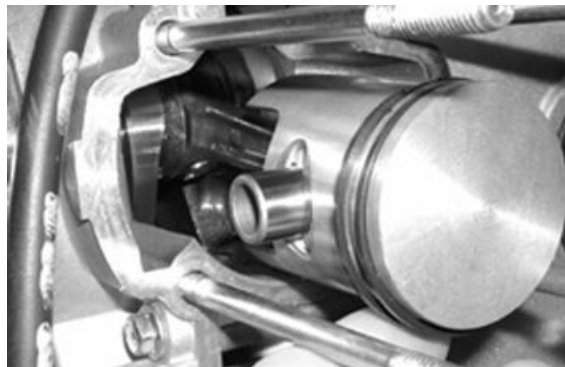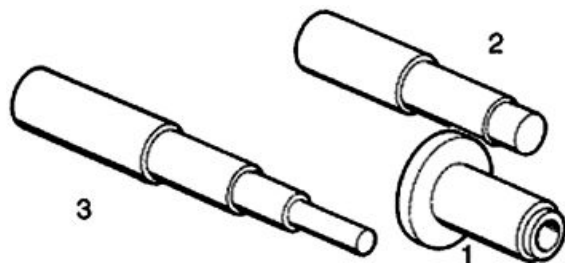


---

## Inspecting the timing system components

**CAUTION**

CHECK THE CORRECT REED UNIT SEAL; NO LIGHT MUST PASS BETWEEN THE SUPPORT AND LAMELLA.

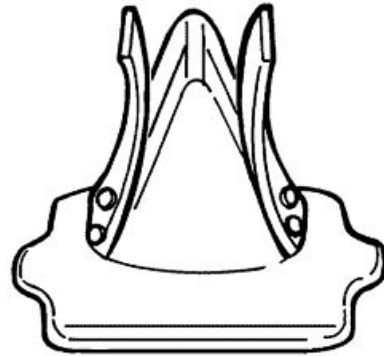


---

## Crankcase - crankshaft


---

### Splitting the crankcase halves

Remove the eight crankcase union fasteners.

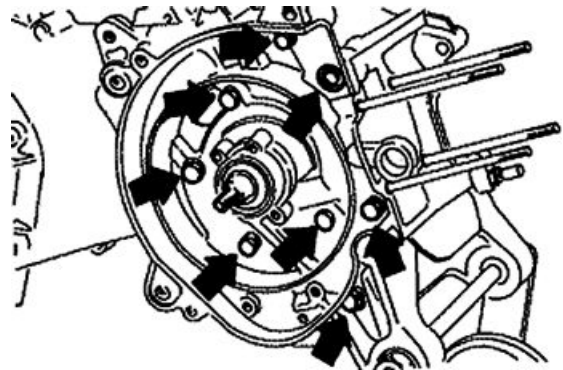

Install the special strip on the half crankcase on the flywheel side and separate the half crankcase on the flywheel side from the transmission side

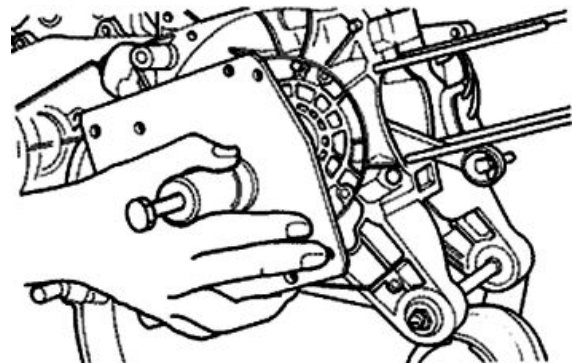**Specific tooling**


**020163Y Crankcase splitting plate**

## Removing the crankshaft

- Install the specific tool on the half crankcase on the transmission side using four M6 screws of an adequate length.
- Remove the crankshaft from the transmission side half crankcase

### Specific tooling

**020163Y Crankcase splitting plate**

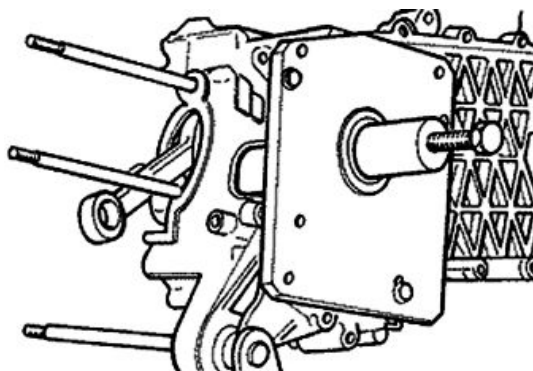

## Removing the crankshaft bearings

The bearings can stay on either the half crankcase or the crankshaft indifferently

- Using the special tool, remove any bearings that have been left on the crankshaft

### N.B.

The half rings must be inserted on the bearings with a few mallet blows.

### Specific tooling

**004499Y001 Bearing extractor bell**

**004499Y006 Bearing extractor ring**

**004499Y002 Bearing extractor screw**


**004499Y007 Half rings**

- Using the specific tool remove any bearings left on the half crankcase

### Specific tooling

**001467Y007 Driver for OD 54 mm bearing**

**001467Y006 Pliers to extract 20 mm bearings**

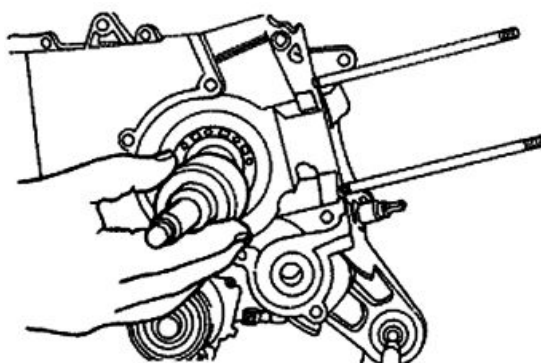


## Refitting the crankshaft bearings

Heat the bearings in an oil bath at around 150°C and fit them on the crankshaft, if necessary using a section of tube that acts on the bearing's inner track


### Specific tooling

020265Y Bearing fitting base

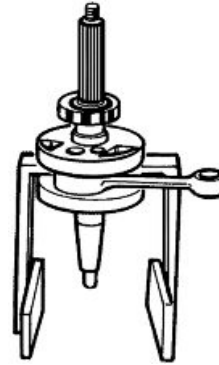

## Inspecting the crankshaft alignment

With the specific tool shown check that the eccentricity of the surfaces of diam. «A»-«B»-«C» are within 0.03 mm. (reading limit on the dial gauge); in addition, check the eccentricity of diam. «D», for which a maximum reading of 0.02 mm is permitted. In the case where eccentricity is not much above prescribed levels, **straighten** the shaft by acting on the counterweights with a shim or tighten them in a clamp (with an aluminium bushing) as required..

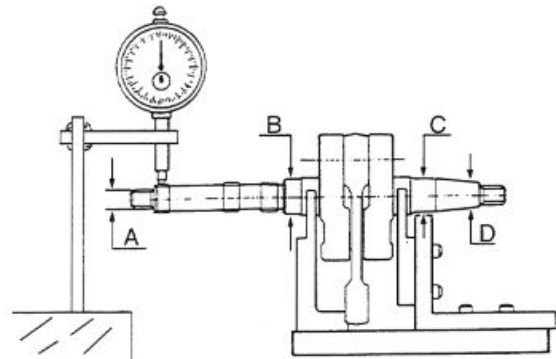


### Specific tooling

020335Y Magnetic support for dial gauge


020074Y Support base for checking crankshaft alignment

## Refitting the crankshaft


- Position the transmission side half crankcase on two wooden supports
- Using a thermal gun, heat the bearing seat to about 120°

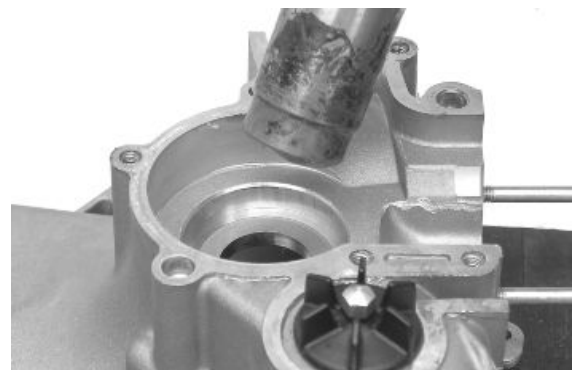

- Firmly insert the crankshaft until the bearing reaches the end-of-stroke stop

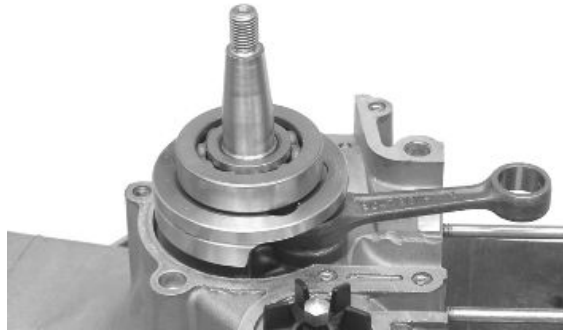

- Let the temperature of the half crankcase settle at the temperature of the crankshaft.
- Again install the special crankcase separation plate **NOT** installing the crankshaft protection
- During the assembly phase keep the central thrust screw loose.
- Take the four clamping screws to the end of the stroke and loosen them again with the same angle (e.g. 90°)
- When the temperature has settled, preload the thrust screw of the tool manually until the ball bearing clearance is cancelled out.

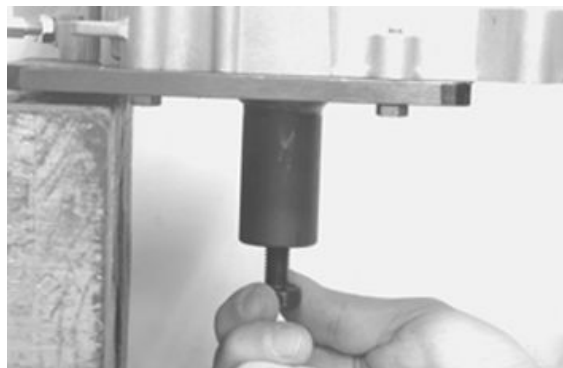

### Specific tooling

**020163Y Crankcase splitting plate**

## Refitting the crankcase halves

- Prepare the coupling surface with LOCTITE 510 applying a thin layer of it after degreasing the surface using a suitable solvent (e.g. trichloroethylene)
- Heat the flywheel-side half crankcase with a thermal gun.


### Recommended products

**Loctite 510 Liquid sealant**

Gasket




- Keeping the half crankcase on the transmission side, insert the flywheel side half crankcase with a clean precise movement
- Insert at least three clamping screws and tighten up rapidly
- Insert the other 5 screws and tighten them to the specified torque.

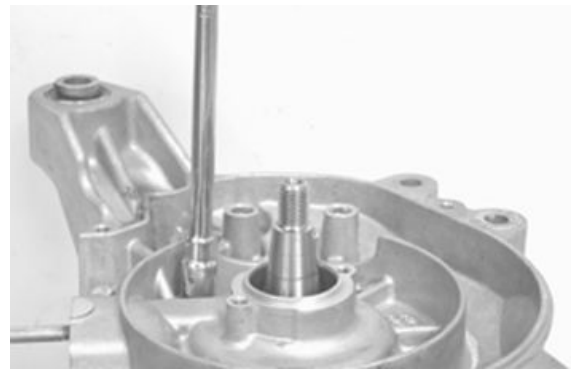

### **Locking torques (N\*m)**

#### **crankcase coupling screws 11 - 13**

- Move the crankcase separation plate in a position back from the one indicated in the figure
  - Install the special magnetic support with dial gauge at the end of the crankshaft
  - Check the axial clearance of the crankcase
- If this is not within the maximum limit allowed, repeat the crankcase coupling procedure

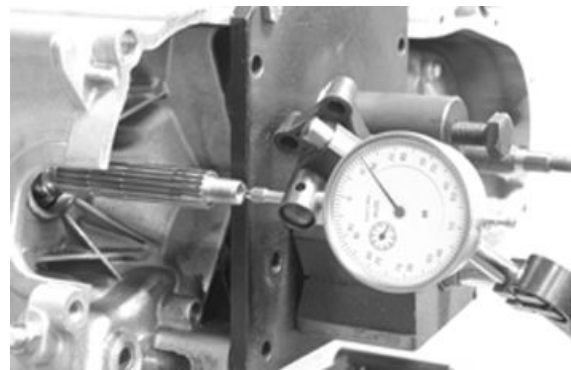

### **Specific tooling**

#### **020335Y Magnetic support for dial gauge**

#### **Characteristic**

##### **Axial clearance with warm crankcase**

0.10 ÷ 0.12 mm

##### **Axial clearance with cold crankcase**

0.06 to 0.08 mm

##### **Limit value with cold crankcase**

0.02 ÷ 0.03 mm

---

## **Lubrication**

---

## **Crankshaft oil seals**

---

---

## Refitting

- Install a new flywheel-side oil seal only with the special tool's punch

The flywheel-side oil seal is recognised by its smaller diameter

**N.B.**

**THE USE OF THE SPECIFIC TOOL IS NOT COMPATIBLE WITH THE FITTED WRENCH**

### Specific tooling

**020340Y Flywheel and transmission oil seals fitting punch**



- Install a new transmission side oil seal using the special tool with adapter ring.

The transmission-side oil seal is recognised by the larger diameter

### Specific tooling

**020340Y Flywheel and transmission oil seals fitting punch**




---

## Oil pump

---


### Removal

- Remove the 2 screws shown in the figure

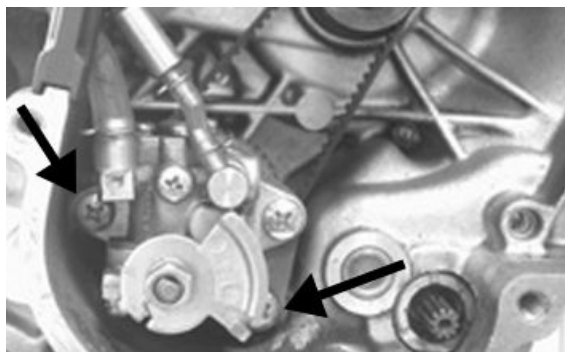




Remove the tube passage seal from the crankcase shown in the figure

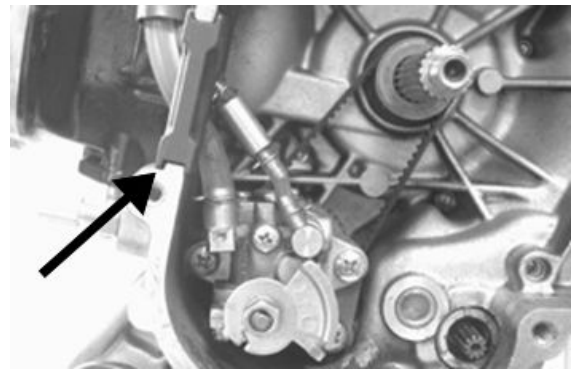

## Refitting


To refit, perform the steps in the reverse direction to disassembly

Remember to drain after refitting using the screw shown in the figure

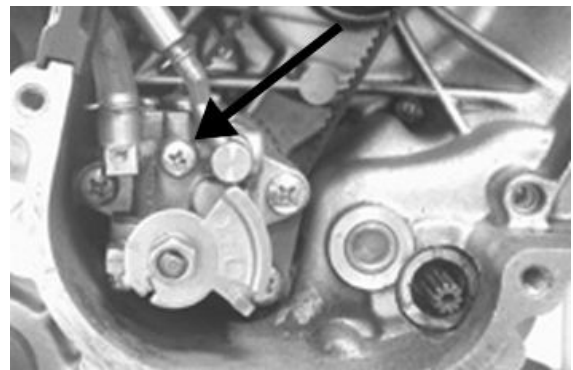

## Fuel supply

- Disconnect the fuel supply and the suction taking pipe from the carburettor.
- Check that there are no fuel leaks between the two tubes.
- Close the fuel outlet pipe.
- By means of the MITYVAC pump apply 0.1 bar of suction to the tap.
- Make sure that the suction is kept stable and that there are no fuel leaks.
- Reconnect the suction pipe to the manifold.
- Position the fuel pipe with the outlet at the point of the tap.
- Turn the engine by using the starter for five seconds with the carburettor at minimum.
- Take up the fuel by means of a graded burette.

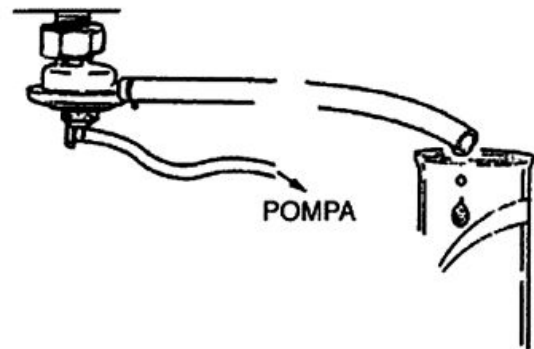

### N.B.

THE MEASUREMENT MAY BE FALSIFIED BY THE INCORRECT NUMBER OF REVS OR BY THE WRONG POSITION

OF THE TUBE. IN THIS CASE, THE TENDENCY IS TO OBTAIN A REDUCED FUEL FLOW RATE. THE SUCTION OUTLET ON THE MANIFOLD HAS A SECTION INTENTIONALLY REDUCED FOR THE PURPOSE OF ENHANCING THE SUCTION PULSATION AND THEREBY GUARANTEE A CONSTANT TAP FLOW RATE.

### Specific tooling


020329Y Mity-Vac vacuum-operated pump

### Characteristic

#### Minimum flow rate

20 cc

- 
- Completely empty the fuel tank.
  - Remove the petrol delivery pipe and the low-pressure pipe.
  - Loosen the clip and remove the cock.
  - Clean the tank and the filter of the cock with a specific solvent.
  - Refit the cock making sure that there is an O-Ring.
  - Turn the cock to the direction it had before it was removed and block the clip.

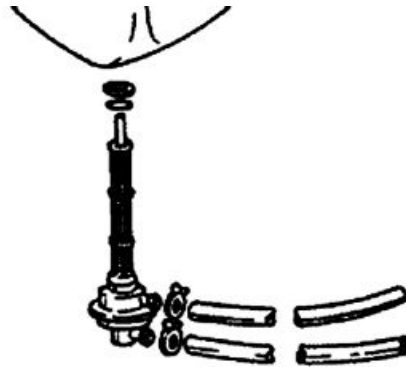

#### N.B.

THE FILTER CAN BE UNSCREWED FROM THE COCK TO FACILITATE CLEANING.

---

## INDEX OF TOPICS

**S**SUSPENSIONS

**SUSP**

---

This section is devoted to operations that can be carried out on the suspension.

---

## Front

---


### Removing the front wheel

---

- Remove the five Allen screws that fix the wheel to the hub.

**N.B.**

**BEFORE REMOVING THE WHEEL HUB, REMOVE THE BRAKE CALLIPER.**

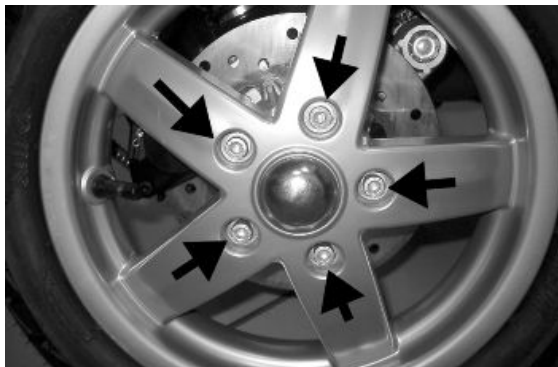

---

### Front wheel hub overhaul

---

- Remove the ball bearing check Seeger ring indicated in the picture



Extract the ball bearing using the specific tool

#### Specific tooling

001467Y014 Pliers to extract  $\varnothing$  15-mm bearings

001467Y017 Bell for bearings, OD 39 mm



- Remove the oil seal on the roller bearing side using a screwdriver.



- Remove the roller bearing using the specific tool

### Specific tooling

**020376Y Adaptor handle**

**020456Y Ø 24 mm adaptor**

**020363Y 20-mm guide**



- Heat the roller bearing seat with a heat gun
- Use the specific tool to introduce and push the bearing until it stops, with the shielded side facing out
- Refit the ball bearing check Seeger ring

### Specific tooling

**020151Y Air heater**

**020376Y Adaptor handle**

**020359Y 42x47-mm Adaptor**

**020412Y 15-mm guide**



- Use the specific tool to fit and push the roller casing until it stops
- Refit the oil seal on the roller bearing side
- Lubricate the area between the roller bearing and the ball bearing

### Specific tooling

**020038Y Punch**

### Recommended products

**AGIP GREASE MU3 Grease for odometer transmission gear case**




Soap-based lithium grease with NLGI 3; ISO-L-XBCHA3, DIN K3K-20

## Refitting the front wheel

- When refitting, tighten the 5 screws to the specified torque

### Locking torques (N\*m)

Nut tightening torque 20 to 25 N\*m

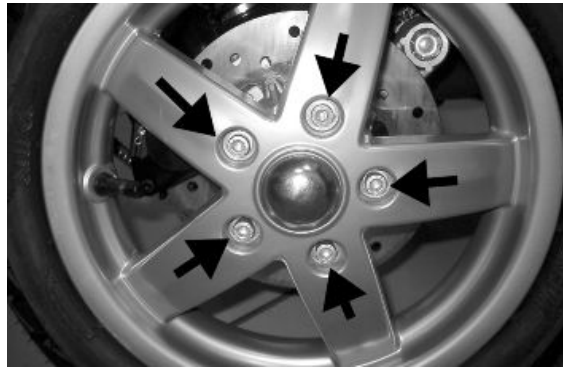

## Handlebar


### Removal

Remove the handlebar cover before carrying out this operation,.

- After removing the transmissions and disconnecting the electrical terminals, remove the terminal fixing the handlebar to the steering.
- Check all components and replace faulty parts.

#### N.B.

**IF THE HANDLEBAR IS BEING REMOVED TO REMOVE THE STEERING, TILT THE HANDLEBAR FORWARD TO AVOIDING DAMAGING THE TRANSMISSIONS.**

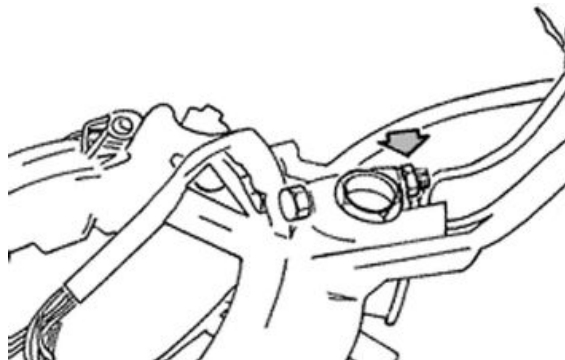


### Refitting

Carry out the removal operations but in the reverse order, observing the prescribed tightening torque.

### Locking torques (N\*m)

Handlebar fixing screw 50 ÷ 55

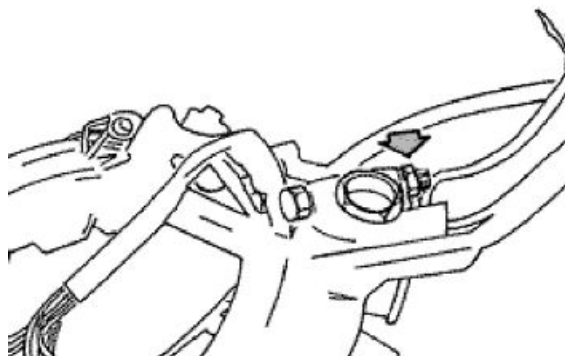

## Steering column

### Removal

After removing the upper seat, lean the vehicle on one side and extract the steering tube completely from the fork.

#### Specific tooling


**020055Y Wrench for steering tube ring nut**



### Overhaul

-The front suspension service operation is useful to replace the connecting parts between the steering tube and the swinging hub of the front wheel holder, provided that the steering tube and the wheel holder hub are in excellent conditions.

- Press and remove the wedging washer with the help of a pointed end.
- For the second washer, repeat the operation using the punch on the side opposite to the one shown in the figure.

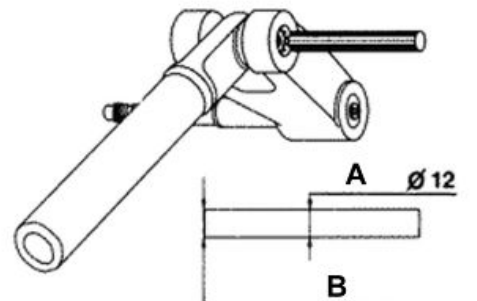


**A** = Ø12 Punch

**B** = Sharp-edged end

- Use the specific tool, fitted with part 1\*, and operate the handgrip until the pin and the Nadella are simultaneously ejected in the direction opposite the tool thrusting force.
- To eject the second Nadella, use the tool fitted with part 2\* instead of part 1, on the side opposite the one shown in the figure.


\* Supplied with the tool

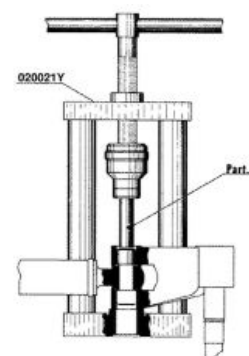

## Specific tooling

### 020021Y Front suspension service tool

- Use the tool fitted with part 20\* and part 21\* on its stem as shown in the figure.
- Push the two roller casings with the handgrip until their bottoms make contact with the pin end.

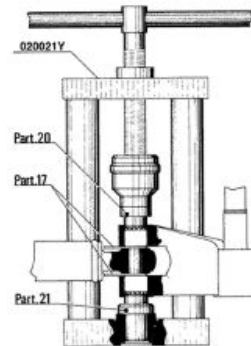

- Fit both dust guard rings «C» on the swinging hub as shown in the detail drawing «A».
- Connect the swinging hub to the steering tube with the guide pin, part 5\*.
- Use the specific tool fitted with part 3\* on its stem and with part 4 at the bottom of the tool.
- Insert the previously greased pin on the swinging hub and with the tool handgrip, move part 3 until it stops on the steering tube.
- After fitting the pin, insert the two spacers, part 17\*, slightly hitting with the mallet.

\* Supplied with the tool




## Specific tooling

### 020021Y Front suspension service tool

#### Recommended products

#### AGIP GREASE PV2 Grease for control levers on the engine

White anhydrous-calcium based grease to protect roller bearings; temperature range between -20 °C and +120 °C; NLGI 2; ISO-L-XBCIB2

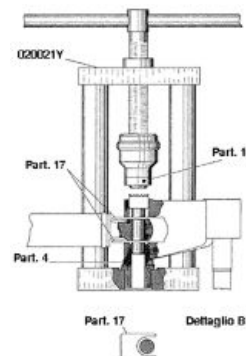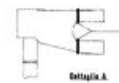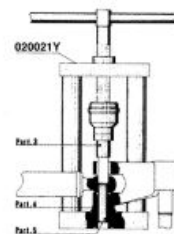



- Lubricate the sealing rings with mineral oil and half-fill the roller casings with grease.
- Insert the sealing ring on the pin and the roller bushing with wedging washers at the same time.
- Remove the specific tool, then the part 5 (guiding) partially ejected in the previous assembly stage; leave part 4\* always fitted.
- Replace part 3 with part 16\* on the stem.
- Push, from the handgrip, the wedging washer - roller casing - sealing ring unit, placing part 16 until it stops on the swinging hub
- Repeat the operation described above using the tool fitted with part 16 and part 22\* instead of part 4 on the stem, on the side opposite the one shown in the figure to refit the second wedging washer - roller casing - sealing ring unit.

\* Supplied with the tool


### Specific tooling

#### 020021Y Front suspension service tool

#### Recommended products

#### AGIP GREASE PV2 Grease for control levers on the engine

White anhydrous-calcium based grease to protect roller bearings; temperature range between -20 ° C and +120 °C; NLGI 2; ISO-L-XBCIB2

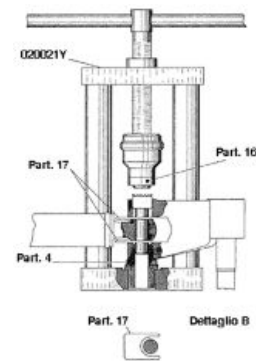

Use the tool fitted with parts 3 and 4, as indicated to fit the pin, and press operating the handgrip, until wedging the washers on the swinging hub.

- Remove the spacers, part 17, fill with grease the area between the steering tube and the swinging hub, and place the dust guard rings in that place.


\* Supplied with the tool

**N.B.**

**ASSEMBLE THE LOWER HOUSING ON HE STEERING TUBE WITH A TUBE SECTION OF AN ADEQUATE DIAMETER.**

### Specific tooling

#### 020021Y Front suspension service tool

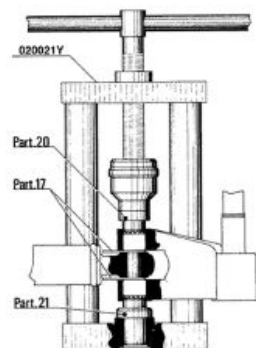

**001330Y Tool for fitting steering seats****Recommended products****AGIP GREASE PV2 Grease for control levers on the engine**

White anhydrous-calcium based grease to protect roller bearings; temperature range between -20 °C and +120 °C; NLGI 2; ISO-L-XBCIB2

---

**Refitting****CAUTION**

**USE NEW ROLLER CASINGS, PIN, SEALING RINGS AND DUST GUARDS FOR REFITTING.**

---

When fitting the fork, lubricate with the steering bearing tracks with the recommended grease. Tighten the lower ring nut "A" and the upper ring nut "B" to the specified torque


**Recommended products**

**AGIP GREASE PV2 Grease for the steering bearings, pin seats and swinging arm**

White anhydrous-calcium based grease to protect roller bearings; temperature range between -20 C and +120 C; NLGI 2; ISO-L-XBCIB2.

**Locking torques (N\*m)**

**Steering lower ring nut  $8 \div 10$  Upper steering ring nut  $35 \div 40$**

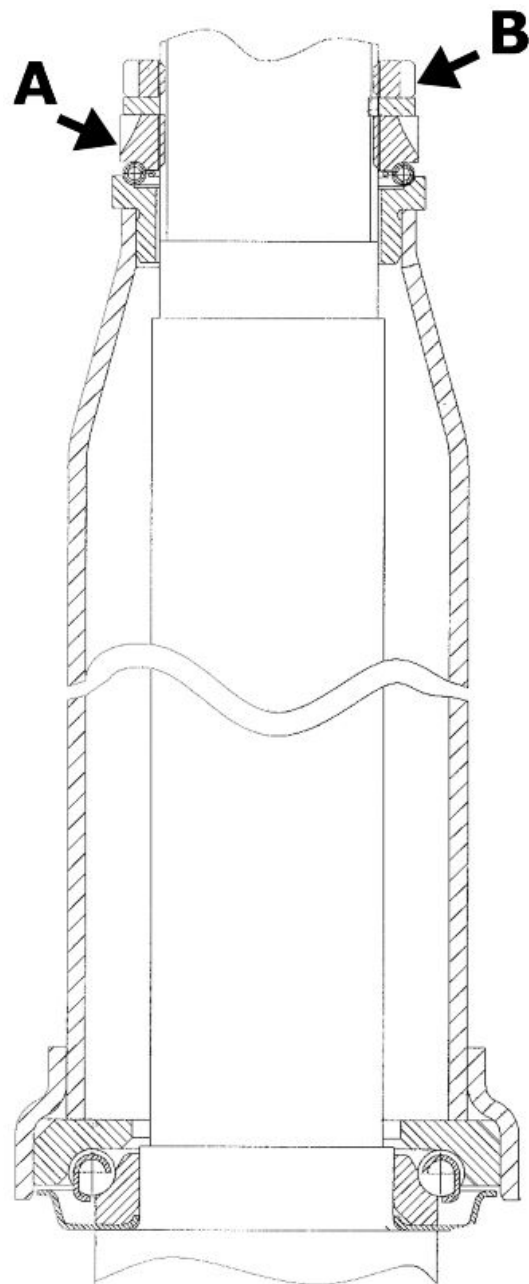**Front shock absorber**

---

## Removal

- Remove the steering tube
- Remove the shock absorber lower clamps
- Remove the shock absorber upper clamps



---

## Refitting

To refit, carry out the removal operations in reverse order, observing the prescribed tightening torques.

### Locking torques (N\*m)

shock absorber lower clamp 20 - 27 shock absorber upper clamp 20 ÷ 30

---

## Shock-absorber - calliper bracket

---

### Removal

- Remove the front wheel hub with the brake disc
- Remove the front shock absorber lower clamps



- Remove the bracket locking Seeger ring
- Unscrew the bracket



- Before refitting the bracket in the wheel axle, place the O-ring as shown in the photograph so that it is correctly placed after fitting the bracket.
- Refit the washer and the Seeger ring.
- Refit the lower screws fixing the shock absorber to the bracket and tighten at the prescribed torque

**Locking torques (N\*m)****Lower shock absorber clamp 20 ÷ 27****Overhaul**

- The bracket for the shock absorber -calliper attachment has two roller bearings separated one from the other as shown in the photograph



- Remove the two roller bearings from the bracket with the specific tool operating on the shock absorber attachment side as shown in the photograph

**Specific tooling****020376Y Adaptor handle****020441Y 26 x 28 mm adaptor****020365Y 22 mm guide**

- Remove the oil seal on the wheel hub side with the screwdriver as shown in the photograph



- Suitably hold the brake calliper - shock absorber attachment bracket
- Fit a new oil seal and move it until it stops using the specific tool

**Specific tooling****020376Y Adaptor handle****020360Y 52x55-mm Adaptor**

- Assemble a new roller bearing on the shock absorber side and move it until it stops using the specific tool

**Specific tooling****020036Y Punch**

- Suitably hold the brake calliper - shock absorber attachment bracket
- Assemble a new roller bearing on the wheel hub side and move it until it stops using the specific tool

**Specific tooling****020037Y Punch**


---

## Steering bearing

---

**Removal**

- Use the specific tool both to remove the lower seat of the upper bearing and to remove the upper seat of the lower bearing fitted on the chassis.

**N.B.**

**TO REMOVE THE LOWER SEAT OF THE LOWER STEERING BEARING JUST USE A SCREW-DRIVER AS A LEVER BETWEEN THE SEATING AND THE SLEEVE.**

**Specific tooling****020004Y Punch for removing fifth wheels from headstock**

- Remove the fifth wheel fitting and the dust guard on the steering tube as shown in figure, using the specific tool. Proceed giving a few taps with the mallet.

### Specific tooling

**020004Y Punch for removing fifth wheels from headstock**



- Refit the fifth wheel fitting and the dust guard on the steering tube until they stop, using the specific tool.

### Specific tooling

**006029Y Punch for fitting fifth wheel seat on steering tube**




## Rear

### Removing the rear wheel

- Use a screwdriver as a lever between the drum and the cover.
- Straighten the split pin and remove the cap.
- Remove the wheel acting on the central fixing point.

#### WARNING


-ALWAYS USE NEW SPLIT PINS FOR REFITTING.

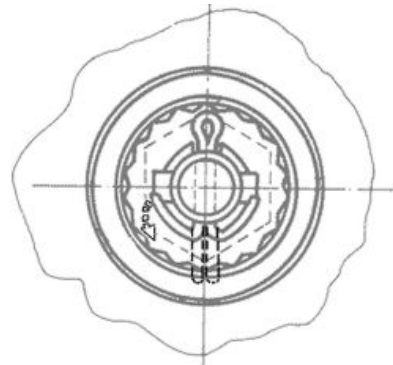

---

## Refitting the rear wheel

- Fit the wheel, tighten the nut to the prescribed torque.
- Refit the cap and the split pin folding it correctly as shown in the figure.

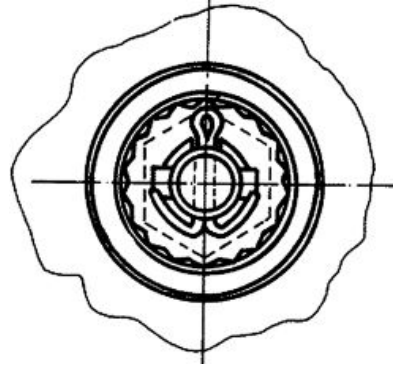

### Locking torques (N\*m)

Locking torque 137 ÷ 152 Nm

---


## Swing-arm



---

## Removal

Remove the swinging arm acting on the three clamps shown in the figure.

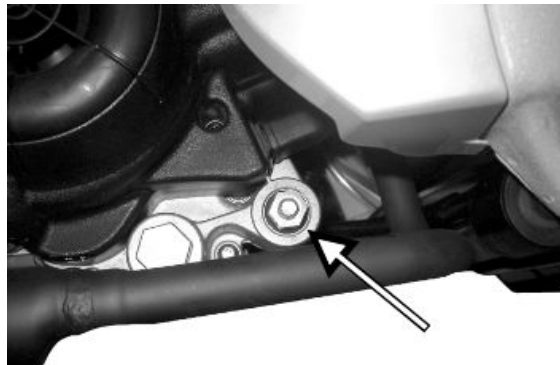






### Refitting

For rifting, respect the locking torques

**Locking torques (N\*m)**

**Part C 33 ÷ 41 Part B 44 ÷ 52 Part A 33 ÷ 41**

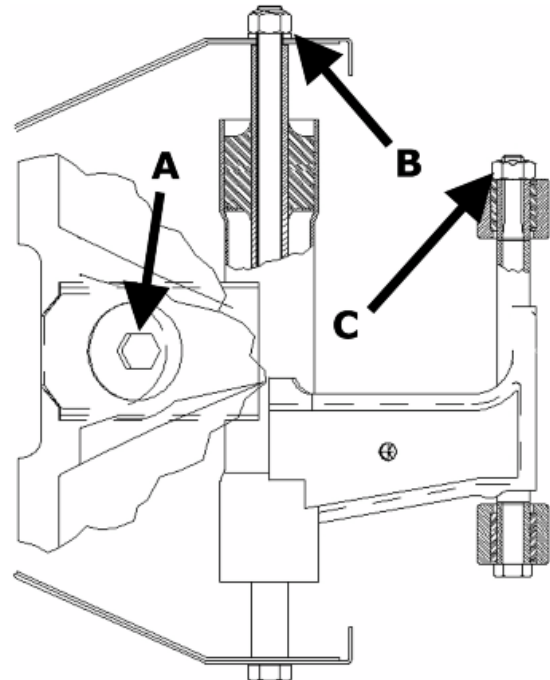

### Shock absorbers


## Removal

- To replace the shock absorber remove the battery access flap to reach and remove the shock absorber/ frame anchoring nut. Then remove the shock absorber/engine anchorage nut.
- When refitting, tighten the shock absorber/chassis anchoring nut and the shock absorber/engine pin to the prescribed torque.

### Locking torques (N\*m)

**Shock absorber/engine pin torque 33 to 41 N·m**

**Shock absorber/frame nut torque 20 to 25 Nm**

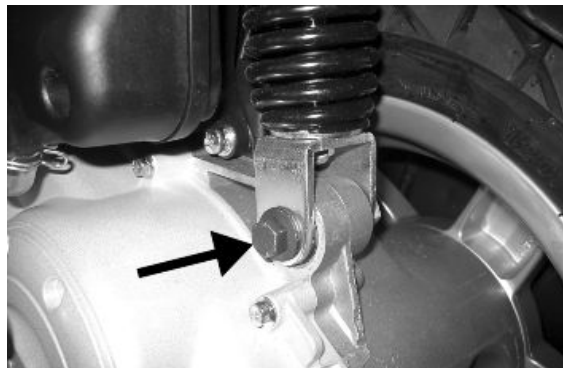


## INDEX OF TOPICS

**B**RAKING SYSTEM

**BRAK SYS**


1. Tank cover.
- 2 - Pump body.
- 3 - Brake lever.
- 4 - Pump plunger.
- 5- Oil delivery hose.
- 6 - Protection cap for air bleed screw.
- 7- Calliper.
- 8- Dust guard
- 9- Piston sealing ring.
- 10- Piston.
- 11 - Brake pad.
- 12 - Brake disc.

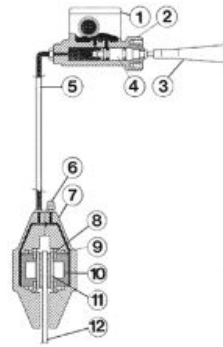

## Front brake calliper

### Removal

- Detach the oil brake hose from calliper, pouring the fluid inside a container.
- Remove the mountings indicated in the figure.
- When refitting, tighten the nuts to the prescribed torque.
- Bleed the system.

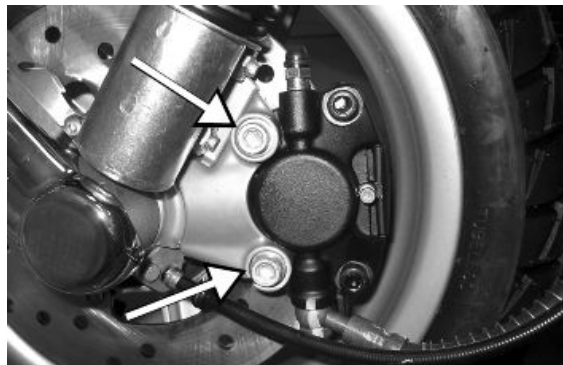

### Locking torques (N\*m)

**Calliper tightening screw** 20 ÷ 25 Nm **Brake fluid tube calliper** 20 ÷ 25

### Overhaul

- Remove the calliper assembling bolts and take out the internal bodies and components. If necessary, in order to make it easier to take out the plungers, inject (shorts blasts of) compressed air through the brake fluid pipe.
- Check that the cylinders of the internal and external body of the calliper do not show scratches or signs of erosion; otherwise, replace the entire calliper.

#### CAUTION

**ALL THE INTERNAL COMPONENTS MUST BE REPLACED EVERY TIME THE CALLIPER IS SERVICED.**

Fit to the calliper body:

- the sealing rings (1-2);
- the plungers (3);

- bed the O-Ring gasket (4) on a calliper body.
- Couple the internal body with the external one with assembling bolts. Refitting the pads and purging air (see previous sections).
- Place the calliper on the disc and lock it to the support by tightening the bolts.
- Lock the pipe joint to the calliper to the prescribed torque.

Upon fitting, the parts must be perfectly clean and **free of traces of oil, diesel fuel, grease, etc..** They should be washed thoroughly in denatured alcohol before proceeding.

**The sealing rings must be immersed in the operating liquid;** the use of the **PRF1** protection is tolerated.


#### CAUTION

**RUBBER PARTS SHOULD NEVER BE LEFT IN ALCOHOL FOR LONGER THAN 20 SECONDS. AFTER WASHING, THE PIECES MUST BE DRIED WITH A BLAST OF COMPRESSED AIR AND A CLEAN CLOTH.**

#### Locking torques (N\*m)

**Screw tightening calliper to the support 20 ÷ 25 Attachment to the calliper 25 ÷ 30 Nm**

- 1 DUST GUARDS
- 2 SEALING RINGS
- 3 PLUNGERS
- 4 O-RING GASKET

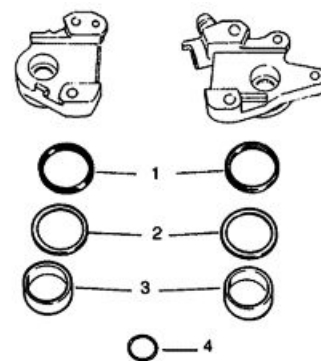

## Front brake disc


### Removal

- Should the brake disc be replaced, when refitting the hub, apply recommended product on the fixing bolts.

Tighten to the specified torque.

#### N.B.

**THE SURFACE OF THE DISC WITH THE STAMPED ARROW INDICATING THE DIRECTION OF ROTATION MUST FACE THE SHOCK ABSORBER.**

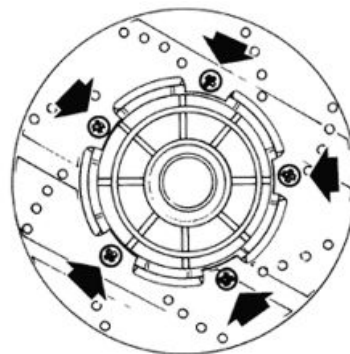

#### Recommended products

##### Loctite 242 product description

Apply LOCTITE medium type 242 threadlock

#### Locking torques (N\*m)

tightening torque  $5 \div 6.5$  Nm

## Disc Inspection


### Specific tooling

020335Y Magnetic support for dial gauge

### Characteristic

Max oscillation allowed

0.1 mm.

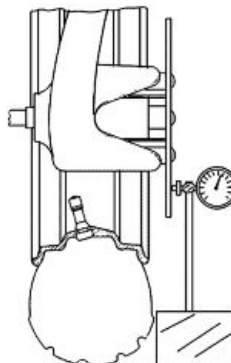


## Front brake pads

### Removal

- Pads must be replaced when the friction material thickness reaches the wear limit.

- To replace:

remove the protection cover, the bolt and the leaf spring. Slide off the pads and replace them once the plungers are down. Carry out these operations in reverse order to fit.

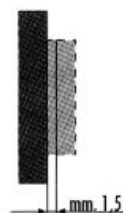

### CAUTION

**BEFORE USING THE BRAKE, OPERATE THE LEVER A FEW TIMES.**


## Front

-Once the bleed valve is closed, fill the system with brake liquid to the maximum level.

-Undo the bleed screw.

-Apply the tube of the special tool to the bleed screws.

When bleeding it is necessary to fill the oil tank in continuation while working with a MITYVAC pump on the bleed screws until no more air comes out of the system.

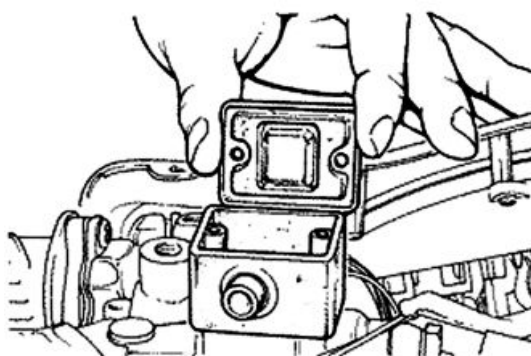

The operation is finished when just oil comes out of the bleed screws.

-Do up the bleed screw.

-When the operation is over, tighten up the oil bleed screw to the prescribed torque.

**N.B.**

IF AIR CONTINUES TO COME OUT DURING PURGING, EXAMINE ALL THE FITTINGS: IF SAID FITTINGS DO NOT SHOW SIGNS OF BEING FAULTY, LOOK FOR THE AIR INPUT AMONG THE VARIOUS SEALS ON THE PUMP AND CALLIPER PISTONS.

**CAUTION**

- DURING THE OPERATIONS, THE VEHICLE MUST BE ON THE STAND AND LEVEL.

**N.B.**

DURING PURGING FREQUENTLY CHECK THE LEVEL TO PREVENT AIR GETTING INTO THE SYSTEM THROUGH THE PUMP.

**WARNING**

- BRAKING CIRCUIT FLUID IS HYGROSCOPIC. IT ABSORBS HUMIDITY FROM THE SURROUNDING AIR. IF THE LEVEL OF HUMIDITY IN THE BRAKING FLUID EXCEEDS A GIVEN VALUE, BRAKING EFFICIENCY WILL BE REDUCED.

THEREFORE, ALWAYS USE FLUID FROM SEALED CONTAINERS.

UNDER NORMAL DRIVING AND CLIMATIC CONDITIONS YOU SHOULD CHANGE THIS LIQUID EVERY TWO YEARS. IF THE BRAKES ARE USED INTENSELY AND/OR IN HARSH CONDITIONS, CHANGE THE FLUID MORE FREQUENTLY.

**CAUTION**

WHEN CARRYING OUT THE OPERATION, BRAKE FLUID MAY LEAK FROM BETWEEN THE BLEED SCREW AND ITS SEAT ON THE CALLIPER.

CAREFULLY DRY THE CALLIPER AND DEGREASE THE DISC SHOULD THERE BE OIL ON IT.

### Specific tooling

020329Y Mity-Vac vacuum-operated pump


### Recommended products

AGIP BRAKE 4 Brake fluid

FMVSS DOT 4 Synthetic fluid

### Locking torques (N\*m)

Oil bleed screw 7 ÷ 10

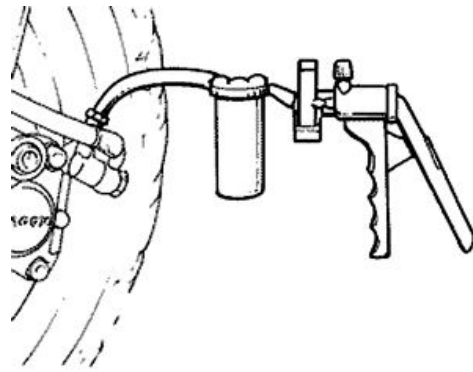


## Front brake pump

## Rear drum brake

---

Once the muffler and the wheel have been removed, follow these steps:

1. Remove the shoe spring using the specific spanner.
2. Remove the shoe with the aid of a lever.
3. Refit the new shoes giving a few taps with the mallet.
4. Attach the spring using the specific pliers.

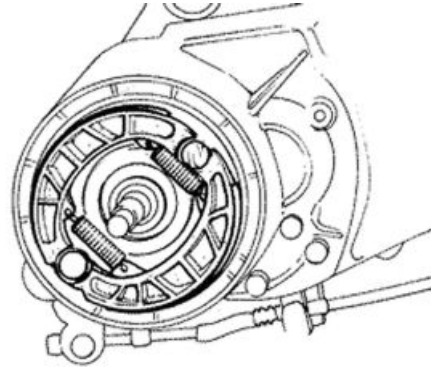

### Specific tooling

**020325Y Pliers for brake-shoe springs**

---



## INDEX OF TOPICS

CHASSIS

CHAS

---

## Rear handlebar cover

---

Undo the screws as shown in the figure and remove the handlebar rear section.




---

## Instrument panel

---

Operate the 4 screws shown in the figure to replace the instrument panel.

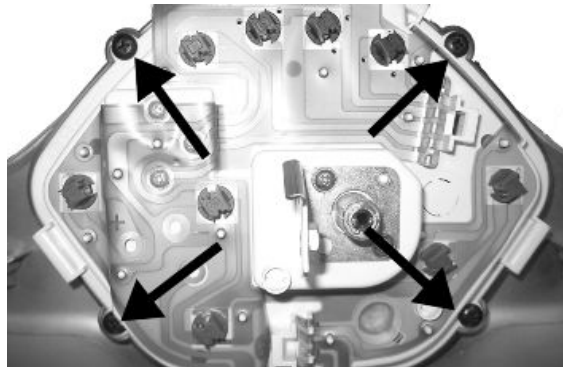

---

## Front handlebar cover

---

- Remove the 2 screws in the rear handlebar cover and the screw under the headlamp.
- Pull up and detach the front handlebar cover, disconnect the headlight assembly connections.







### Headlight assy.

After removing the front handlebar cover, operate the 4 screws shown in the figure and remove the headlight.



### Knee-guard


- Unscrew the 2 screws shown in the figure placed under the front grille.
- Remove the 3 screws shown in the figure, placed inside the glove-box; they can be reached after opening the glove-box door.

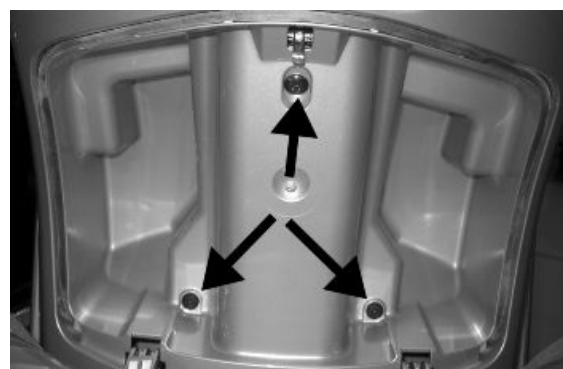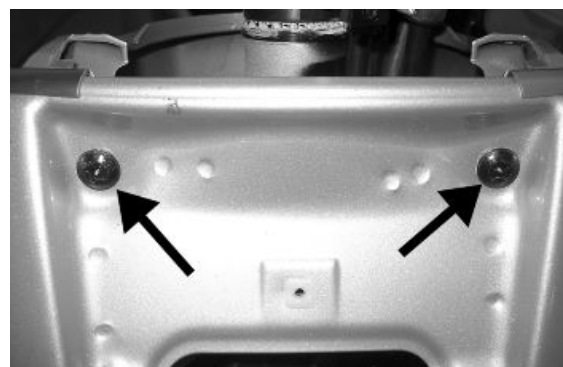

---

## Footrest



- Operate on the 3 screws shown in the figure once the glove-box and fairing have been removed.

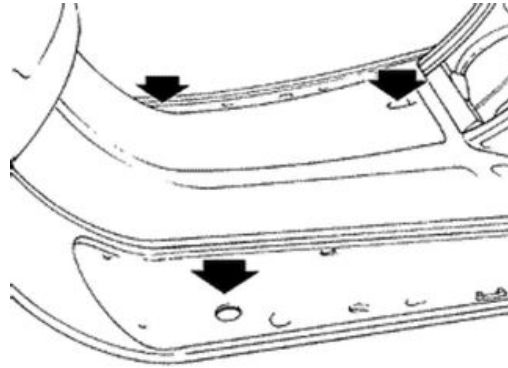

---

## Air filter


- Remove the helmet compartment.
- after removing the side fairing, remove the 2 screws fixing the filter box to the engine, indicated in the figure.
- Remove the two clamps indicated in the figure

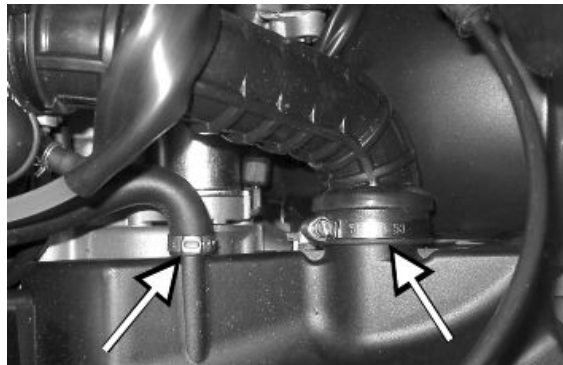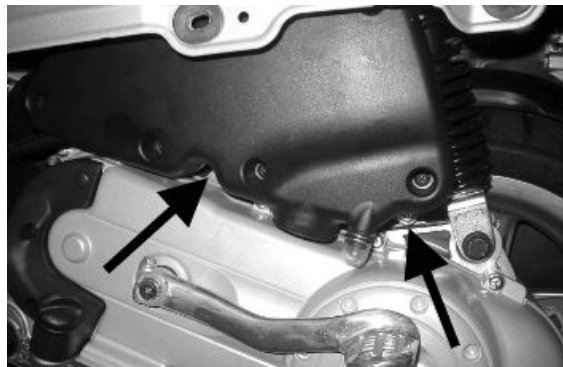

---

## Front mudguard

- First remove the steering tube and uncouple the front brake pipes from the calliper in order to remove the front mudguard
- Remove the three mudguard-steering tube clamps indicated in the figure

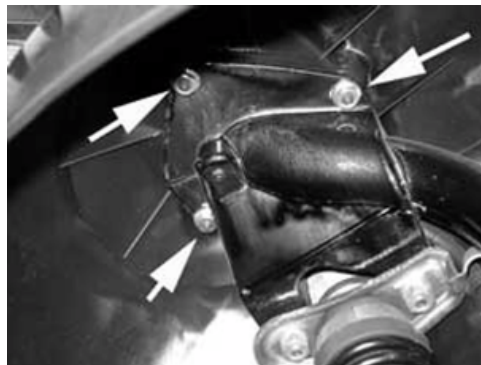

---

## Front central cover

- Remove the "PIAGGIO" clip-on badge
- Unscrew the screw indicated in the figure
- Remove the grille



# INDEX OF TOPICS

**P**RE-DELIVERY

**P**RE DE

---

## **Aesthetic inspection**

**Appearance check:**

- Paintwork
- Fitting of plastics
- Scratches
- Dirt

---

## **Tightening torques inspection**

**Lock check**

- Safety locks
- clamping screws

**Safety locks**

---

Rear shock absorber upper fixing

---

Rear shock absorber lower fixing

---

Front wheel axle nut

---

Wheel hub nut

---

Frame - swinging arm bolt \*

---

Swinging arm bolt - Engine

---

Engine arm pin - Frame arm

---

Handlebar lock nut

---

Steering lower ring nut

---

Upper steering ring nut

---

## **Electrical system**

## Electrical system:

- Main switch
- Headlamps: high-beam lights, low-beam lights, tail and parking lights and their warning lights
- Adjusting the headlights according to the regulations currently in force
- Rear light, parking light, stop light
- Front and rear stop light switches
- Turn indicators and their warning lights
- Instrument panel lights
- Instrument panel: fuel gauge
- Instrument panel warning lights
- Horn
- Starter

**CAUTION**

**TO ENSURE MAXIMUM PERFORMANCE, THE BATTERY MUST BE CHARGED BEFORE USE. INADEQUATE CHARGING OF THE BATTERY WITH A LOW LEVEL OF ELECTROLYTE BEFORE IT IS FIRST USED SHORTENS THE LIFE OF THE BATTERY.**

**WARNING**

**BEFORE RECHARGING THE BATTERY, REMOVE THE CAPS OF EACH CELL. KEEP THE BATTERY AWAY FROM NAKED FLAMES OR SPARKS WHILE IT IS CHARGED. REMOVE THE BATTERY FROM THE SCOOTER, DISCONNECTING THE NEGATIVE TERMINAL FIRST.**

**CAUTION**

**WHEN INSTALLING THE BATTERY, ATTACH THE POSITIVE LEAD FIRST AND THEN THE NEGATIVE ONE.**

**WARNING**

**BATTERY ELECTROLYTE IS TOXIC AND IT MAY CAUSE SERIOUS BURNS. IT CONTAINS SULPHURIC ACID. AVOID CONTACT WITH YOUR EYES, SKIN AND CLOTHING.**

**IN CASE OF CONTACT WITH YOUR EYES OR SKIN, RINSE WITH ABUNDANT WATER FOR ABOUT 15 MINUTES AND SEEK IMMEDIATE MEDICAL ATTENTION.**

**IF IT ACCIDENTALLY SWALLOWED, IMMEDIATELY DRINK LARGE QUANTITIES OF WATER OR VEGETABLE OIL. SEEK IMMEDIATE MEDICAL ATTENTION.**

**BATTERIES PRODUCE EXPLOSIVE GASES; KEEP THEM AWAY FROM NAKED FLAMES, SPARKS AND CIGARETTES. IF THE BATTERY IS CHARGED IN A CLOSED PLACE, TAKE CARE TO ENSURE ADEQUATE VENTILATION. ALWAYS PROTECT YOUR EYES WHEN WORKING CLOSE TO BATTERIES.**

**KEEP OUT OF THE REACH OF CHILDREN**

**CAUTION**

**NEVER USE FUSES WITH A CAPACITY HIGHER THAN THAT RECOMMENDED. USING A FUSE OF UNSUITABLE RATING MAY SERIOUSLY DAMAGE THE VEHICLE OR EVEN CAUSE A FIRE.**

---

## Levels check

Level check:

- Hydraulic braking system fluid level.
- Rear hub oil level
- Engine coolant level.

---

## Road test

**Test ride**

- Cold start
- Instrument operations
- Response to the throttle control
- Stability on acceleration and braking
- Rear and front brake efficiency
- Rear and front suspension efficiency
- Abnormal noise

---

## Static test

Static control after the test ride:



- Starting when warm
- Starter operation
- Minimum hold (turning the handlebar)
- Uniform turning of the steering
- Possible leaks

**CAUTION**

**CHECK AND ADJUST TYRE PRESSURE WITH TYRES AT AMBIENT TEMPERATURE.**

**CAUTION**

**NEVER EXCEED THE RECOMMENDED INFLATION PRESSURES OR TYRES MAY BURST.**

---

## Functional inspection

Functional check up:

Braking system (hydraulic)

- Lever travel

Braking system (mechanical)

- Lever travel

Clutch

- Proper functioning check

Engine

- Throttle travel check

Others

- Check documentation
  - Check the frame and engine numbers
  - Tool kit
  - License plate fitting
  - Check locks
  - Check tyre pressures
  - Installation of mirrors and any accessories
-

# INDEX OF TOPICS

TIME


TIME

This section is devoted to the time necessary to carry out repairs.




The description and code for each operation is indicated.

## Engine

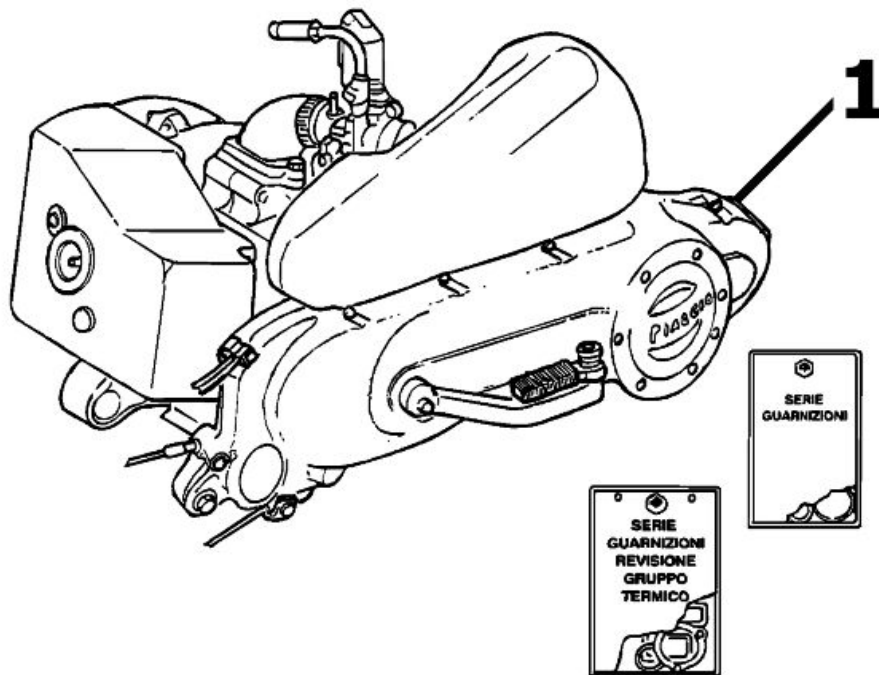


### ENGINE

|   | Code   | Action                                     | Duration |
|---|--------|--|----------|
| 1 | 001001 | engine from frame - removal and re-fitting |          |

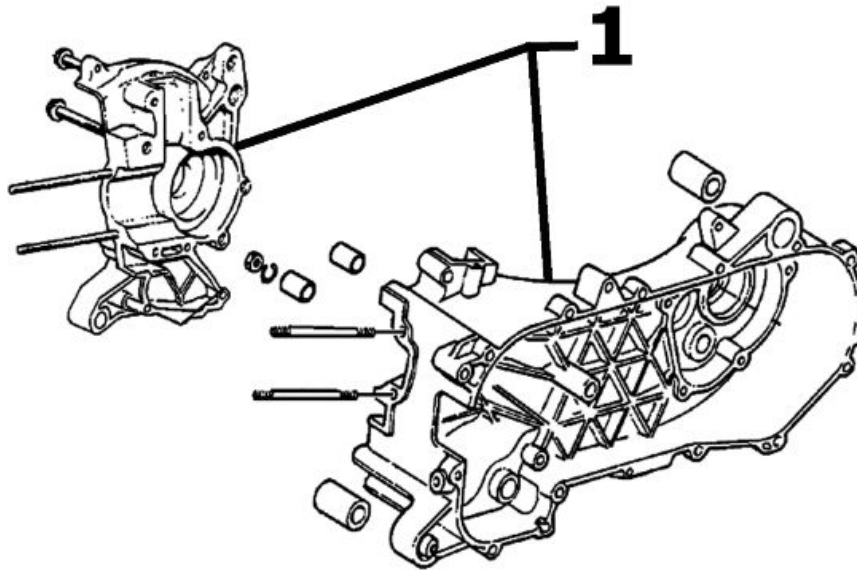**Crankcase****CRANKCASE**


|   | <b>Code</b> | <b>Action</b>                  | <b>Duration</b> |
|---|-------------|--------------------------------|-----------------|
| 1 | 001133      | Engine crankcase - Replacement |                 |

**Crankshaft**

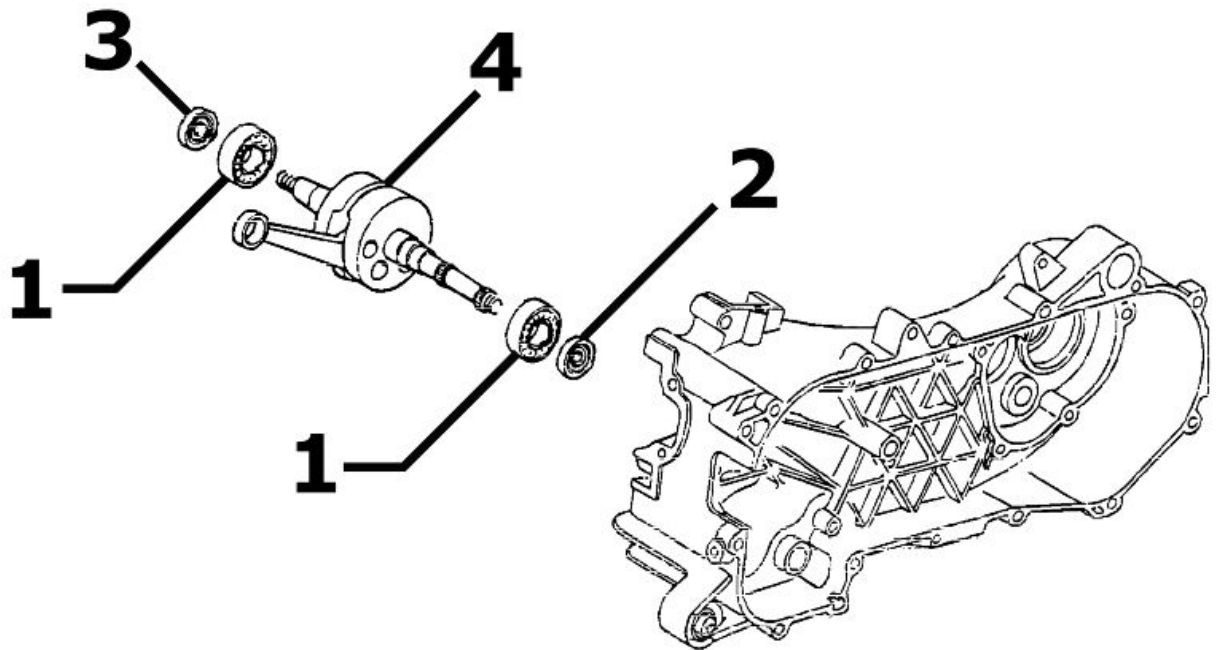


**CRANKSHAFT**

|   | <b>Code</b> | <b>Action</b>                         | <b>Duration</b> |
|---|-------------|---------------------------------------|-----------------|
| 1 | 001118      | Main bearings - Replacement           |                 |
| 2 | 001100      | Clutch-side oil seal - Replacement    |                 |
| 3 | 001099      | Oil seal, flywheel side - Replacement |                 |
| 4 | 001117      | Crankshaft - Replacement              |                 |

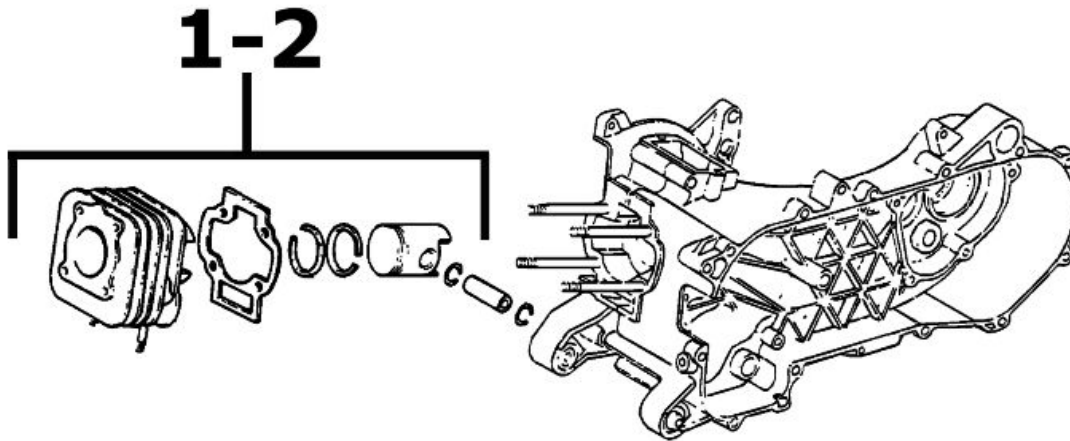**Cylinder assy.****CYLINDER- PISTON**

|   | <b>Code</b> | <b>Action</b>                             | <b>Duration</b> |
|---|-------------|---|-----------------|
| 1 | 001002      | Cylinder-Piston - Replacement             |                 |
| 2 | 001107      | Cylinder / piston - Inspection / cleaning |                 |


Cylinder head assy.

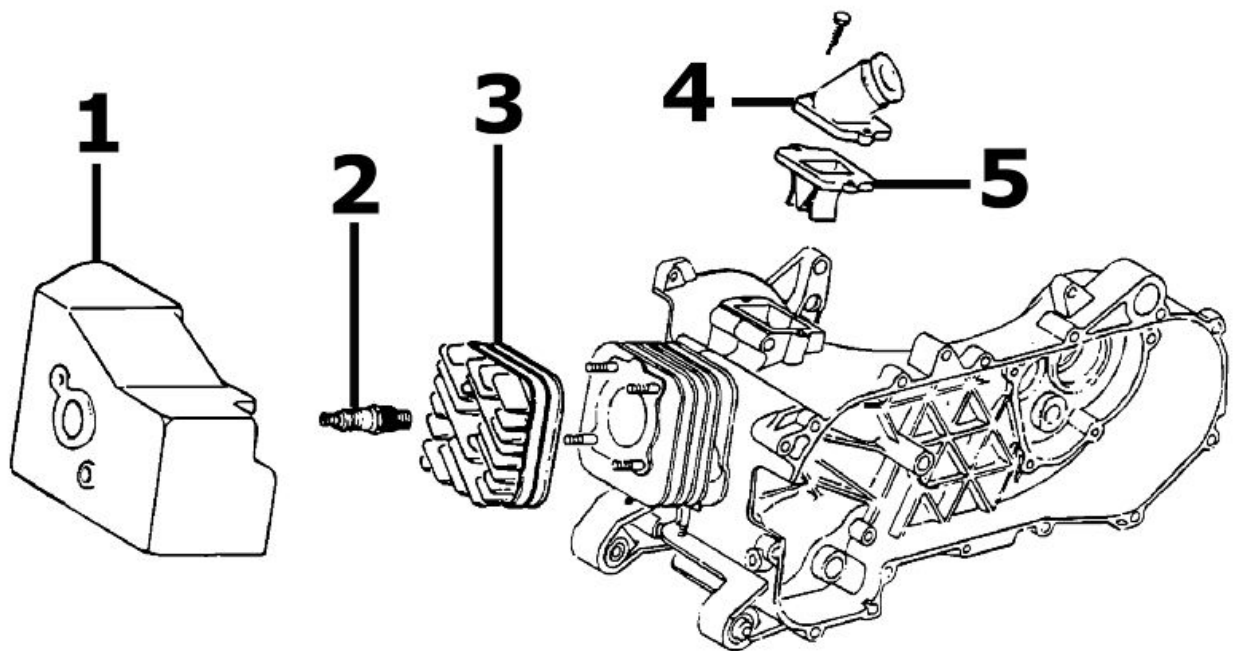

**HEAD**

|   | Code   | Action                        | Duration |
|---|--------|-------------------------------|----------|
| 1 | 001097 | Cooling hood - Replacement    |          |
| 2 | 001093 | Spark plug - Replacement      |          |
| 3 | 001126 | Head - Replacement            |          |
| 4 | 001013 | Intake manifold - Replacement |          |
| 5 | 001178 | Disc pack - Replacement       |          |


## Driven pulley

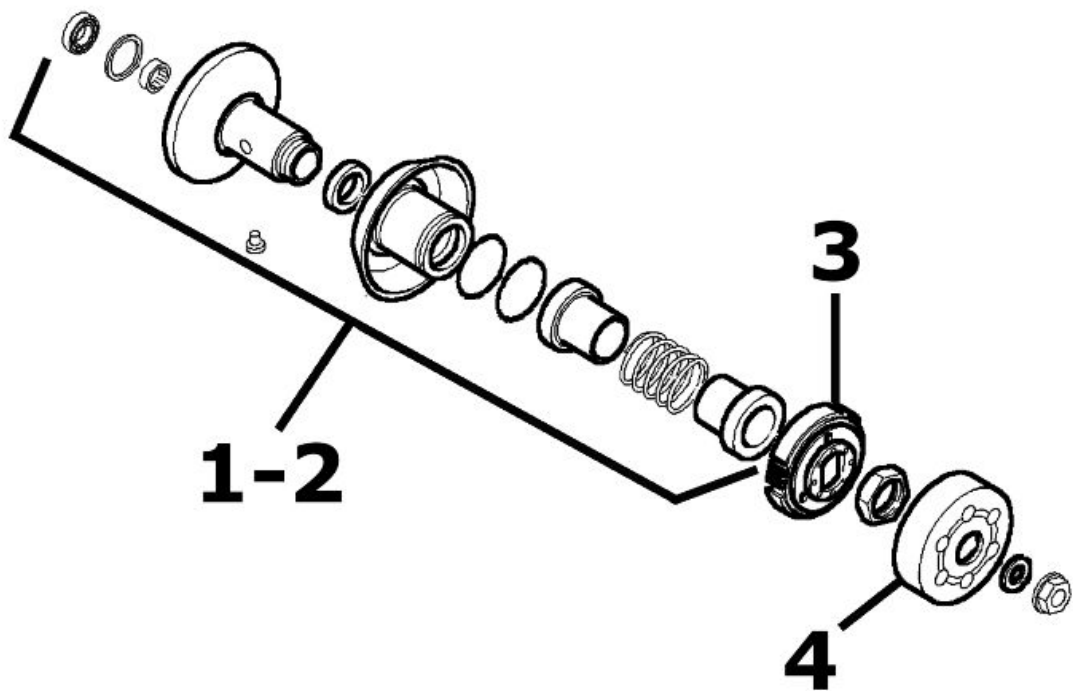**DRIVEN PULLEY - CLUTCH**

|   | <b>Code</b> | <b>Action</b>                     | <b>Duration</b> |
|---|-------------|-----------------------------------|-----------------|
| 1 | 001012      | Driven pulley - overhaul          |                 |
| 2 | 001110      | Driven pulley- Replacement        |                 |
| 3 | 001022      | Clutch - Replacement              |                 |
| 4 | 001155      | Clutch bell housing - Replacement |                 |




Oil pump

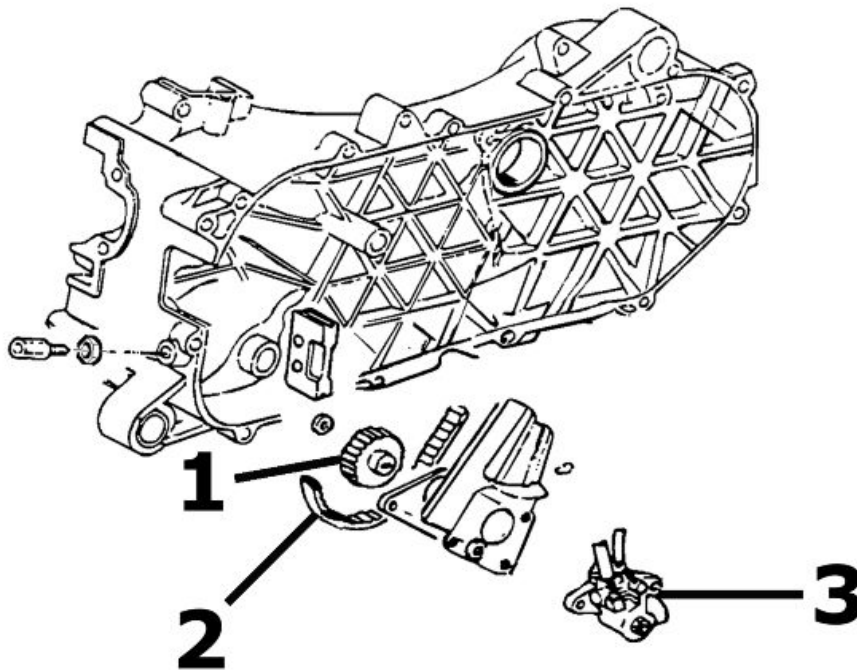

**OIL PUMP**

|   | <b>Code</b> | <b>Action</b>                          | <b>Duration</b> |
|---|-------------|--|-----------------|
| 1 | 001028      | Mix movement gear socket - Replacement |                 |
| 2 | 001019      | Mixer belt - replacement               |                 |
| 3 | 001018      | Mixer - Replacement                    |                 |


## Final gear assy.

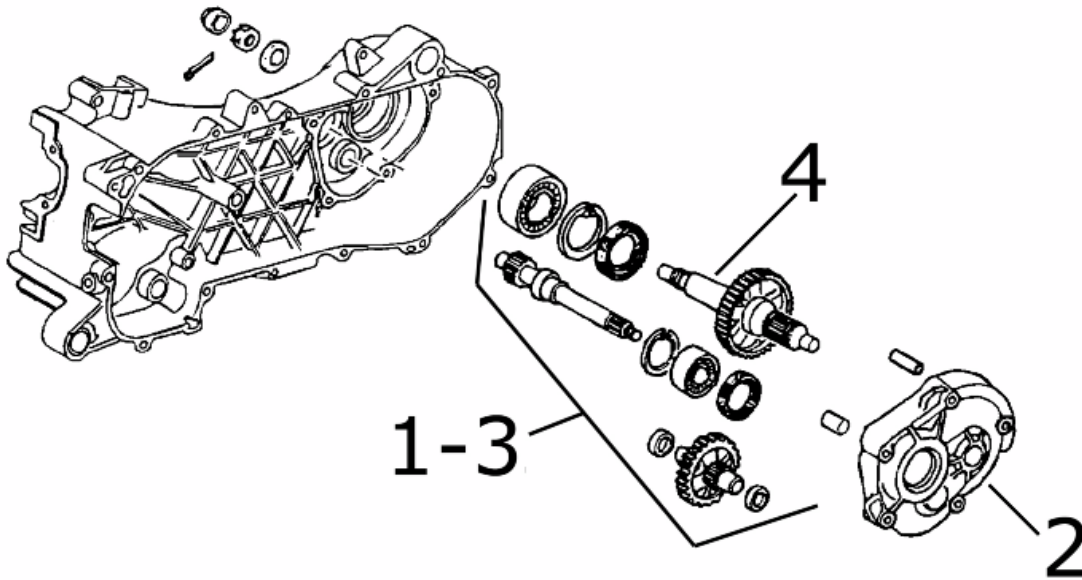

### FINAL REDUCTION GEAR

|   | Code   | Action                                  | Duration |
|---|--------|---|----------|
| 1 | 001010 | Geared reduction unit - Service         |          |
| 2 | 001156 | Gear reduction unit cover - Replacement |          |
| 3 | 003065 | Gear box oil - Replacement              |          |
| 4 | 004125 | Rear wheel axle - Replacement           |          |


Driving pulley

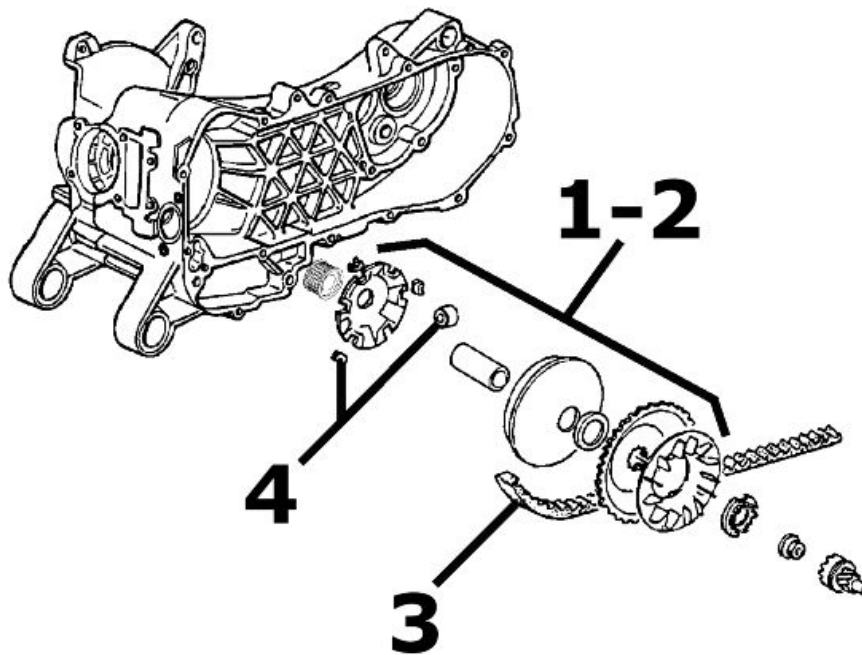

**DRIVING PULLEY**


|   | <b>Code</b> | <b>Action</b>                          | <b>Duration</b> |
|---|-------------|--|-----------------|
| 1 | 001066      | Driving pulley - Removal and refitting |                 |
| 2 | 001086      | Driving half-pulley - replace          |                 |
| 3 | 001011      | Driving belt - Replacement             |                 |
| 4 | 001177      | Variator rollers / shoes - Replacement |                 |

## Transmission cover

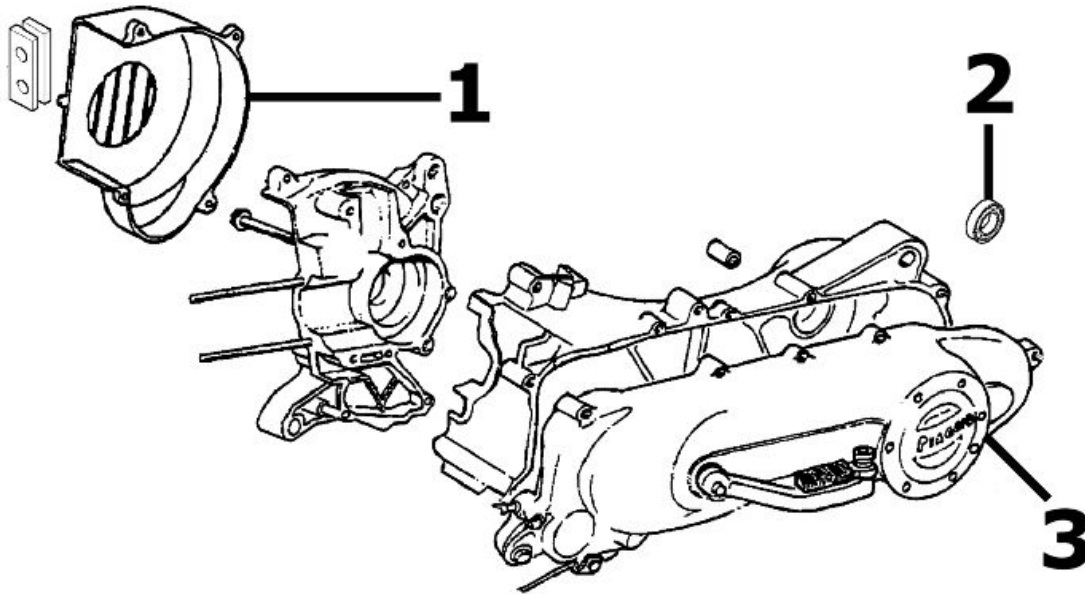**TRANSMISSION COVER**

|   | <b>Code</b> | <b>Action</b>                              | <b>Duration</b> |
|---|-------------|--|-----------------|
| 1 | 001087      | Flywheel cover - Replacement               |                 |
| 2 | 001135      | Transmission cover bearing - Replacement   |                 |
| 3 | 001096      | Transmission crankcase cover - Replacement |                 |


**Starter motor**

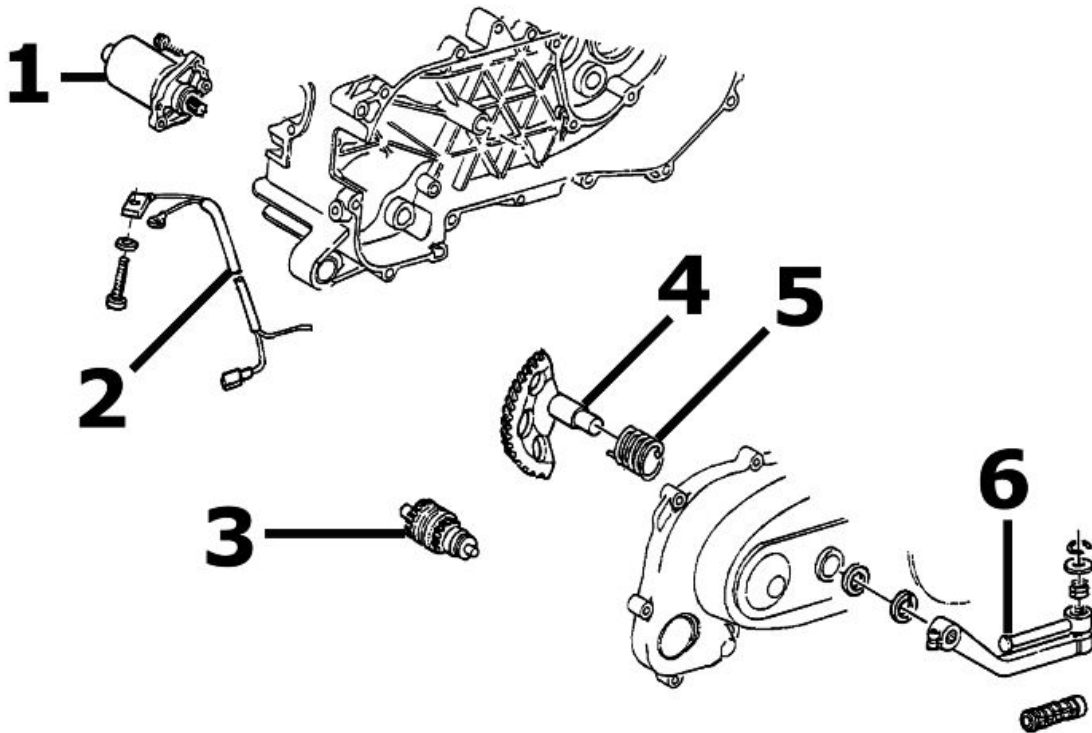

**ELECTRICAL START-UP**


|   | <b>Code</b> | <b>Action</b>                             | <b>Duration</b> |
|---|-------------|---|-----------------|
| 1 | 001020      | Starter motor - Replacement               |                 |
| 2 | 005045      | Starter motor cable harness - Replacement |                 |
| 3 | 001017      | Starter sprocket wheel - Replacement      |                 |
| 4 | 001021      | Kick starter - Inspection                 |                 |
| 5 | 008008      | Starter spring pack - Replacement         |                 |
| 6 | 001084      | Starter lever - Replacement               |                 |

## Flywheel magneto

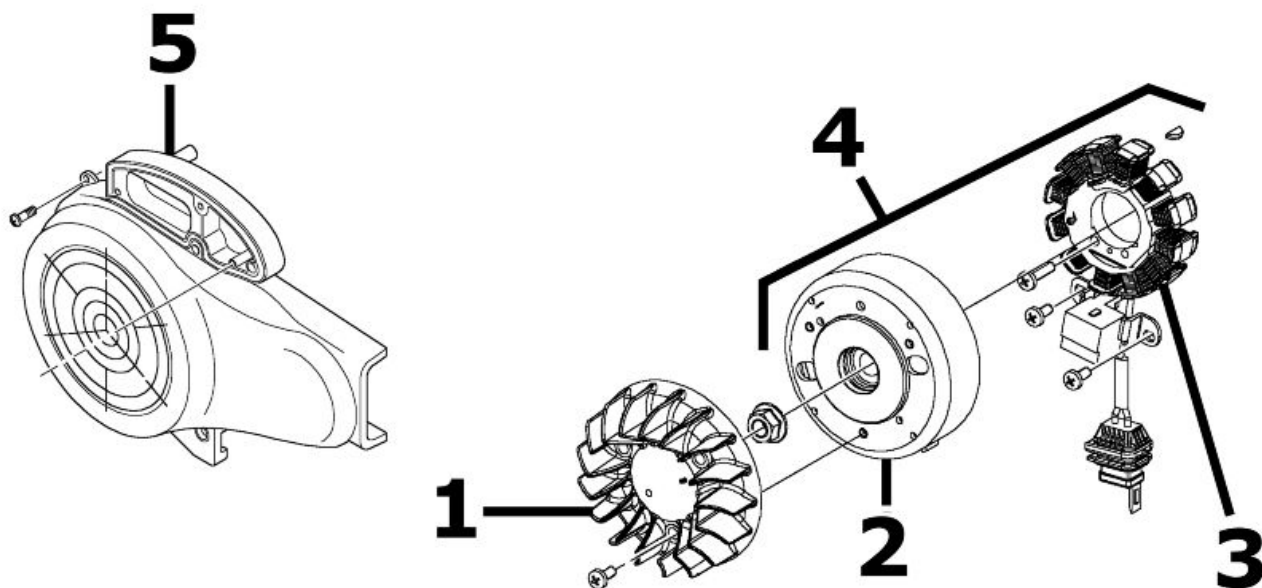MAGNETO FLYWHEEL


|   | Code   | Action                         | Duration |
|---|--------|--------------------------------|----------|
| 1 | 001109 | Cooling fan - Replacement      |          |
| 2 | 001173 | Rotor - Replacement            |          |
| 3 | 001067 | Stator - Fitting and Refitting |          |
| 4 | 001058 | Flywheel - Replacement         |          |
| 5 | 001087 | Flywheel cover - Replacement   |          |

**Carburettor**

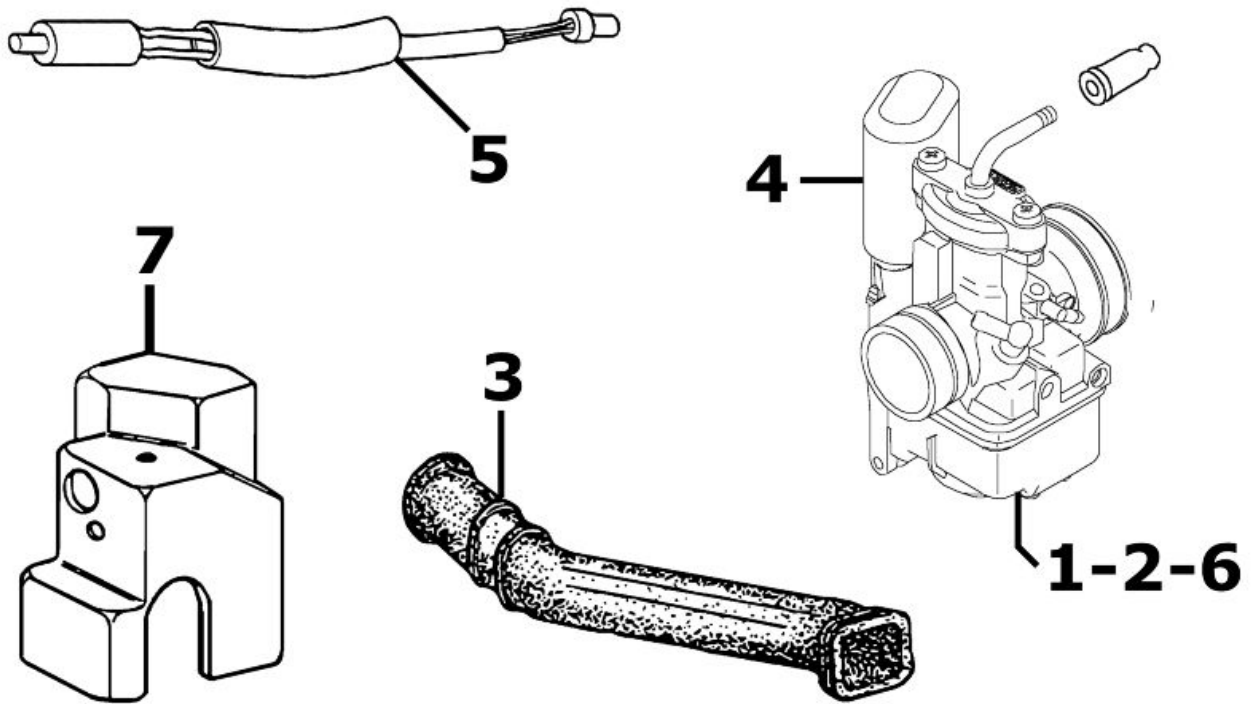

**CARBURETTOR**


|   | <b>Code</b> | <b>Action</b>                              | <b>Duration</b> |
|---|-------------|--|-----------------|
| 1 | 001008      | Carburettor - Inspection                   |                 |
| 2 | 001063      | Carburettor - Replacement                  |                 |
| 3 | 007020      | Carburettor heating tubing - replacement   |                 |
| 4 | 001081      | Automatic choke - Replacement              |                 |
| 5 | 001082      | Carburettor heating resistor - Replacement |                 |
| 6 | 003058      | Carburettor - Adjustment                   |                 |
| 7 | 004177      | Heating hood - Replacement                 |                 |

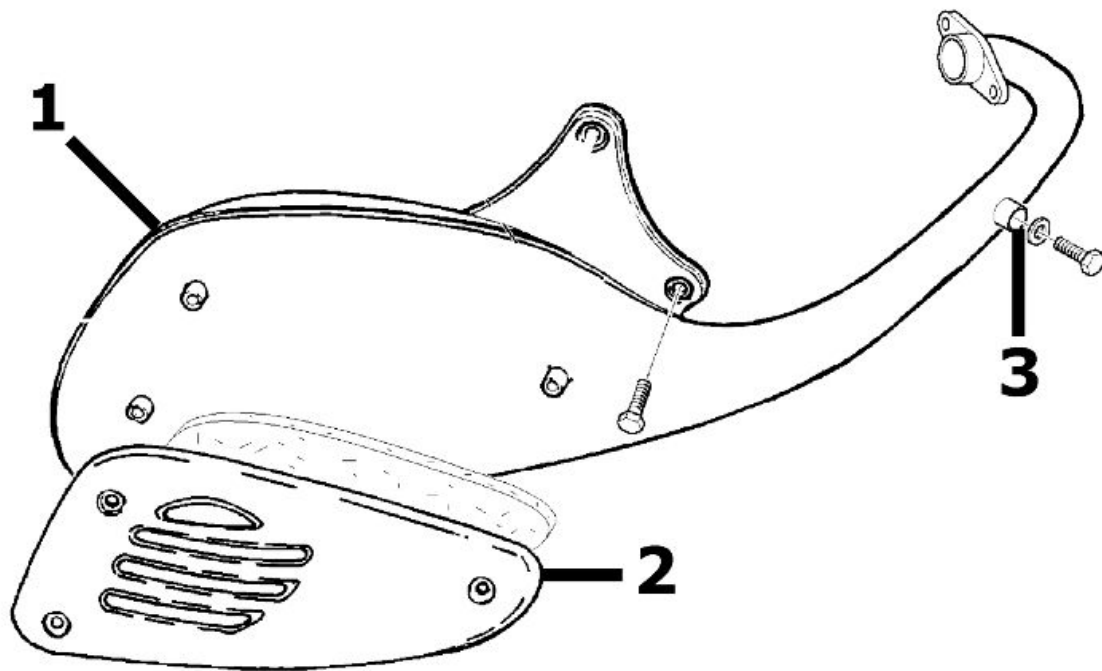**Exhaust pipe****MUFFLER**

|   | <b>Code</b> | <b>Action</b>                  | <b>Duration</b> |
|---|-------------|--------------------------------|-----------------|
| 1 | 001009      | Muffler - Replacement          |                 |
| 2 | 001095      | Muffler guard - Replacement    |                 |
| 3 | 001136      | Exhaust emissions - Adjustment |                 |




**Air cleaner**

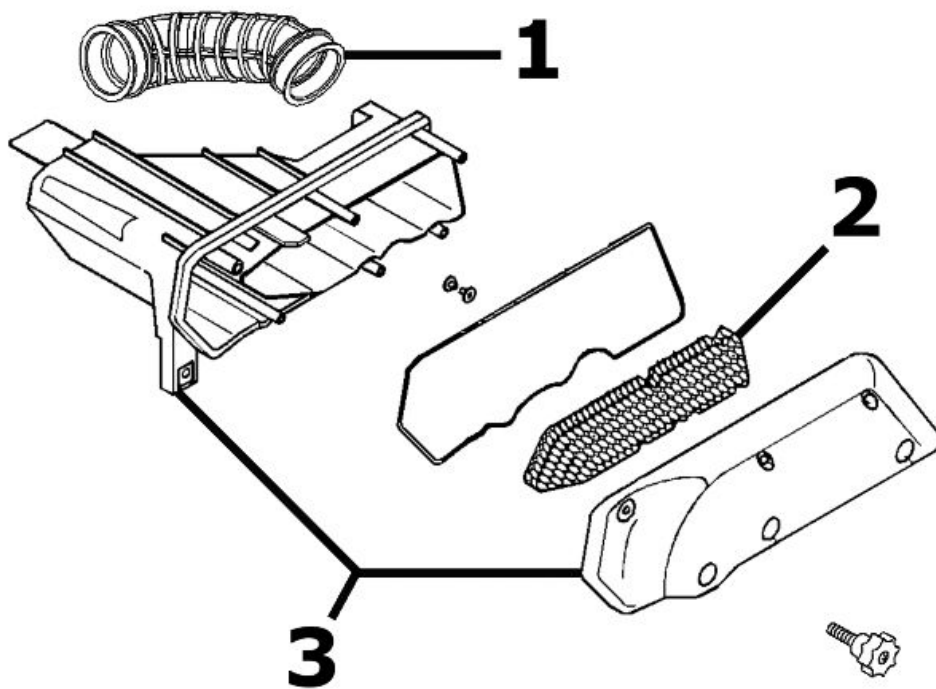

**AIR CLEANER**


|   | <b>Code</b> | <b>Action</b>                                 | <b>Duration</b> |
|---|-------------|---|-----------------|
| 1 | 004122      | Air cleaner carburettor fitting - Replacement |                 |
| 2 | 001014      | Air filter - Replacement / cleaning           |                 |
| 3 | 001015      | Air filter box - Replacement                  |                 |

## Frame

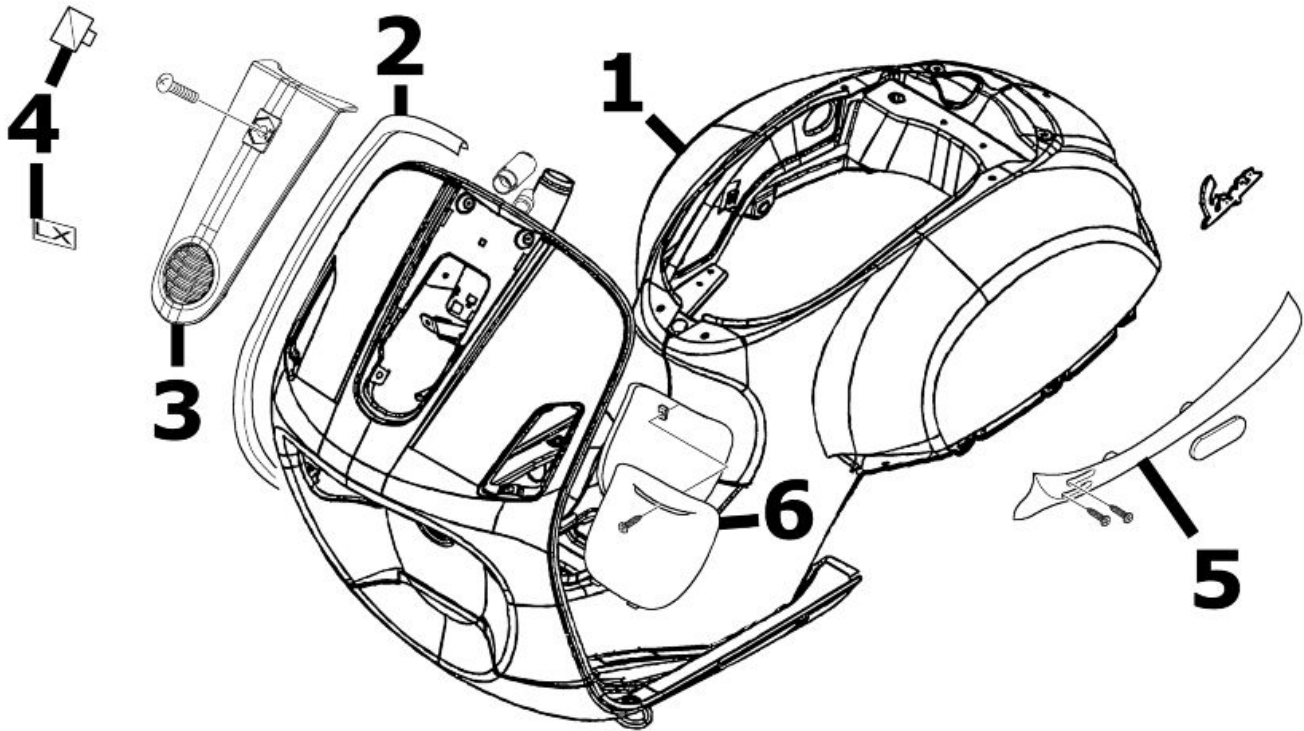**FRAME**

|   | Code   | Action                                   | Duration |
|---|--------|--|----------|
| 1 | 004001 | Frame - Replacement                      |          |
| 2 | 004023 | Shield rim - Replacement                 |          |
| 3 | 004149 | Shield central cover - Replacement       |          |
| 4 | 004159 | Plates / Stickers - Replacement          |          |
| 5 | 004012 | Rear side panels - Replacement           |          |
| 6 | 004059 | Spark plug inspection flap - Replacement |          |


Centre-stand

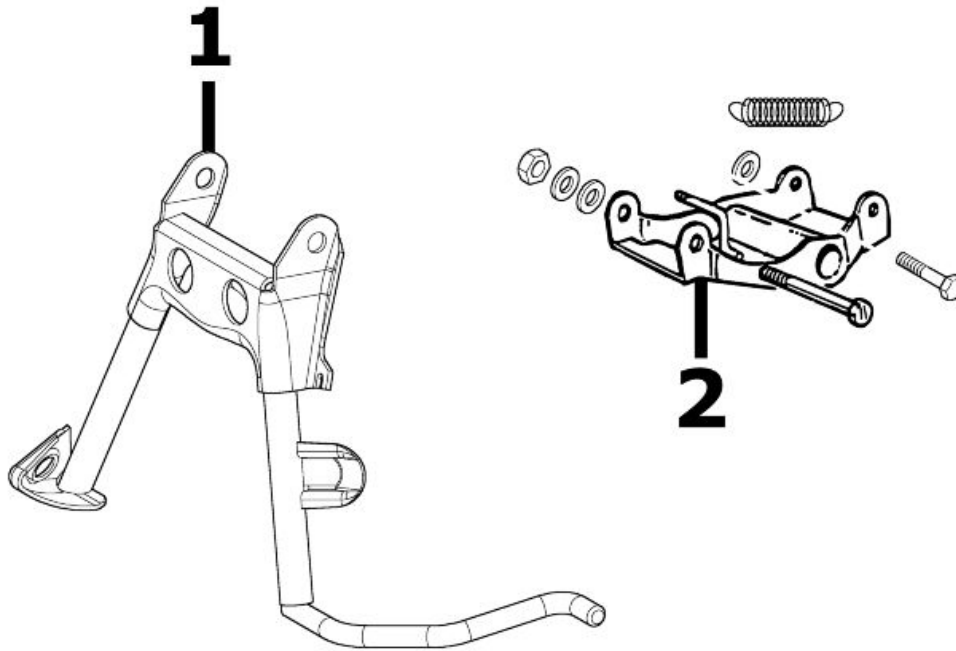

**STAND**


|   | Code   | Action                            | Duration |
|---|--------|-----------------------------------|----------|
| 1 | 004004 | Stand - Replacement               |          |
| 2 | 004171 | Stand support plate - Replacement |          |

## Footrests

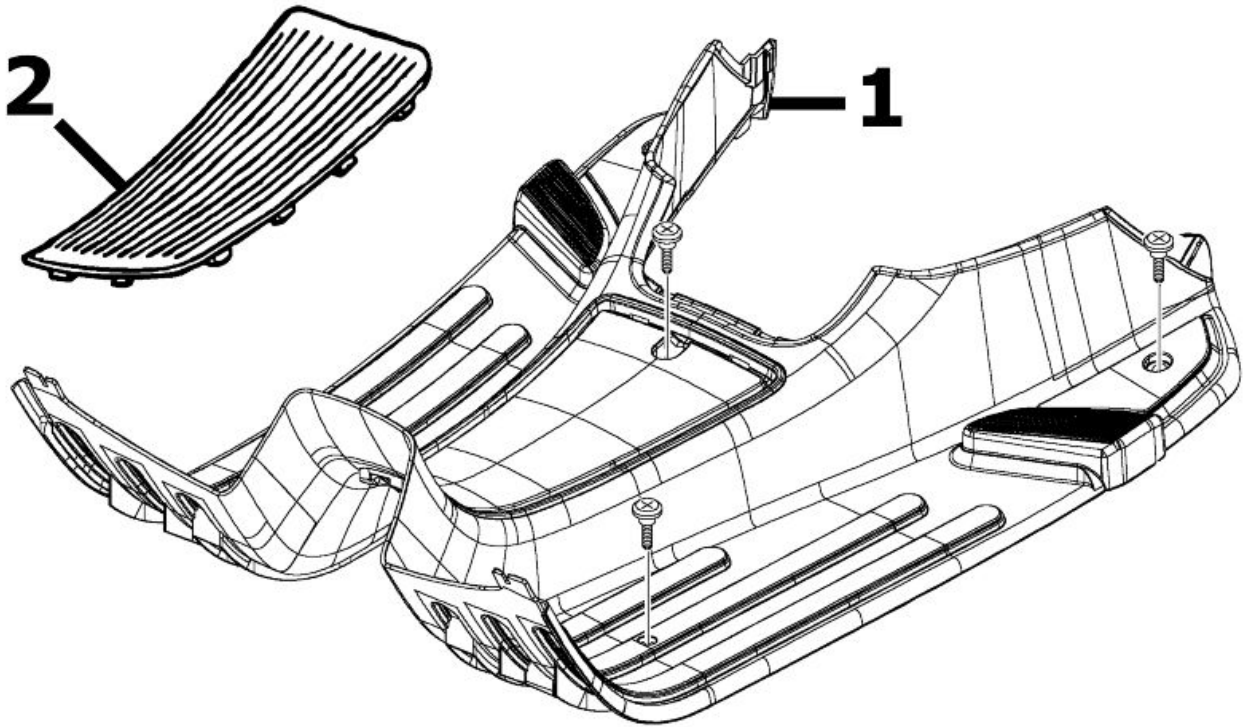**FOOTREST**

|   | <b>Code</b> | <b>Action</b>                            | <b>Duration</b> |
|---|-------------|--|-----------------|
| 1 | 004178      | Footrest - Replacement                   |                 |
| 2 | 004078      | Front/rear footrest rubber - Replacement |                 |


Rear cover

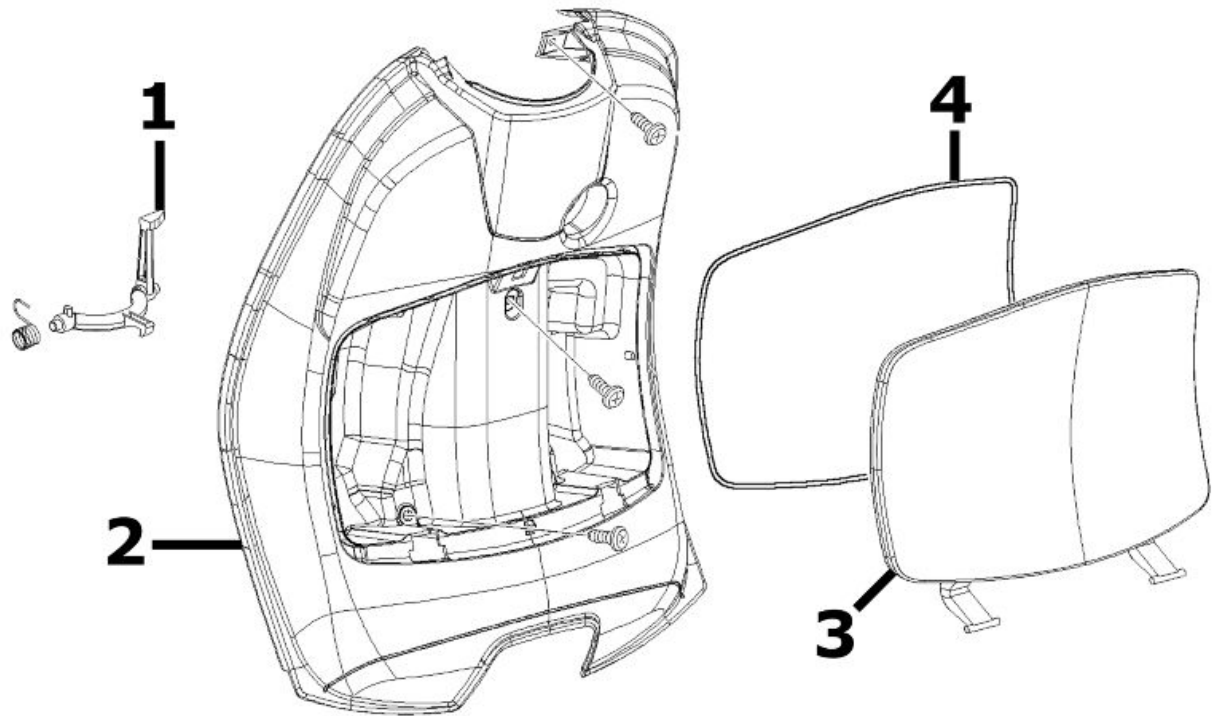

**SHIELD BACK PLATE**

|   | <b>Code</b> | <b>Action</b>                                | <b>Duration</b> |
|---|-------------|--|-----------------|
| 1 | 004174      | Trunk levers - Replacement                   |                 |
| 2 | 004065      | Legshield, rear part - Removal and refitting |                 |
| 3 | 004081      | Glove box door - Replacement                 |                 |
| 4 | 004082      | Top box gasket - Replacement                 |                 |


## Underseat compartment

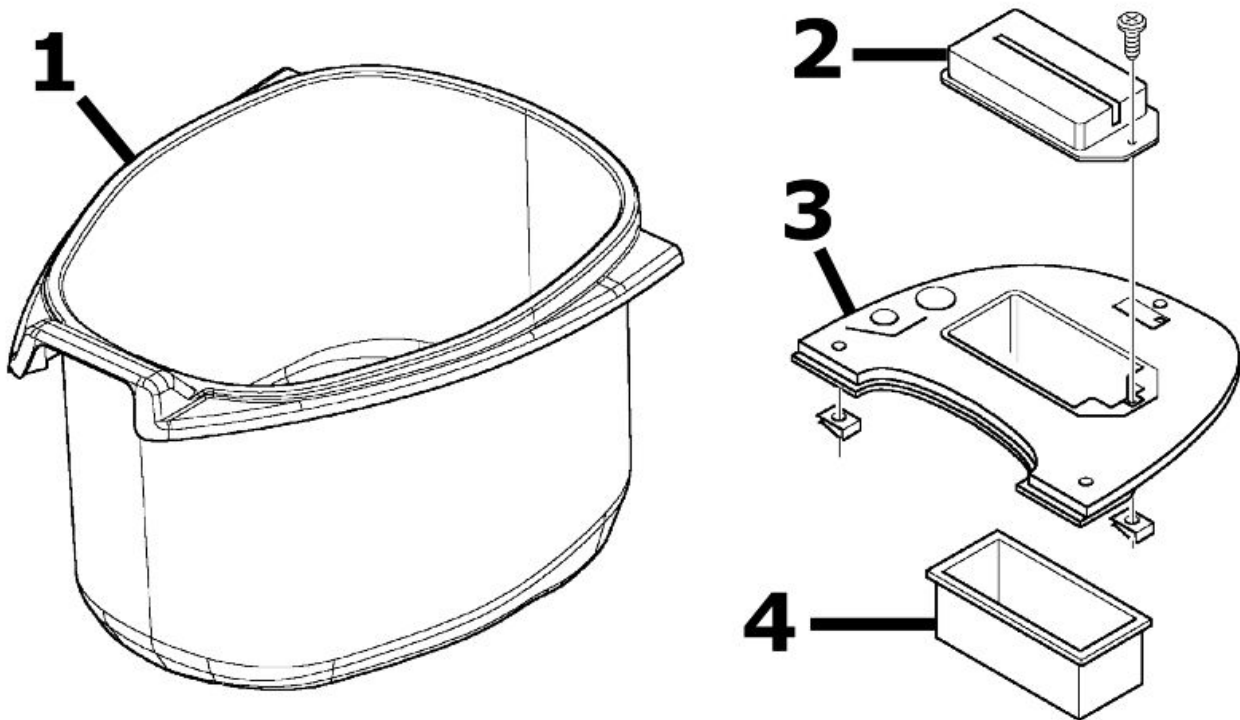

### HELMET COMPARTMENT


|   | Code   | Action                            | Duration |
|---|--------|-----------------------------------|----------|
| 1 | 004016 | Helmet compartment - Replacement  |          |
| 2 | 005046 | Battery cover - change            |          |
| 3 | 004011 | Central frame cover - Replacement |          |
| 4 | 004071 | Battery compartment - replacement |          |

Plate holder

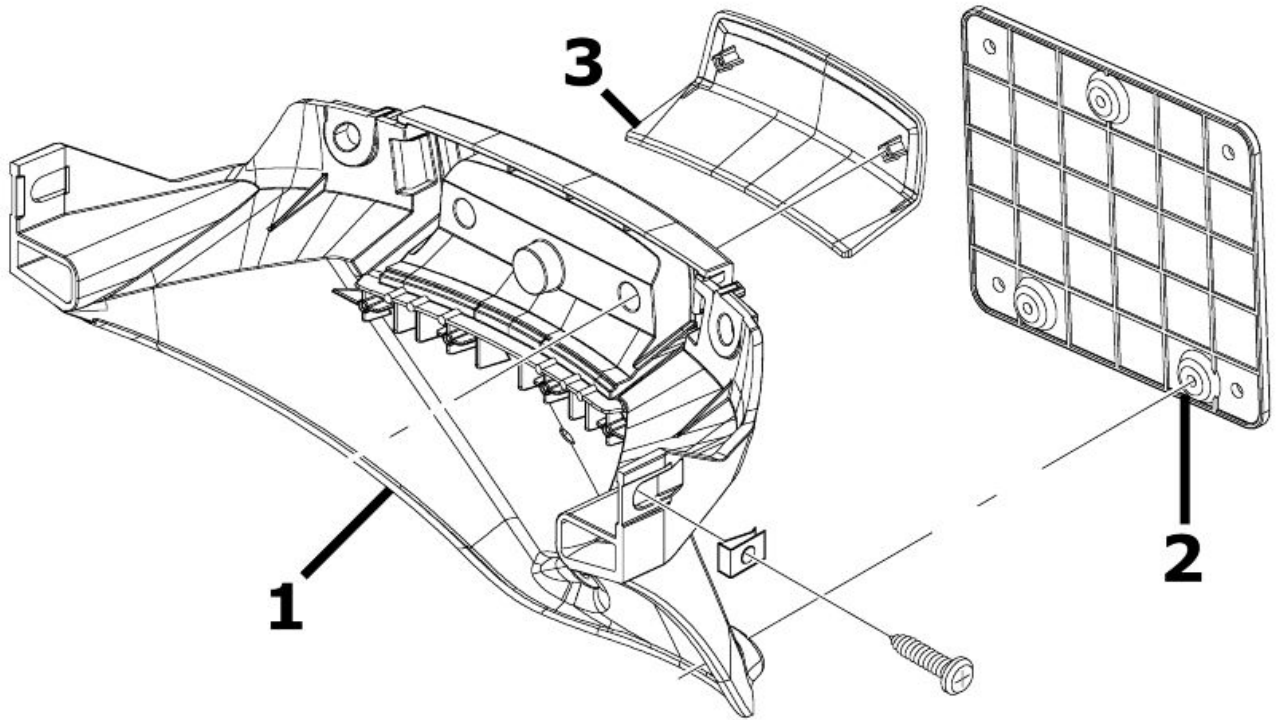

**LICENSE PLATE HOLDER**


|   | <b>Code</b> | <b>Action</b>                              | <b>Duration</b> |
|---|-------------|--|-----------------|
| 1 | 004136      | License plate holder support - Replacement |                 |
| 2 | 005048      | Licence plate holder - Replacement         |                 |
| 3 | 005032      | number plate light glass - Replacement     |                 |

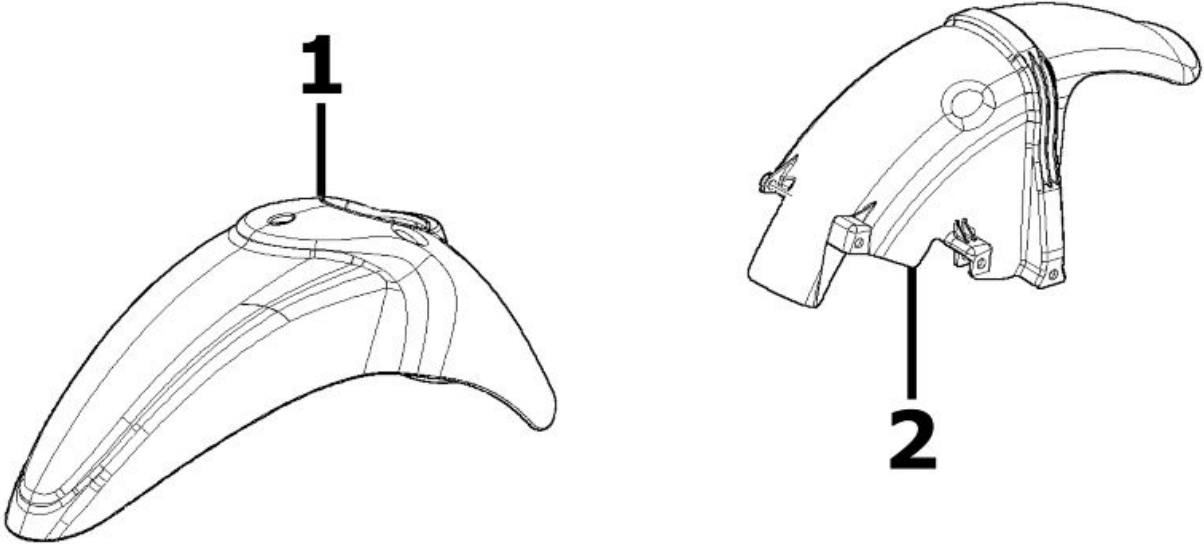**Mudguard****MUDGUARDS**

|   | <b>Code</b> | <b>Action</b>                | <b>Duration</b> |
|---|-------------|------------------------------|-----------------|
| 1 | 004002      | Front mudguard - Replacement |                 |
| 2 | 004009      | Rear mudguard - Replacement  |                 |




Fuel tank

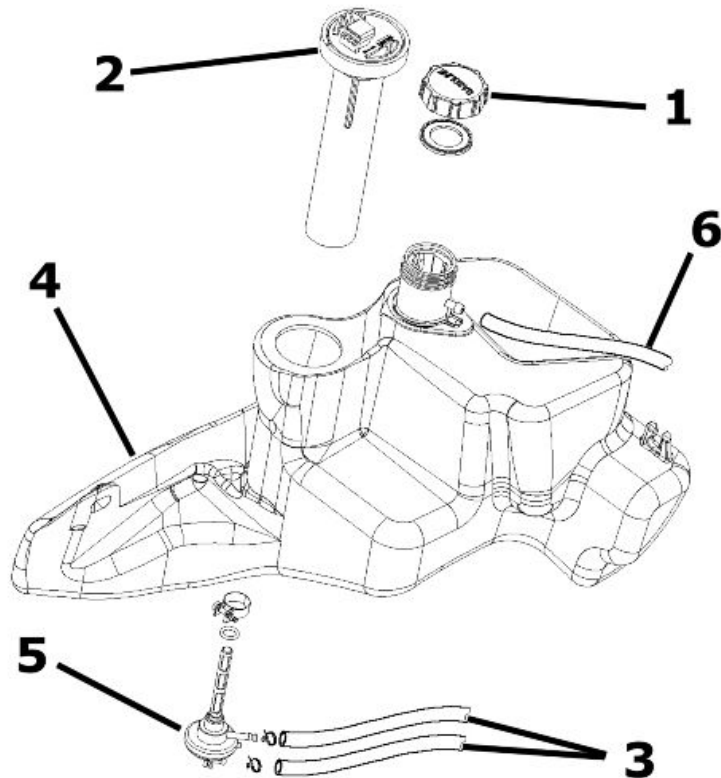

**FUEL TANK**

|   | Code   | Action                              | Duration |
|---|--------|-------------------------------------|----------|
| 1 | 004168 | Fuel tank cap - Replacement         |          |
| 2 | 005010 | Tank float - Replacement            |          |
| 3 | 004112 | Cock-carburettor hose - Replacement |          |
| 4 | 004005 | Fuel tank - Replacement             |          |
| 5 | 004007 | Fuel valve - Replacement            |          |
| 6 | 004109 | Fuel tank breather - change         |          |


## Tank oil

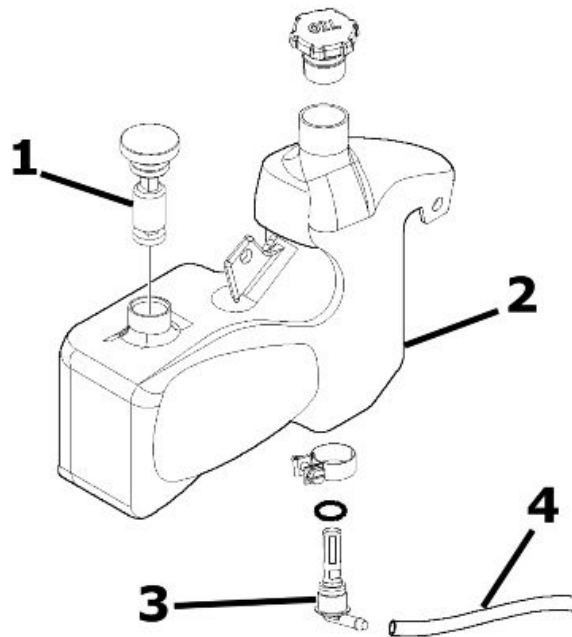

### OIL RESERVOIR

|   | Code   | Action                            | Duration |
|---|--------|-----------------------------------|----------|
| 1 | 005018 | Oil reservoir float - Replacement |          |
| 2 | 004017 | Oil reservoir - Replacement       |          |
| 3 | 004095 | Oil reservoir cock - Replacement  |          |
| 4 | 004091 | Oil reservoir hose - Replacement  |          |


## Rear shock-absorber

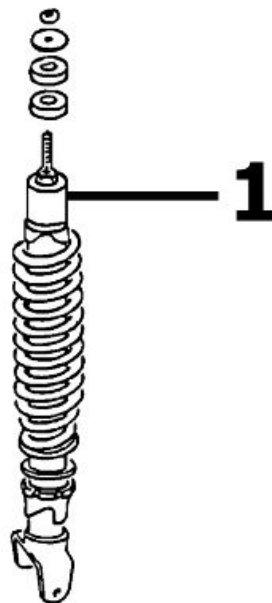

**REAR SHOCK ABSORBER**

|   | Code   | Action                                      | Duration |
|---|--------|---|----------|
| 1 | 003007 | Rear shock absorber - Removal and Refitting |          |


**Steering column bearings**

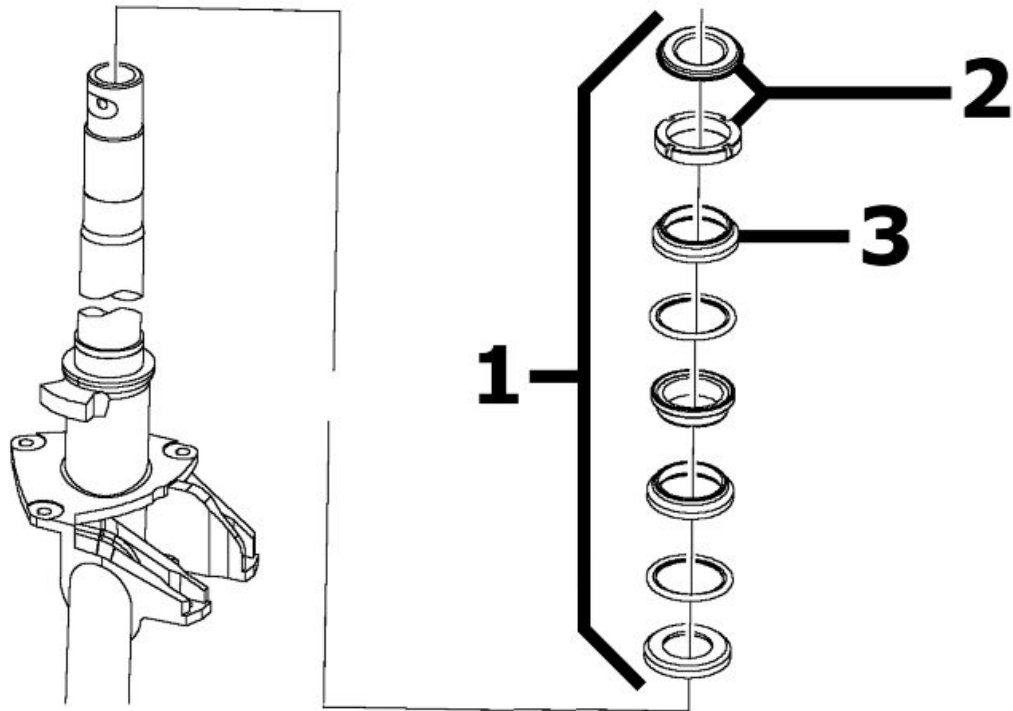

**STEERING FIFTH WHEELS**

|   | Code   | Action   | Duration |
|---|--------|--|----------|
| 1 | 003002 | Steering fifth wheels - Replacement                |          |
| 2 | 003073 | Steering clearance - Adjustment                    |          |
| 3 | 004119 | Bearing / upper steering fifth wheel - Replacement |          |


## Handlebar covers

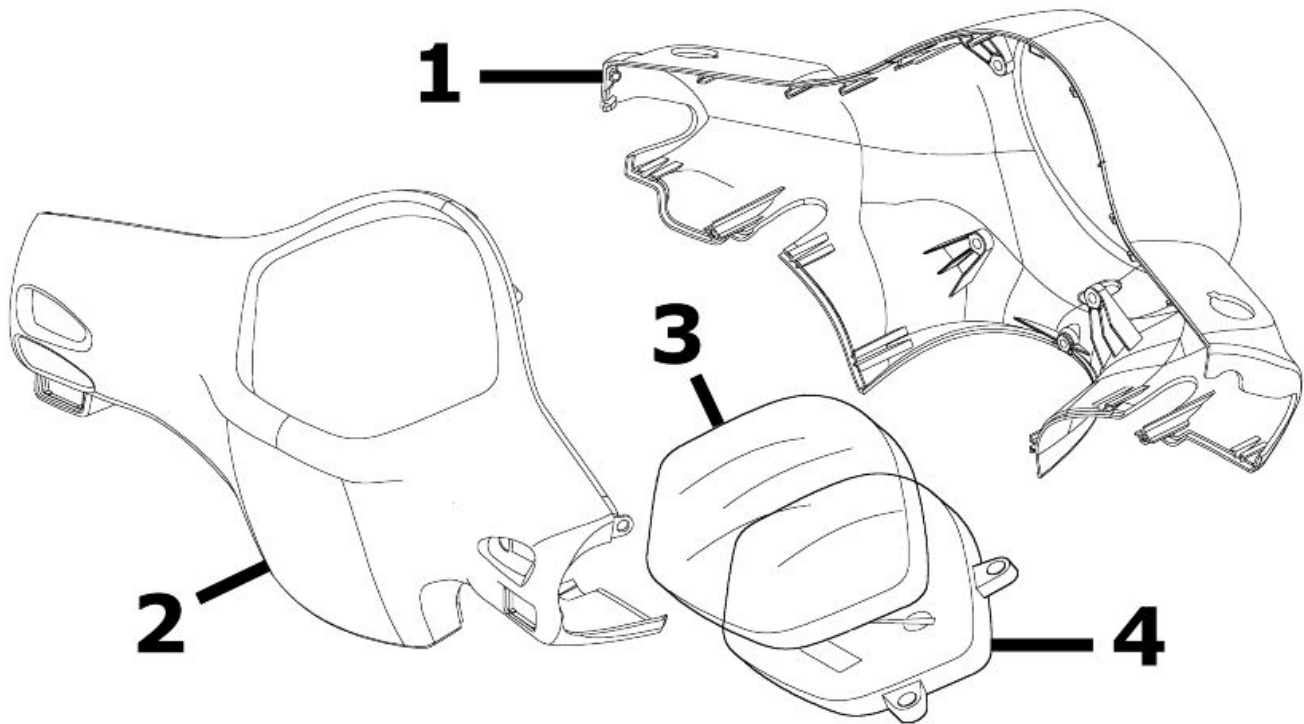

### TAVOLA COPRIMANUBRIO


|   | <b>Code</b> | <b>Action</b>                        | <b>Duration</b> |
|---|-------------|--------------------------------------|-----------------|
| 1 | 004018      | Front handlebar covers - Replacement |                 |
| 2 | 004019      | Rear handlebar covers - Replacement  |                 |
| 3 | 005078      | Odometer glass - Replacement         |                 |
| 4 | 005014      | Instrument panel - Replacement       |                 |

Handlebar components

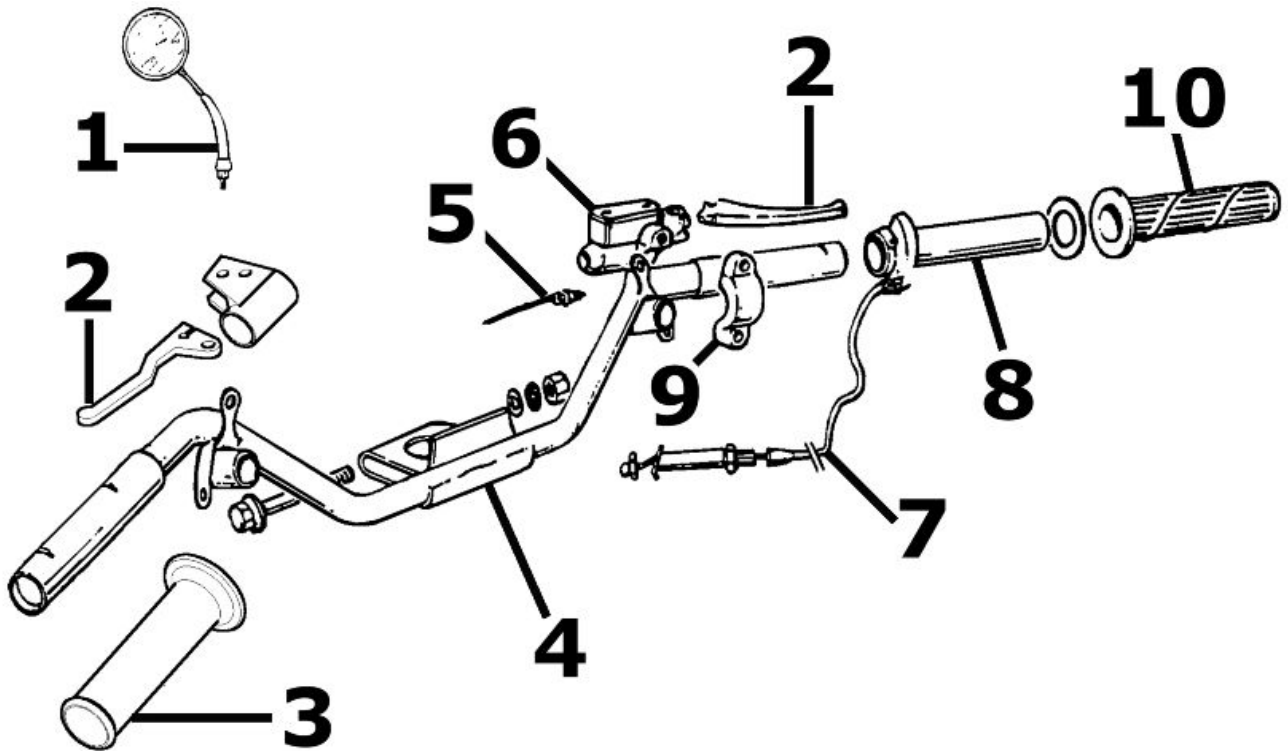


**HANDLEBAR COMPONENTS**

|    | Code   | Action  | Duration |
|----|--------|---|----------|
| 1  | 004066 | Driving mirror - Replacement                                  |          |
| 2  | 002037 | Brake or clutch lever - Replacement                           |          |
| 3  | 002071 | Left hand grip - Replacement                                  |          |
| 4  | 003001 | Handlebar - Replacement                                       |          |
| 5  | 005017 | Stop switch - Replacement                                     |          |
| 6  | 002024 | Front brake pump - Removal and Re-fitting                     |          |
| 7  | 002054 | Throttle or splitter transmission complete - Replacement      |          |
| 8  | 002060 | Complete throttle control - Replacement                       |          |
| 9  | 004162 | Mirror support and/or brake pump fitting U-bolt - Replacement |          |
| 10 | 002059 | Right hand grip - Replacement                                 |          |

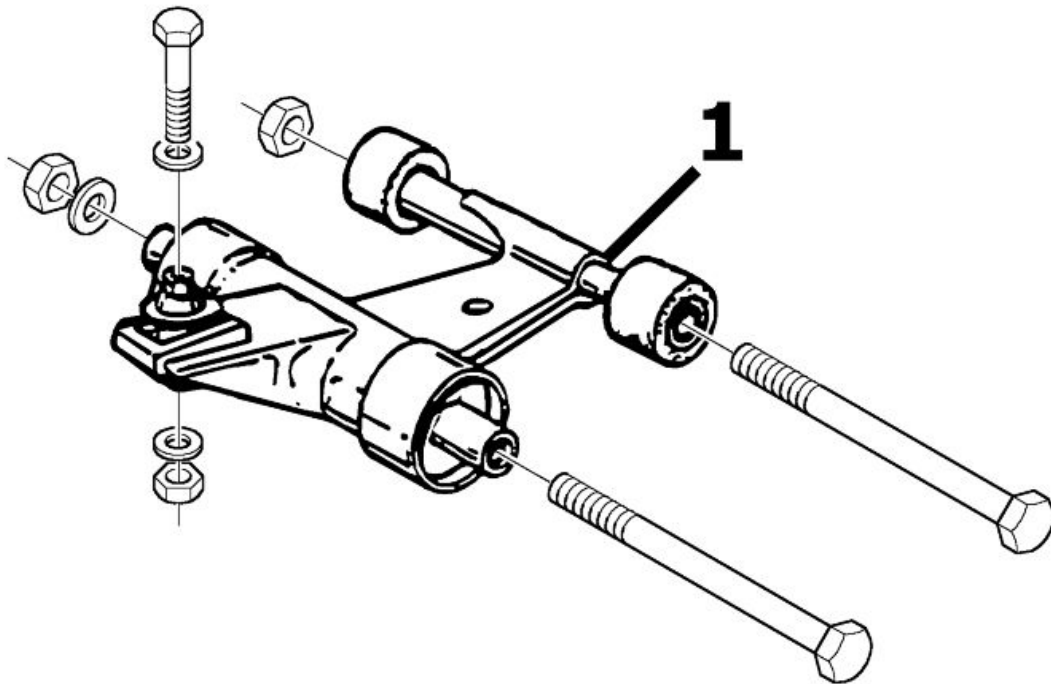**Swing-arm****SWINGING ARM**

|   | <b>Code</b> | <b>Action</b>                                      | <b>Duration</b> |
|---|-------------|--|-----------------|
| 1 | 001072      | Engine-frame connection swinging arm - Replacement |                 |


Seat

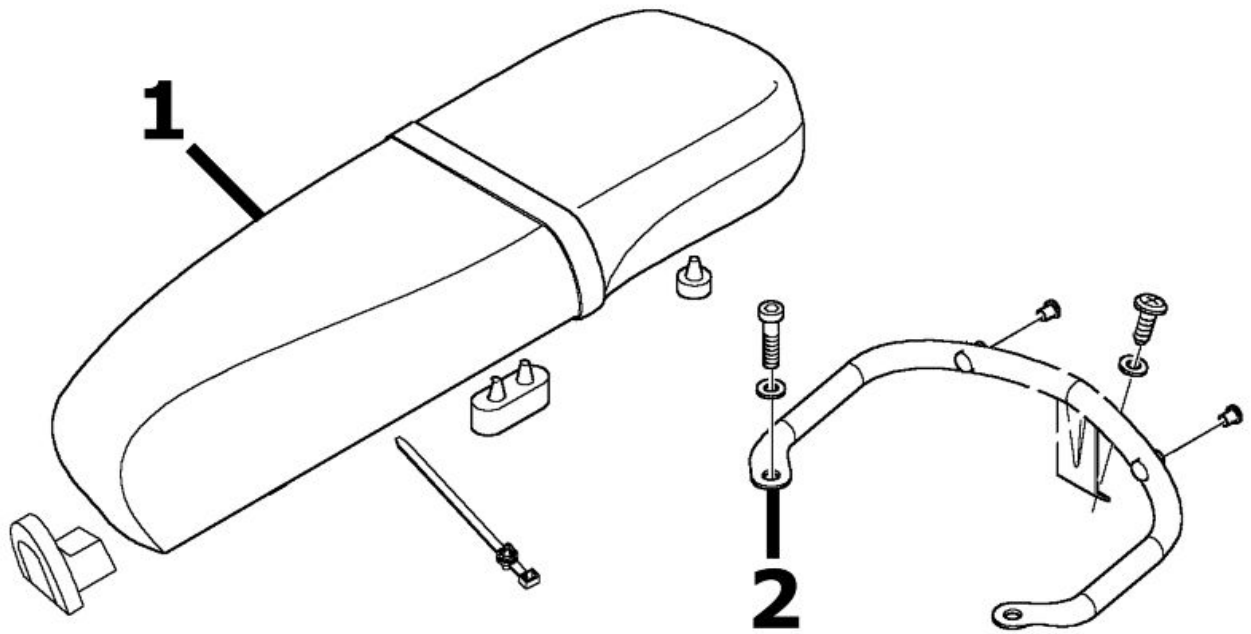

**SADDLE**

|   | Code   | Action                             | Duration |
|---|--------|------------------------------------|----------|
| 1 | 004003 | Saddle - Replacement               |          |
| 2 | 004131 | Luggage rack support - Replacement |          |


## Turn signal lights

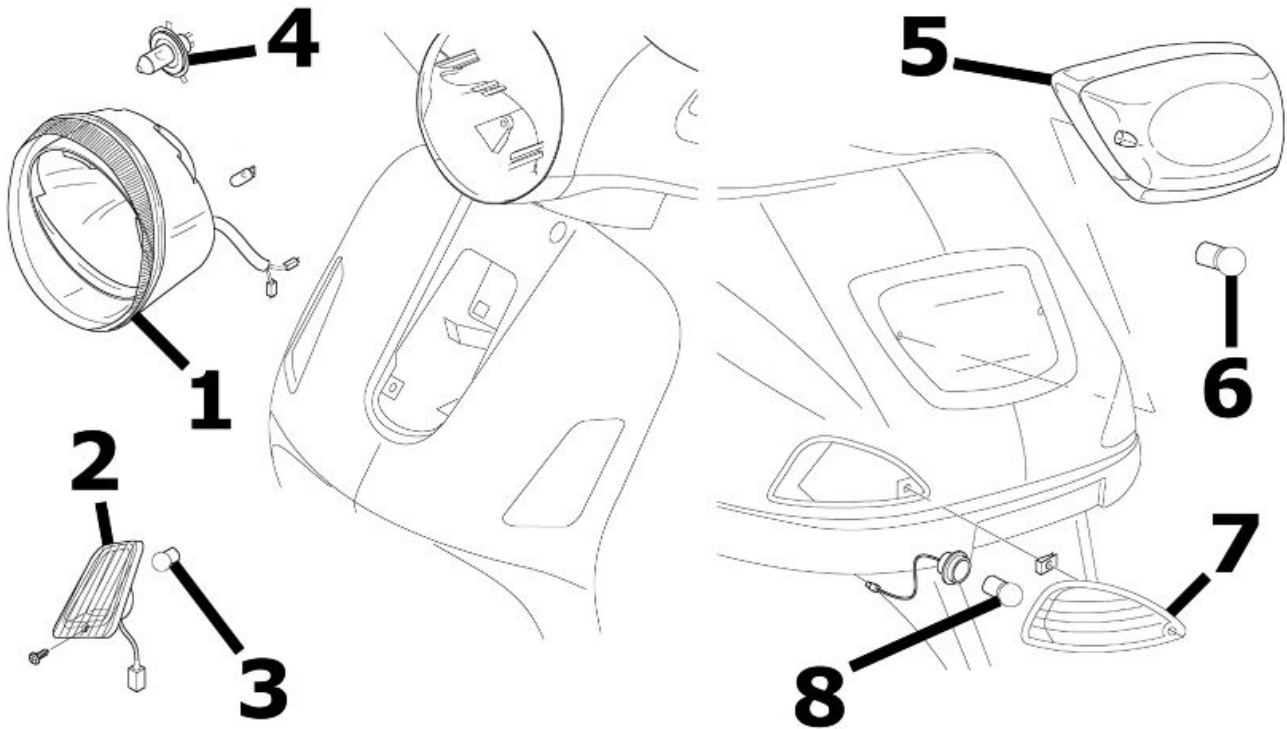**TURN INDICATOR LIGHTS**

|   | <b>Code</b> | <b>Action</b>                             | <b>Duration</b> |
|---|-------------|---|-----------------|
| 1 | 005002      | Front headlamp - change                   |                 |
| 2 | 005012      | Front turn indicator - Replacement        |                 |
| 3 | 005067      | Front turn indicator bulb - Replacement   |                 |
| 4 | 005008      | Headlight bulbs - Replacement             |                 |
| 5 | 005005      | Taillight - change                        |                 |
| 6 | 005066      | Rear light bulbs - Replacement            |                 |
| 7 | 005022      | Rear turning indicators - Replacement     |                 |
| 8 | 005068      | Rear turning indicator bulb - Replacement |                 |




Front wheel

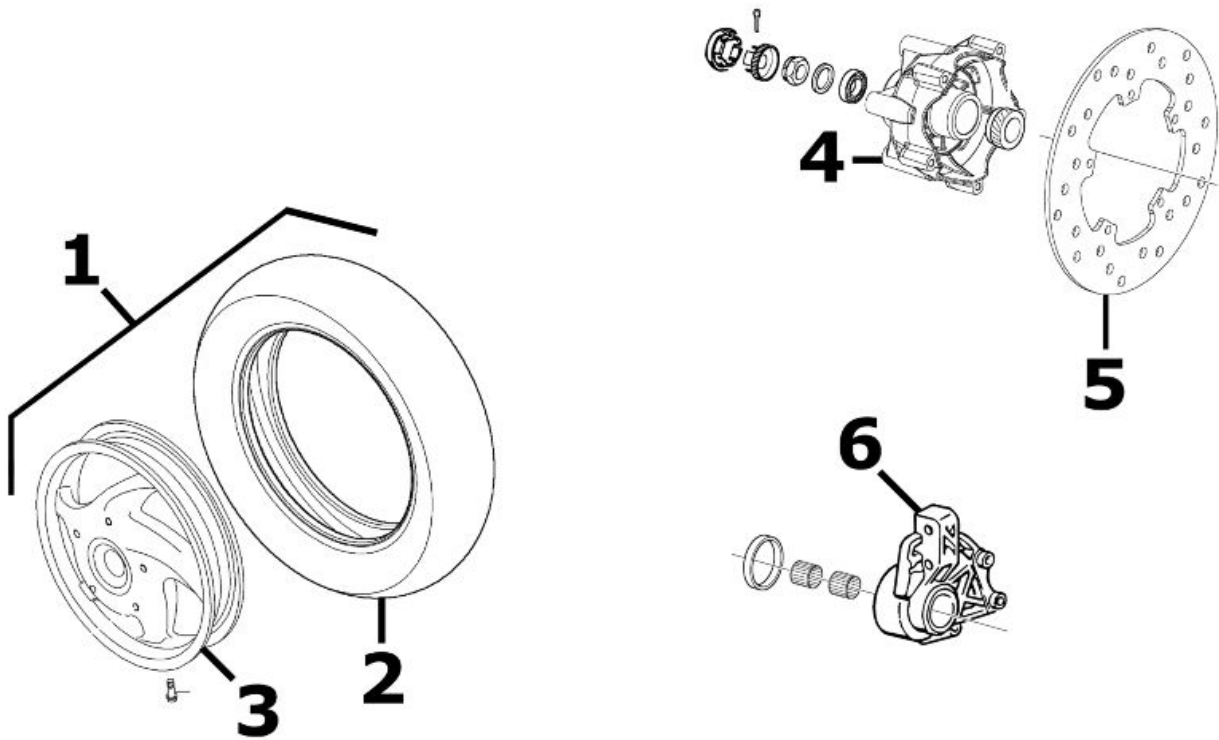

**FRONT WHEEL**


|   | Code   | Action                                | Duration |
|---|--------|---------------------------------------|----------|
| 1 | 004123 | Front wheel - Replacement             |          |
| 2 | 003047 | Front tyre - Replacement              |          |
| 3 | 003037 | Front wheel rim - Replacement         |          |
| 4 | 003033 | Front wheel hub- Replacement          |          |
| 5 | 002041 | Front brake disc - Replacement        |          |
| 6 | 003034 | Front wheel hub bearing - Replacement |          |

Rear wheel

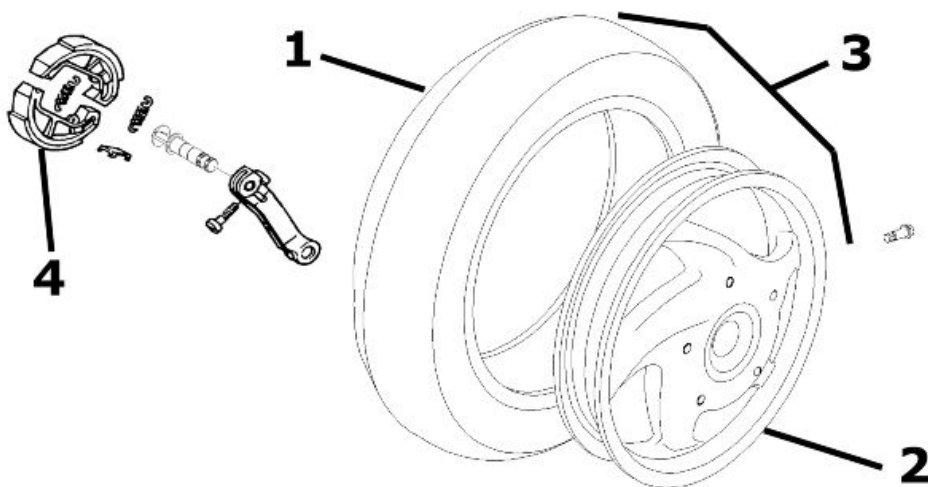


**REAR WHEEL**

|   | Code   | Action                                 | Duration |
|---|--------|--|----------|
| 1 | 004126 | Rear wheel tyre - Replacement          |          |
| 2 | 001071 | Rear wheel rim - Removal and Refitting |          |
| 3 | 001016 | Rear wheel - Replacement               |          |
| 4 | 002002 | Rear brake pads/shoes - Repl.          |          |

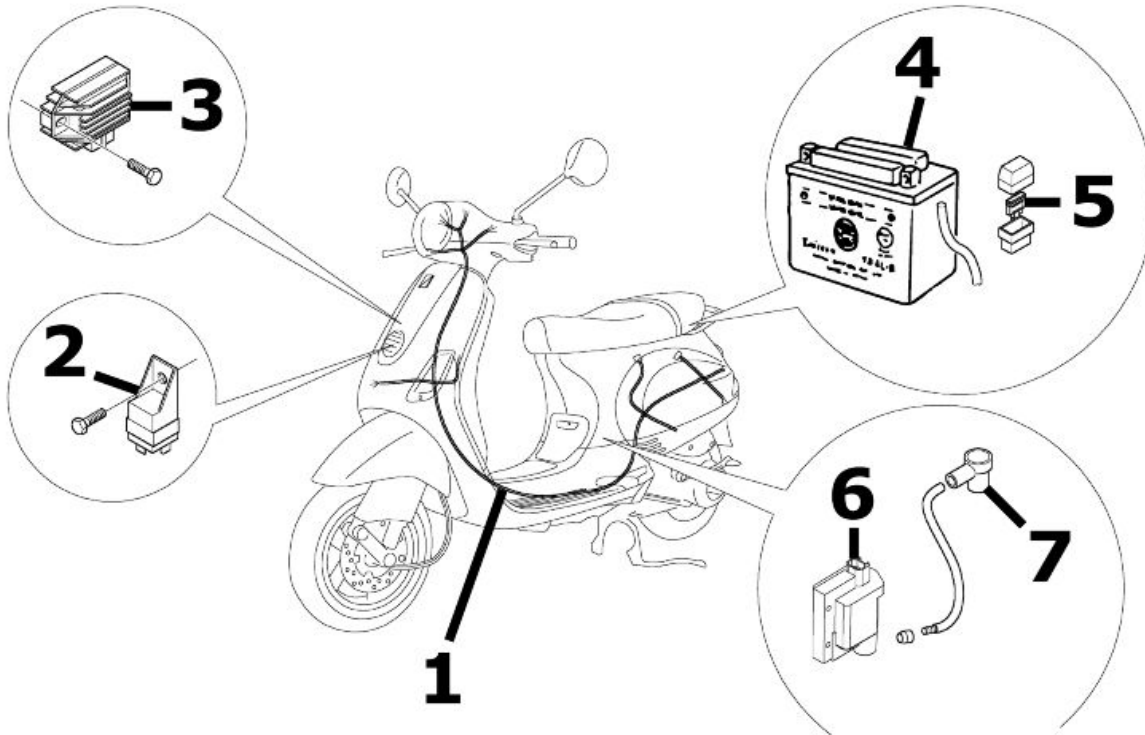**Electric devices****ELECTRIC COMPONENTS**

|   | Code   | Action                                       | Duration |
|---|--------|--|----------|
| 1 | 005001 | Electrical system - Replacement              |          |
| 2 | 005011 | Start-up remote control switch - Replacement |          |
| 3 | 005009 | Voltage regulator - Replacement              |          |
| 4 | 005007 | Battery - change                             |          |
| 5 | 005052 | Fuse (1) - Replacement                       |          |
| 6 | 001023 | Control unit - Replacement                   |          |
| 7 | 001094 | Spark plug cap - Replacement                 |          |


Electronic controls

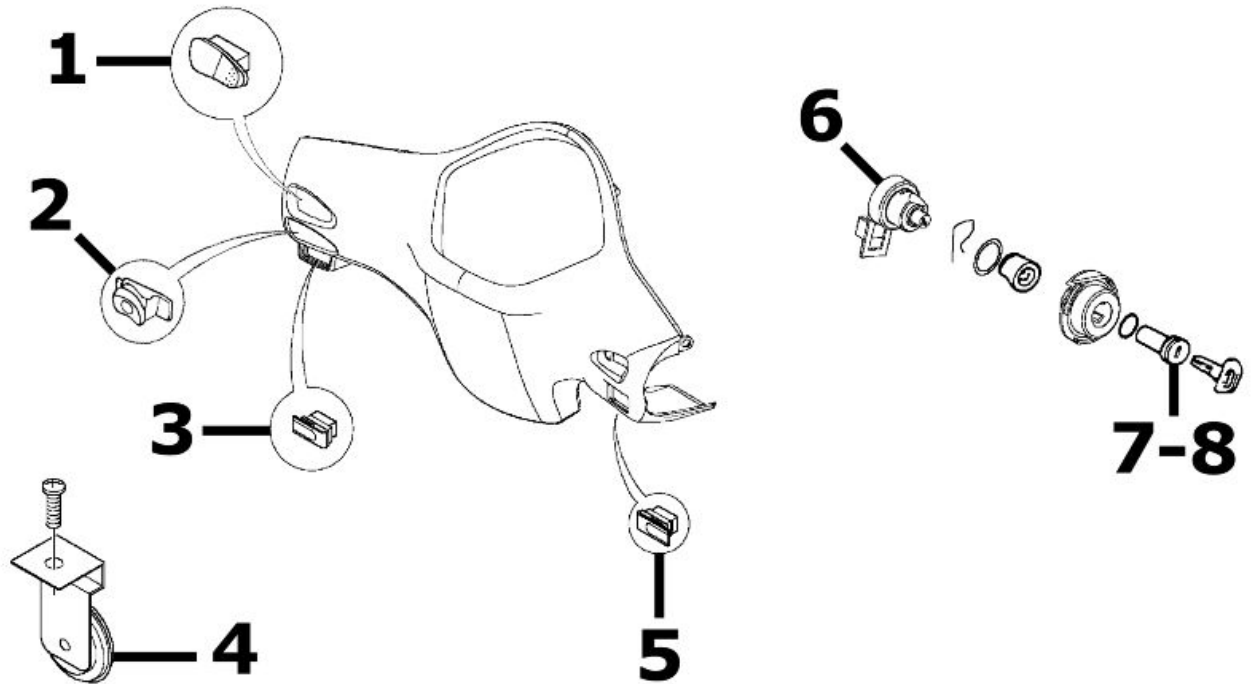

**ELECTRIC CONTROLS**

|   | Code   | Action  | Duration |
|---|--------|---|----------|
| 1 | 005039 | Lights switch - Replacement                     |          |
| 2 | 005006 | Light or turning indicator switch - Replacement |          |
| 3 | 005040 | Horn button - Replacement                       |          |
| 4 | 005003 | Horn - Replacement                              |          |
| 5 | 005041 | Starter button - Replacement                    |          |
| 6 | 005016 | Key switch - Replacement                        |          |
| 7 | 004096 | Lock series - Replacement                       |          |
| 8 | 004010 | Anti-theft lock - Replacement                   |          |


## Transmissions

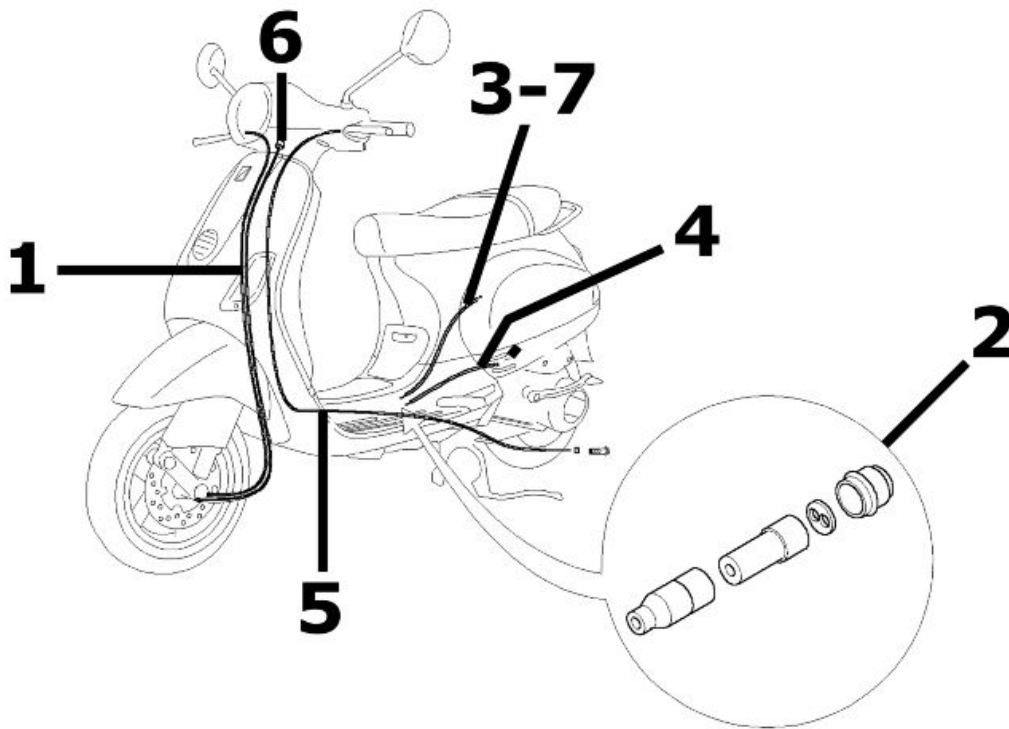

### TRANSMISSION

|   | Code   | Action   | Duration |
|---|--------|--|----------|
| 1 | 002051 | Odometer transmission assembly - Replacement               |          |
| 2 | 002012 | Splitter - Replacement                                     |          |
| 3 | 002057 | Carburettor / splitter transmission complete - Replacement |          |
| 4 | 002058 | Mix / splitter transmission complete - Replacement         |          |
| 5 | 002053 | Rear brake transmission complete - Replacement             |          |
| 6 | 002049 | Odometer cable - Replacement                               |          |
| 7 | 003061 | Accelerator transmission - adjust                          |          |


**Brake callipers**

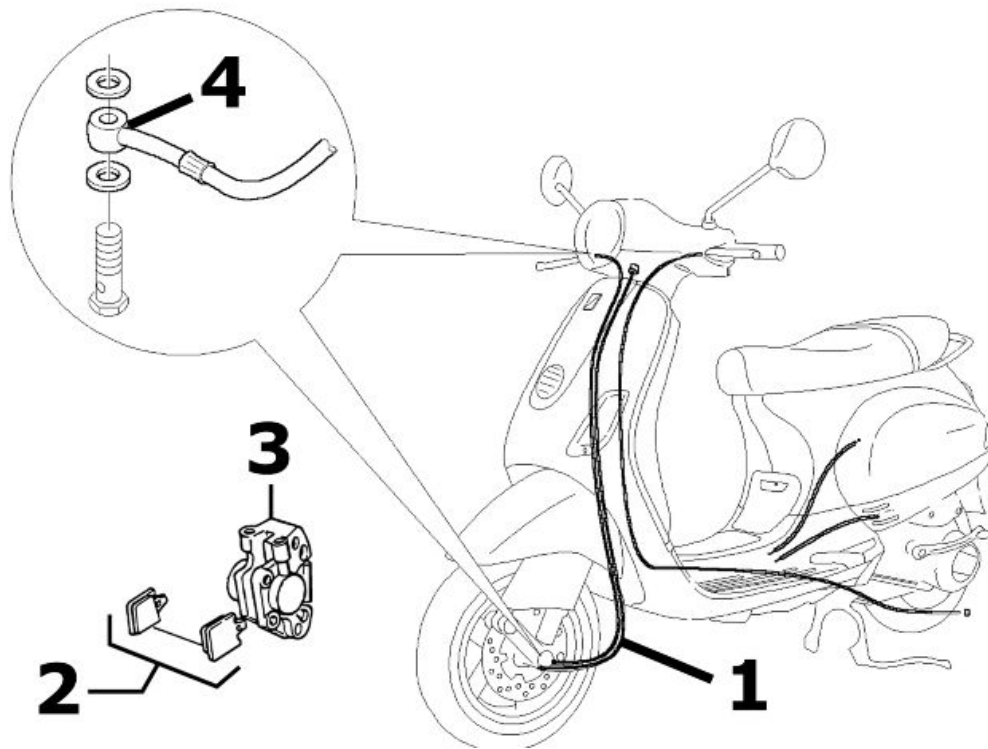

**CALLIPER**

|   | <b>Code</b> | <b>Action</b>  | <b>Duration</b> |
|---|-------------|--|-----------------|
| 1 | 002021      | Front brake hose - Remov. and Refitt.                |                 |
| 2 | 002007      | Front brake shoes/pads - Remov. and Refitt           |                 |
| 3 | 002039      | Front brake calliper - Removal and Refitting         |                 |
| 4 | 002047      | Front brake fluid and air bleed system - Replacement |                 |


## Front suspension

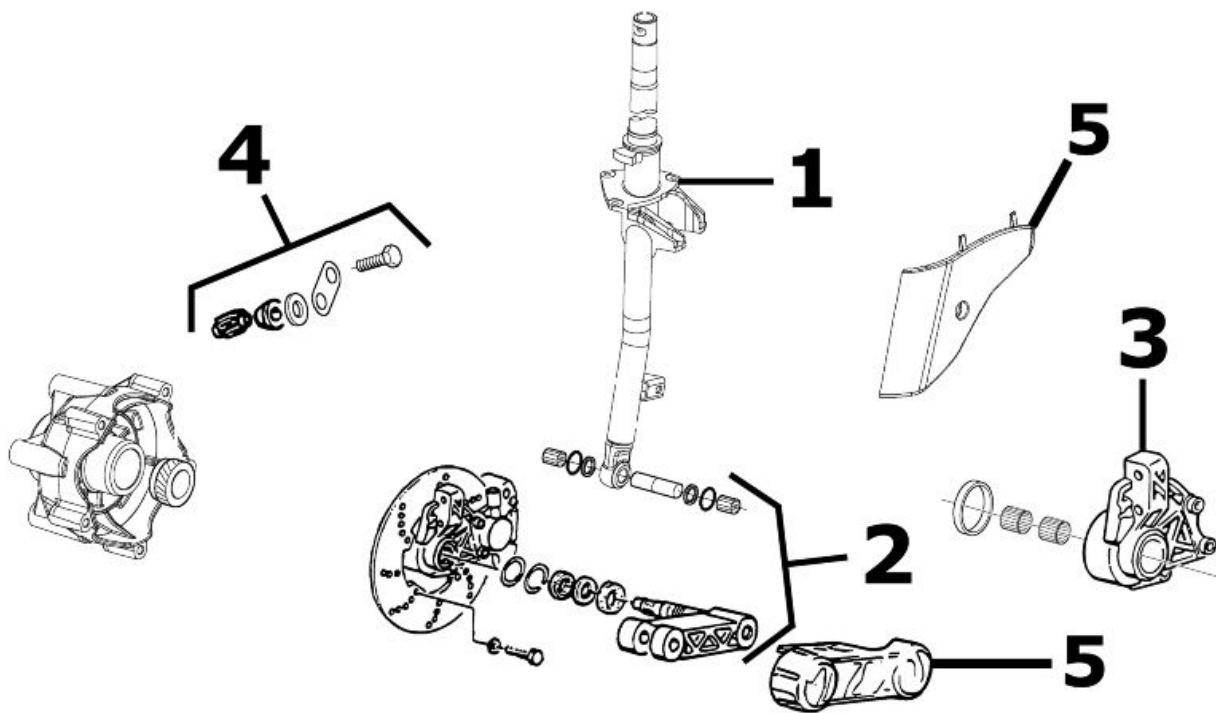

### FRONT SUSPENSION

|   | Code   | Action  | Duration |
|---|--------|---|----------|
| 1 | 003045 | Steering tube - Replacement                             |          |
| 2 | 003010 | Front suspension - Service                              |          |
| 3 | 003035 | Shock absorber support and brake calliper - Replacement |          |
| 4 | 001064 | Odometer reel - Replacement                             |          |
| 5 | 003044 | Shock absorber cover - Replacement                      |          |

Secondary air box

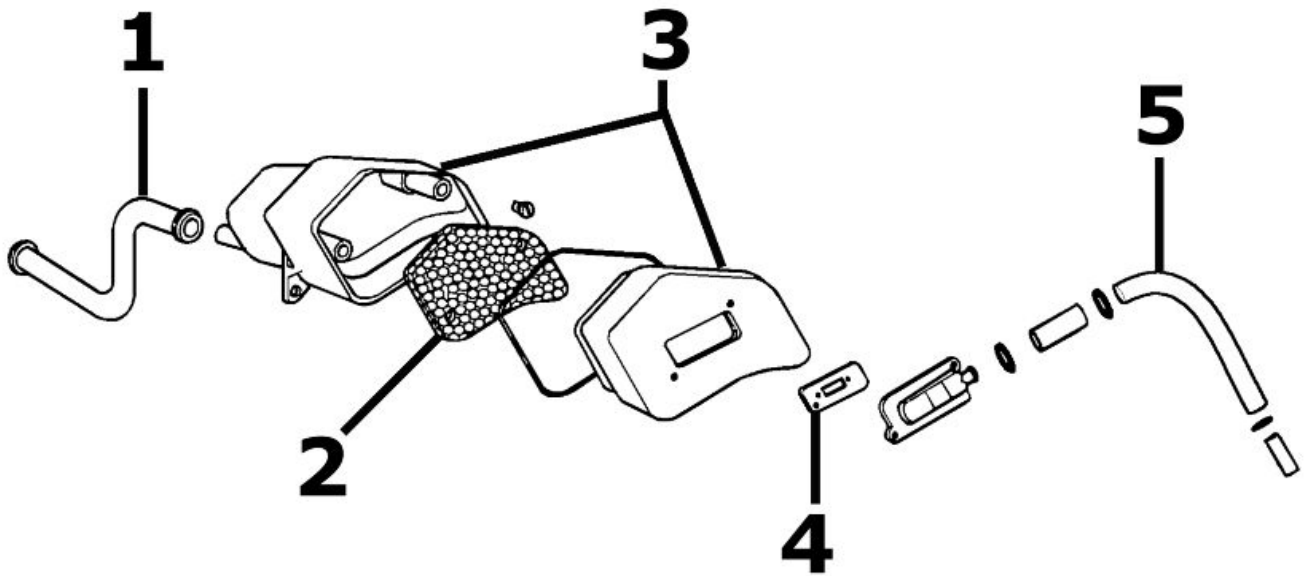

**SECONDARY AIR HOUSING**

|   | Code   | Action   | Duration |
|---|--------|--|----------|
| 1 | 001164 | Crankcase secondary air connection - Replacement |          |
| 2 | 001161 | Secondary air filter - Replacement / Cleaning    |          |
| 3 | 001162 | Secondary air housing - Replacement              |          |
| 4 | 001163 | Muffler secondary air connection - Replacement   |          |
| 5 | 001165 | Secondary air reed - Replacement                 |          |

## **A**

Air filter: 33, 116

## **B**

Battery: 42, 48, 54, 55

Brake: 108–112, 157

## **C**

Carburettor: 12, 30, 135

## **E**

Engine stop:

## **F**

Fuel: 41, 89, 145

## **H**

Headlight: 36, 115

Horn:

Hub oil: 32

## **I**

Identification: 8

Instrument panel: 114

## **M**

Maintenance: 7, 28

## **S**

Saddle:

Shock absorbers: 105

Spark plug: 31

Stand:

Start-up:

## **T**

Tank: 145, 146

Transmission: 10, 41, 61, 132

Turn indicators:

Tyres: 11